


Salsa swing seat Stock number: 82089611

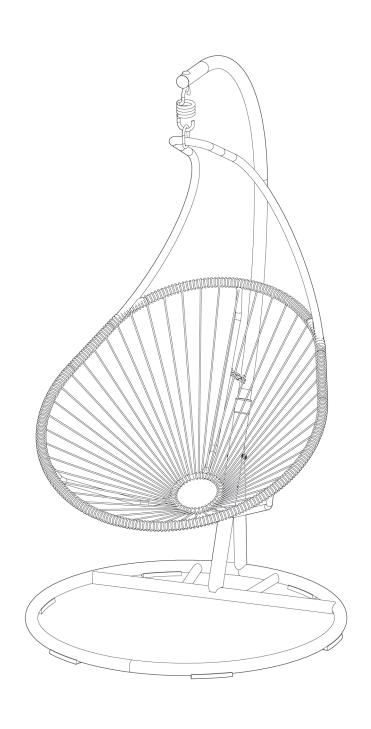

H190 W122.5 D104 cm

Thank you for purchasing the salsa swing. Please read the instructions and warnings carefully before use, to ensure re safe and satisfactory operation of this product.

At John Lewis, we are committed to making great products possible.


From our outdoor furniture Design Team, to our Buyers, we work together to bring great design to life.

Our expert Product Technologists work collaboratively with our buyers and suppliers to assure the legality, safety and quality of the product we sell.

We are all committed to designing and developing products to the highest industry standards.

We hope you are happy with your product and welcome any feedback or comments you may have.

The John Lewis Team

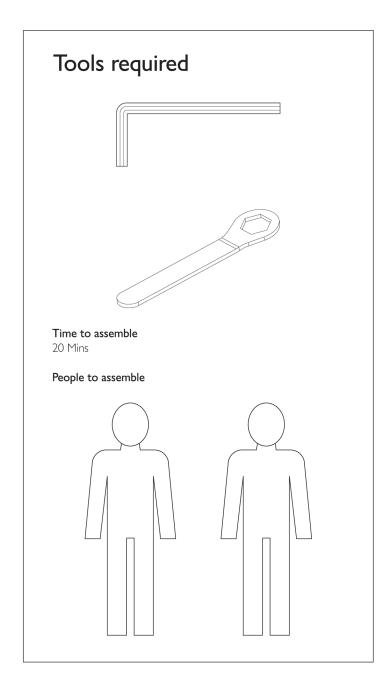

Important safety information

Warnings


- ⚠ The product should only be used on firm, level ground.
- ⚠ Keep small parts out of reach of children.
- ⚠ Ensure the product is fully assembled as illustrated before use.


Do's


- ✓ Check the pack and make sure you have all the parts listed.
- ✓ Check all screws or bolts are tightened and inspect regularly.
- ✓ Make sure the legs remain in contact with the ground at all times.


Don'ts


- ✗ Do not over tighten screws or bolts.
- X Do not stand on the product.
- ✗ Do not use power tools to construct as overtightening and panel failure may occur.

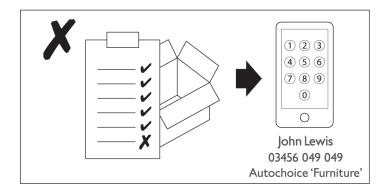


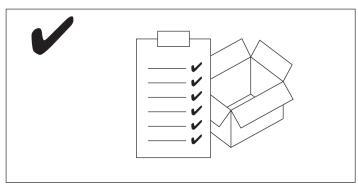

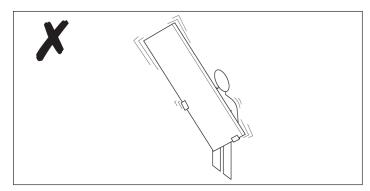


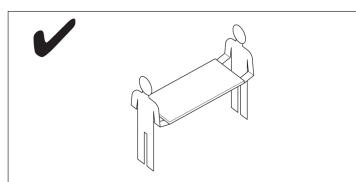

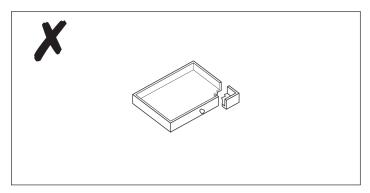

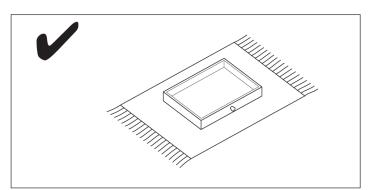

Your swing

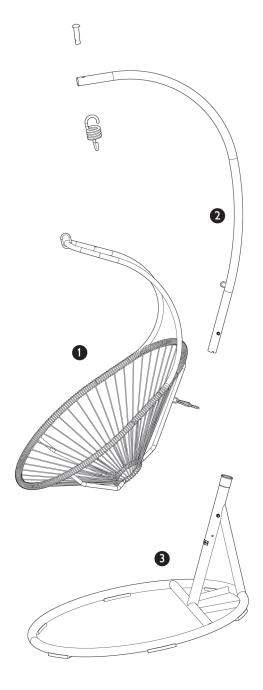


Ref	Description	Dimensions	Qty
0	Seat Base	1276x950x711mm	1
2	frame	1630x1073x42mm	1
3	Leg frame	1040×1040×601mm	1

Internal dimensions Stock number: 82089611

Swing overall size: H190 W122.5 D104 cm

Fixtures and fittings

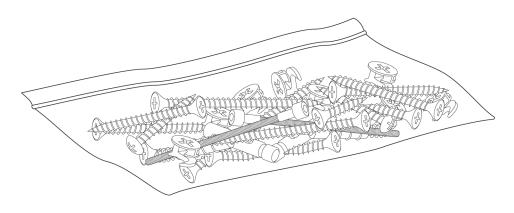

Fixtures and fittings Supplied(actual size)					mm 0 10 20 30 40 50 60 70
	Ref	Description	Dimensions	Qty	
	A	Screw	8mmx60mm	1	
	В	Screw	8mm×16mm	1	0

Fixtures and fittings supplied (not actual size)

	,			
Ref	Description	Dimensions	Qty	
9	Washer	15.8×1mm	1	
•	Washer	15.8×1.5mm	2	
(3	Nut	15.8x4mm	1	
•	Сар	16.5×7mm	2	
G	Screw cover	17.5x18mm	1	
•	Pin	26x67mm	1	
0	Hook	39×103mm	1	
0	Allen Key		1	
•	Wrench		1	


Product assembly

Salsa swing 82089611

Step 1 Parts, fittings and tools






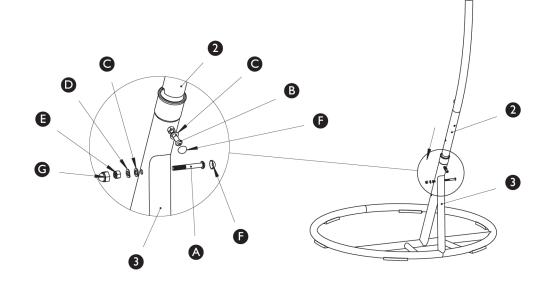

Step 2
Parts, fittings and tools



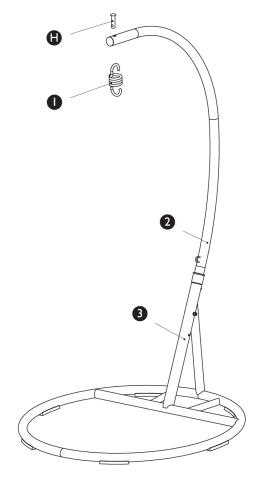


Step 3 Parts, fittings and tools









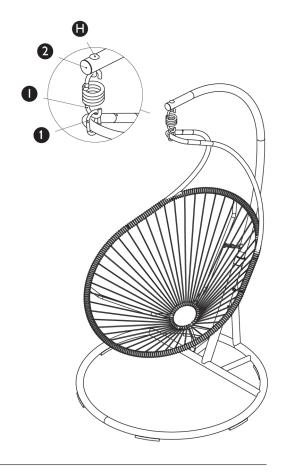

Step 4 Final assembly Parts, fittings and tools



Connect the seat part with frame by the safety chain, make sure two hooks of the chain are attached to the seat base and supporting rod. Now the chair is ready to use.

Care guide

Care and Maintenance

Do not use a wire brush when removing dirt from this item as it may damage the paint leaving the surface open to corrosion.

To extend the product life and appearance it is advisable to store the furniture in a cool dry place over winter. Ensure that the furniture is clean and completely dry before putting in to storage. Do NOT enclose the product in a plastic or other non-permeable material as this creates moisture.

Safety Instructions

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

This furniture has been designed for domestic use only.

Do not use the swing as a ladder.

Ensure the swing is always placed firmly on a solid level surface.

PLEASE RETAIN THIS INFORMATION LEAFLET FOR FUTURE REFERENCE