Product information

- Indoor use only
- Non-dimmable
- Replacement bulbs should be the same type and rating, available from John Lewis Partners or other established brands
- Clean the fitting with a soft dry cloth. Do not use abrasive chemical cleaners as this will damage the finish
- Glass parts Remove and wash in warm water or use a damp cloth. Do not use abrasive materials as these will damage the finish. Take care when handling glass parts to avoid damage or injury

Aftercare and Troubleshooting

You've switched on the light, but it's not working:

- 1. Check your power supply is switched on
- 2. Turn off the light and check that the bulb is inserted correctly
- 3. Check the bulb is still in working order

If there are technical issues with this product that you can't solve, please contact your nearest John Lewis & Partners shop or call Technical Support on 03301 230106.

Specification

Max power: 1 x 6W Recommended bulb:

6W LED E14 Golf bulb for maximum brightness.

Lower wattages are also suitable. Rated input: 220 –240V, 50Hz

Bulbs not included IP rating: 20 Weight: 8.9kg

5-year guarantee

At John Lewis & Partners we test every light to high quality standards. That means we can offer you a 5-year guarantee.

Recycling

This symbol indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis & Partners do not operate instore take back, but as members of the Distributor Take Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

John Lewis plc SW1V 2QQ johnlewis.com








24/07/2024

Made in China

Please retain these instructions for future reference.



CARTMEL FLOOR LAMP USER GUIDE

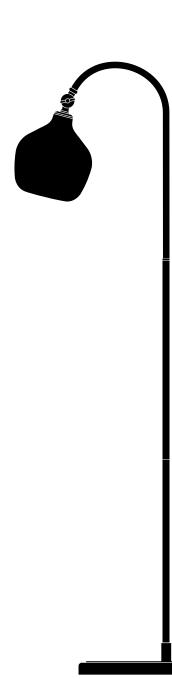



Product Code: 12000128 12000129

Getting started

Thank you for purchasing this John Lewis & Partners product. For your safety, and to make sure everything is working properly, please read the instructions carefully before use.

Warnings

This is a Class II product and must NOT be earthed.

Please read these instructions carefully before commencing any work. Your lamp has been packaged as separate parts to prevent damage during transit. When manoeuvring or assembling this product, it must be lifted from the bottom section.

The lamp must be protected by a 3 amp fuse in the mains plug. If you are in any doubt, please consult a qualified electrician. For your safety, always switch off the supply before cleaning or changing the bulb. If the mains cable becomes damaged it must only be replaced by a technically competent, qualified person.

Always use correct type and wattage bulb. Never exceed the wattage stated.

Parts list

Description	Image	Quantity
Light fitting (3 sections + base)		x1
Shade		x1
Steel plate		x1
Lampholder cup		x 1
Hex key		x1
Extra grub screws		x 2
Base pad		×1

Product assembly

Step 1

Carefully unpack the carton, making sure all the parts are present before assembly.

Step 2

Screw tube (B) onto tube (A) in a clockwise direction. Take care not to trap the cable or cross the thread. Then screw tube (C) on to tube (B) in the same way.

Step 3

Gently pull any excess cable through from under the base (D) and then out through the side of the base.

Step 4

Slot the assembly into the base and fix the stem to the base using the 2 grub screws and hex key (E) provided.

Step 5

Fit the base pad (F) to the base and stand the product upright. Check the tightness of the joints by hand. Make sure that the shade is facing forwards over the base of the lamp.

Step 6

Attach the glass shade (G) by placing over the threaded lampholder. Support the shade with one hand and use the other to fit the steel plate (H) and secure in place with the lampholder cup (I). Do not overtighten.

Step 7

Fit the recommended bulb (J) as per the details overleaf.

Step 8

Unbundle the cable from the cable tie. Your floor lamp is now ready to use. Switch on using the floor switch.

NOTE: The angle of the light can be adjusted by loosening the adjustment key (K), changing the angle, and then re-tightening the key. Allow the shade to cool for 10 minutes prior to adjusting the shade.

