

JOHN
LEWIS
& PARTNERS

Portable Charcoal BBQ

Stock Number: 853 | 1502

Thank you for purchasing this barbecue. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product. Please keep these instructions for future reference.



Pre-assembly preparation


WARNING! FOR OUTDOOR USE ONLY

Please read these instructions carefully and ensure that your barbecue is properly installed, assembled, maintained and serviced in accordance with these instructions.

Failure to follow these instructions may result in serious injury and/or damage to property.

If you have any questions concerning the assembly or operation of this barbecue, please contact your local John Lewis store.

Necessary Tools

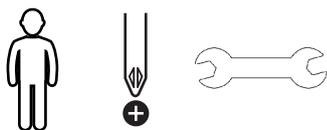

This product takes approximately **15 MINUTES** to assemble with **1 PERSON**. The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**. Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product. Read this leaflet in full before commencing assembly.



Carbon Monoxide Hazard
Using a barbecue inside can kill you, it gives off Carbon Monoxide, which has no odour. Never use a barbecue in enclosed spaces such as a tent, home/building, vehicle or garage.

Contents

- 3 Important safety instructions
- 4 Lighting your charcoal barbecue
- 4 Care and maintenance
- 5 Exploded Diagram
- 6 Parts List
- 7 Assembly steps

Barbecue Inspiration

For recipes to raise your grill game for an even better barbecuing experience, please visit the link below or scan the QR code.


waitrose.com/ecom/recipes/meals-dishes/barbecue



Important safety instructions

Warnings

- Do not use this barbecue without first reading the operating instructions carefully.
- This barbecue should not be left unattended while in use.
- **WARNING!** This barbecue will become very hot, do not move during operation.
- Do not use indoors.
- **WARNING!** Do not use spirit or petrol for lighting or re-lighting the barbecue! Use only firelighters complying to EN 1860-3!
- **WARNING!** Keep children and pets away.
- Do not use the barbecue in a confined and/or habitable space e.g. houses, tents, caravans, motor homes, boats. Danger of carbon monoxide poisoning fatality.

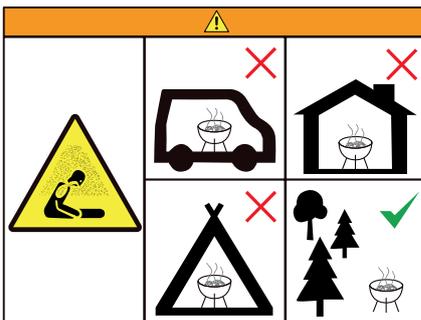

Location of your barbecue

- Improper assembly of the barbecue may be dangerous. Please follow all the assembly instructions carefully before lighting the barbecue. Altering the barbecue in any way from the manufacturer's instructions may be dangerous and will void all warranties.
- This barbecue is for outdoor use only. If used in enclosed spaces such as a building or garage toxic fumes will build up and may cause death or serious injury.
- Always use the barbecue in a well-ventilated area, but out of high winds.
- Position the barbecue so that winds do not carry hot ash onto combustible surfaces.
- Never use this barbecue on boats or other recreational vehicles.

Do's

- check the pack and make sure all the parts are listed
- check the screws or bolts are tightened and inspected regularly.
- check for damage before use
- Make sure the air vent is clean and clear before you light the barbecue.
- When lighting the barbecue ensure you do not have any loose clothing touching or near the coals.
- Always wear barbecue mitts and protective clothing when lighting the barbecue with a chimney starter or when adding more fuel to the barbecue.
- Ensure the barbecue is on a solid, flat and level non-combustible surface before lighting.
- Keep all combustible items and surfaces at least 60cm away from the barbecue at all times. This includes wooded decks both treated and untreated.
- Keep the grilling area free from combustible materials, petrol and other flammable vapours or liquids.
- Keep all electrical cables away from the hot surfaces of the barbecue.
- Always open the lid carefully as steam and heat builds up inside the barbecue and can cause serious injury.

Don't's

- Do not use paraffin, alcohol or other combustible materials to light the barbecue.
- Do not add firelighters or any other barbecue lighting material to a barbecue that is already alight.
- Do not store or use petrol or any other flammable vapours or materials within 8 meters of this barbecue.
- Do not touch metal parts of the barbecue until it has completely cooled. Wear barbecue mitts when adjusting air vent or lifting the lid.
- Do not touch the grills, charcoal or any part of the barbecue to see if they are hot.
- Never move the barbecue while in use and wait until the coals are completely extinguished and cold before attempting to move the barbecue.
- Regularly check and clean the barbecue to avoid any build up of fats which may cause a fat fire and would void your warranty.

Lighting your charcoal barbecue

Ensure the hood and all air vents are open. The hood should remain open for the entire lighting process (approx. 30mins).

Remove any ash left from the previous barbecue (this can only be done once the coals are fully extinguished and cold).

When lighting coal directly on the grate, pile the required quantity of briquettes into a pyramid on top of 3 or 4 firelighters. Ignite the firelighters and leave the hood open. The coals should be ready to cook over in 30-40 minutes, when all briquettes have a covering of

'grey' ash. Arrange the lit coals with long handled tongs. You may now close the hood of the BBQ.

When using a firestarter chimney, put the required amount of briquettes into the top of the chimney above the internal grate. Stand the Firestarter on the barbecue grate over scrunched up newspaper or 1-2 firelighters, then ignite, leaving the hood open. The briquettes will be ready for cooking in 20-25 minutes. Pour the hot coals out of the Firestarter onto the grate. Always use BBQ Mitts when handling the Firestarter.

Aim for an even layer of coals, 3-4cm deep (or a maximum load of 1.5kg of charcoal) in the required area under the grill. Always put the charcoal on the grate and never directly into the bottom of the barbecue bowl. Failure to do so may cause damage to the barbecue which is not covered by the warranty.

Charcoal must only be placed on the grate and NEVER on the grill bottom. Failure to do this will damage the grill bottom and will not be covered by the warranty.

Care and maintenance

- Always empty the fuel tray after every use. Do not remove the ash until it is completely extinguished and cold.
- Using abrasive cleaners on the barbecue or grills will damage the finish and void the warranty.
- Using sharp objects to clean the bowl and hood will damage the finish and void the warranty.
- Allow the complete barbecue to cool before cleaning and washing in a warm soapy solution. Ensure that any dried fat and food deposits are cleaned off the grills after EVERY cooking session. Wash the grills with hot, soapy water then rinse and dry before returning the grills to the barbecue.


Guarantees

- This barbecue is not designed for commercial use and doing so will void its warranty.

DAMAGE CAUSED BY FAT FIRES IS NOT COVERED BY THE WARRANTY

- Only use the recommended amount of Charcoal Briquettes, not Lumpwood, with the barbecue. Failure to do this may cause damage to the barbecue that is not covered by warranty.
- Always leave the lid off for the entire lighting process. Failure to do this may cause damage to the barbecue that is not covered by warranty.


Exploded Diagram

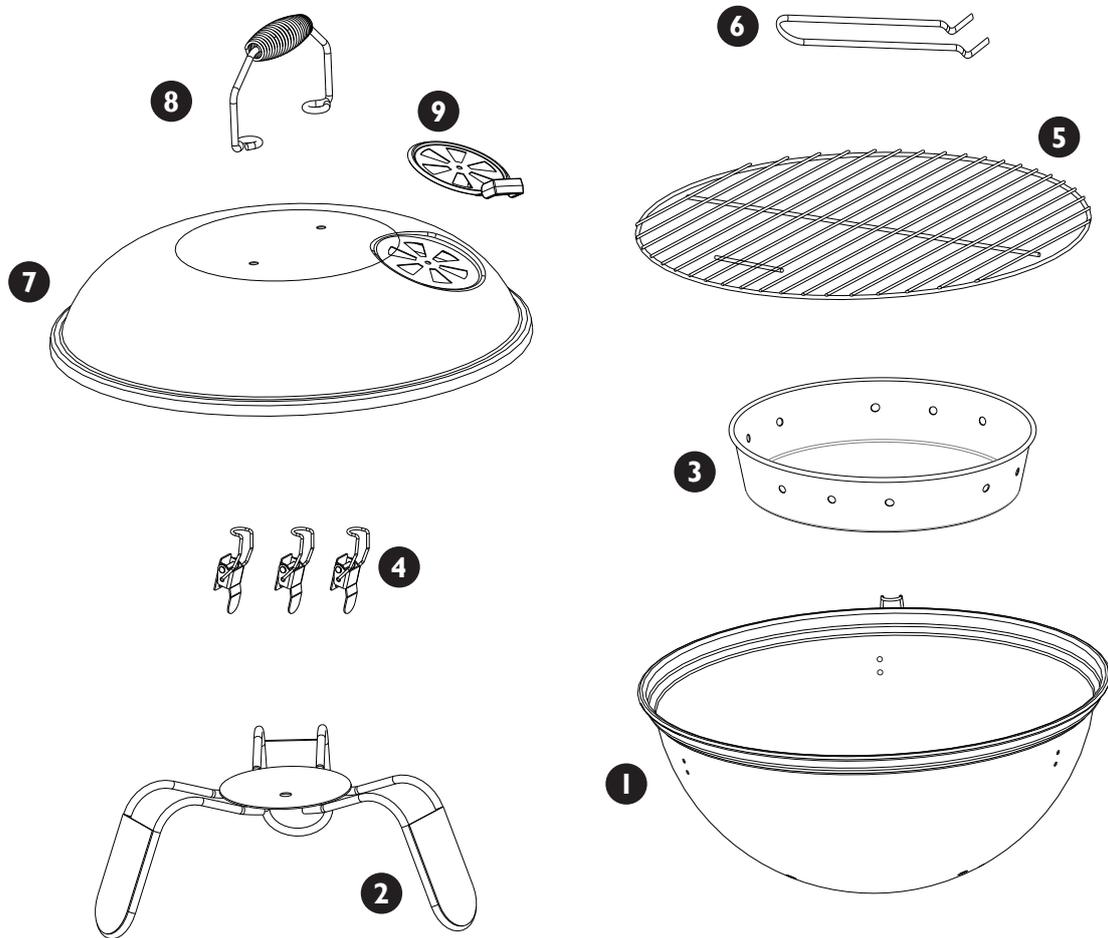

No.	Description	QTY	No.	Code	QTY
1	Firebowl	1	6	Grill Lifter	1
2	Leg Assembly	1	7	Lid	1
3	Charcoal Tray	1	8	Lid Handle	1
4	Lid Clip	3	9	Vent	1
5	Grill	1			

Parts List

Fixing elements

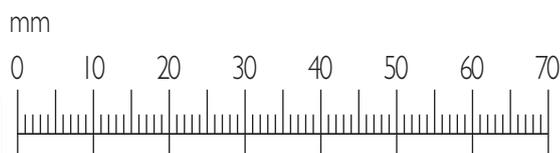

Ref	Description	Quantity	
A	M5 x 10 Bolt	1	
B	M6 x 60 Bolt	1	
C	M6 x 16 Bolt	2	
D	M3 x 10 Bolt	6	
E	M3 Nut	6	
F	M5 Nut	1	
G	Metal Washer	2	
H	M6 Wing Nut	3	

Mounting steps

Make sure your grill is assembled properly. Detailed assembly instructions are packed with each grill giving specific assembly procedures for each model. Follow these instructions carefully to ensure the correct and safe assembly of the grill.

Caution: Although we take every effort to ensure that the assembly process is as easy as possible, it is inherent with fabricated steel parts that corners and edges can cause cuts if improperly handled during assembly procedures. Be careful while handling any parts during assembly. It is strongly recommended that you protect hands with a pair of work gloves.


Step 1

Parts and fitting

1 2 3 B H



Thread Bolt (B) through Leg Assembly (2), Firebowl (1) and Charcoal Tray (3). Secure in place using Wing Nut (H).

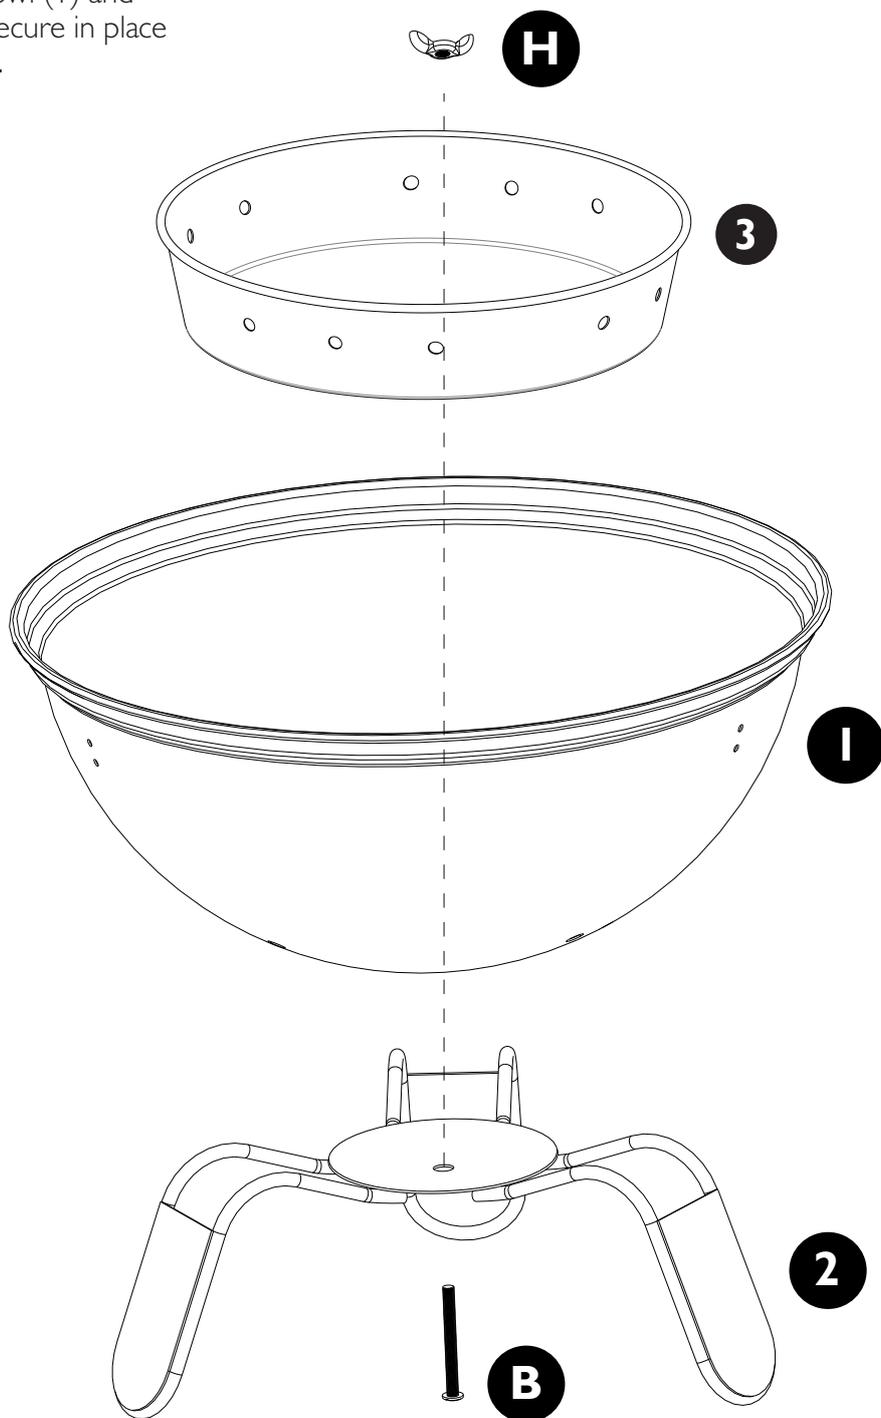


Step 2

Parts and fitting

4 D E



Attach each of the Lid Clips (4) to sides of the Firebowl using Bolts (D) and Nuts (E).

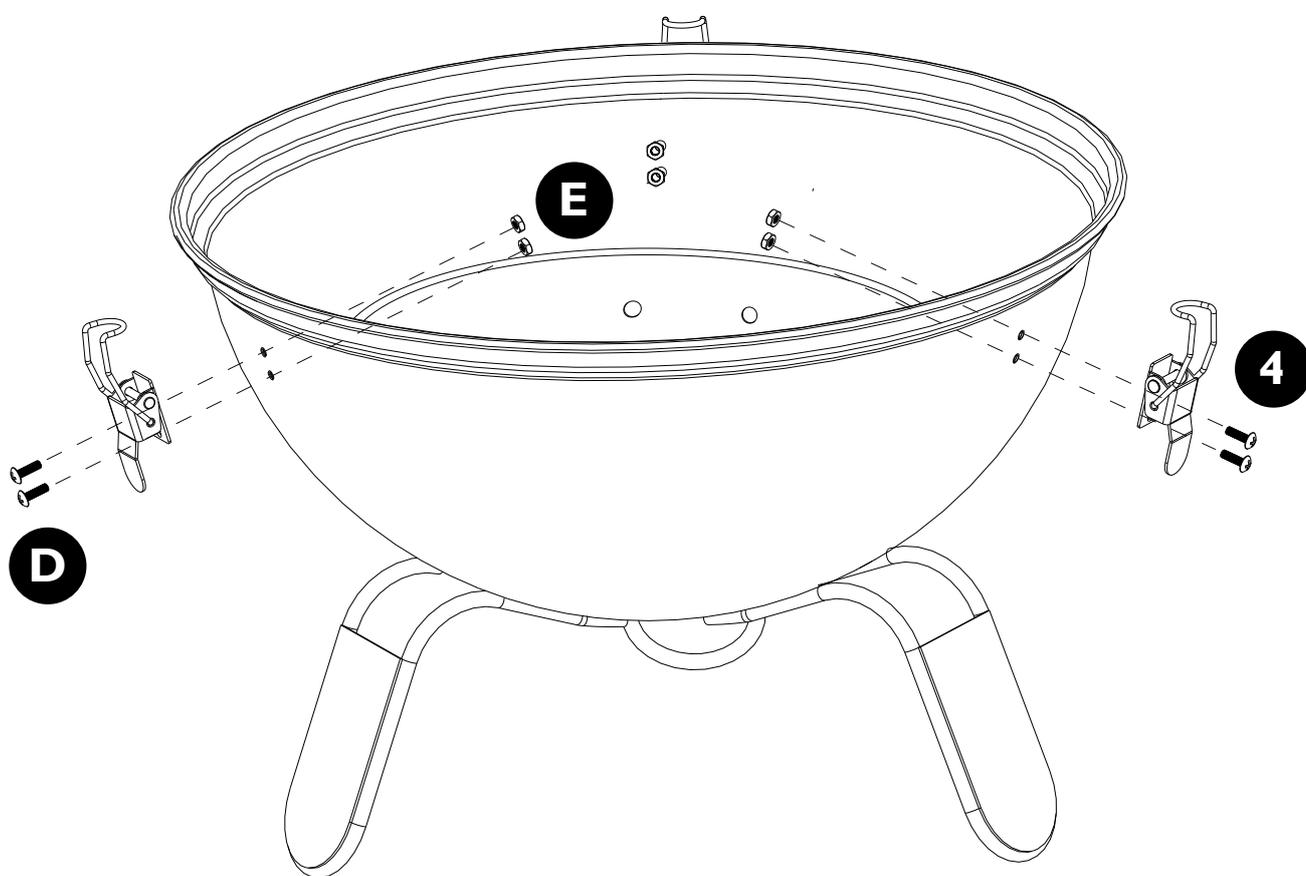


Step 3

Parts and fitting

5 **6**

Place Grill (5) on lip inside Firebowl. Grill Lifter (6) can be used to lift Grill and top up charcoal during cooking.

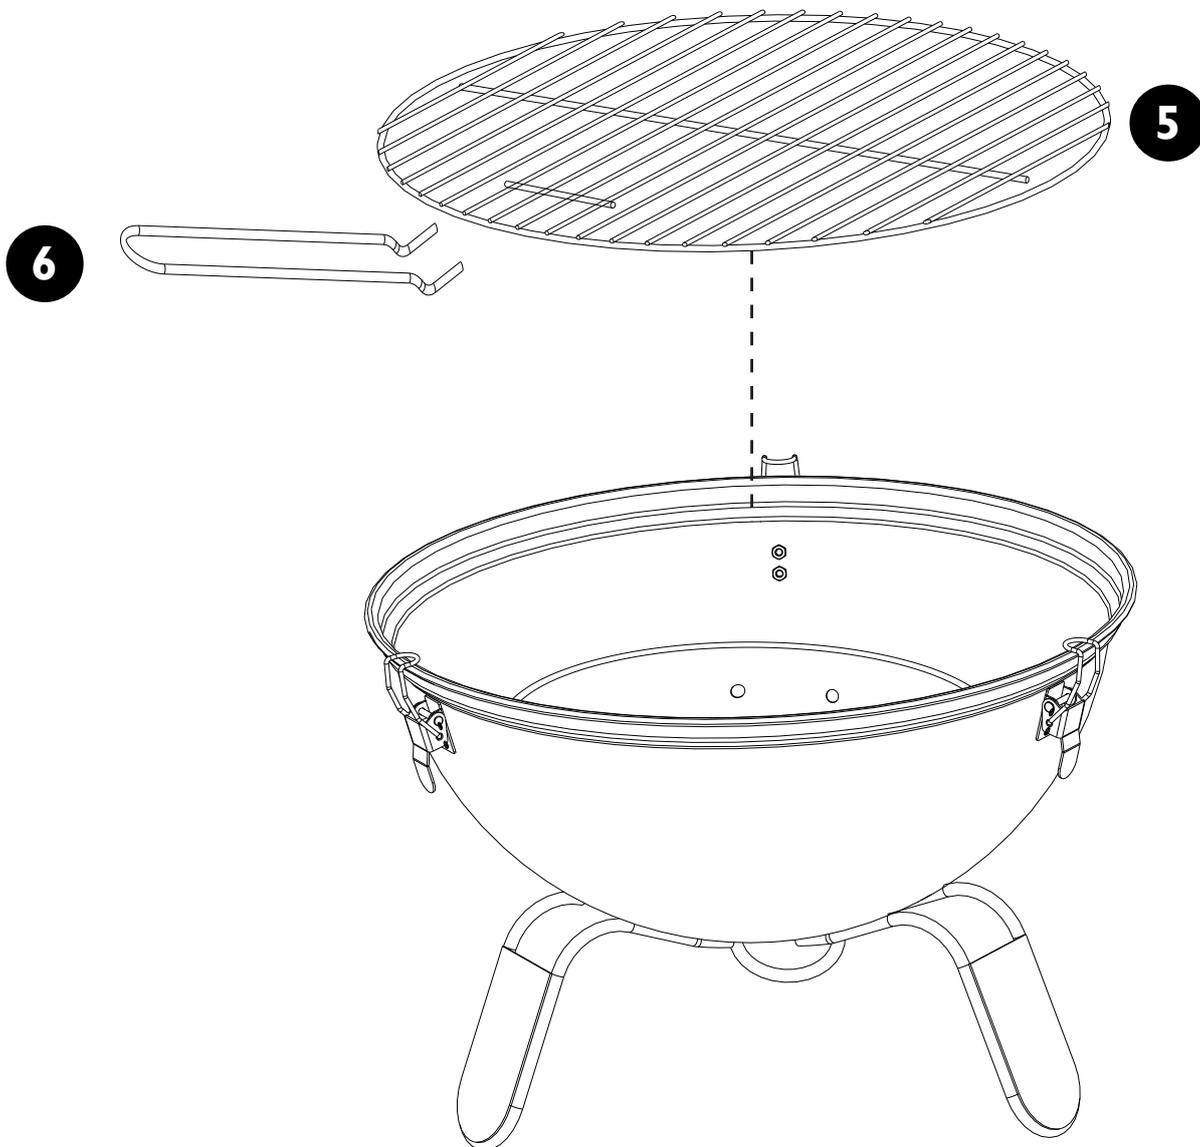


Step 4

Parts and fitting

7 8 C G H



Attach Lid Handle (8) to Lid (7) using Bolts (C), Washers (G) and Wing Nuts (H).

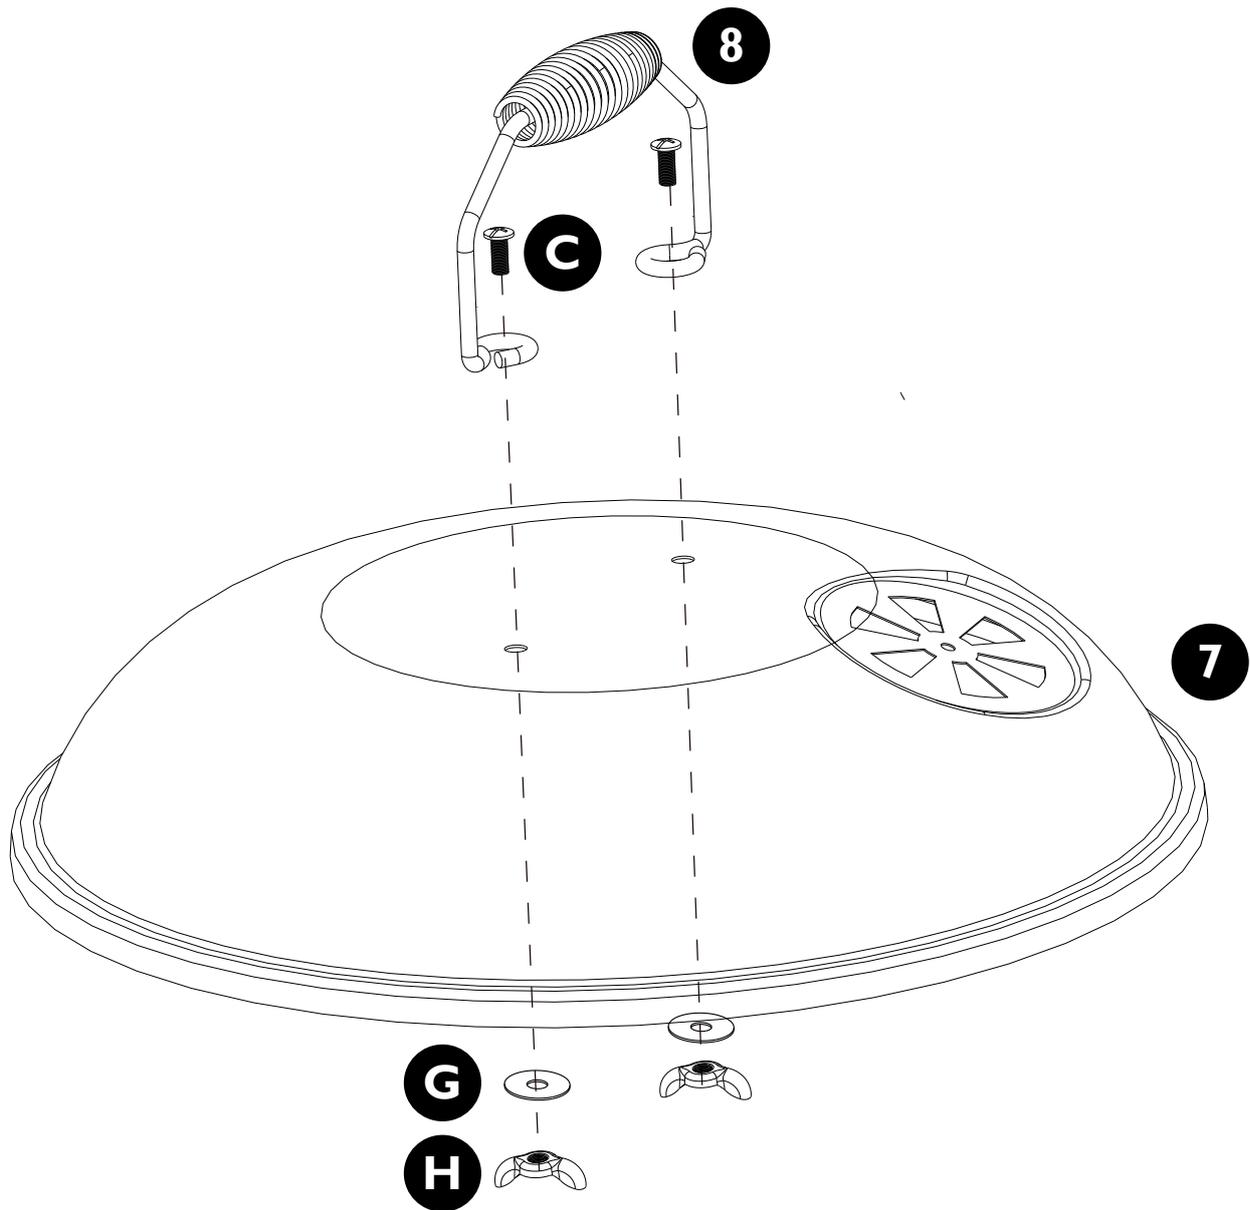


Step 5

Parts and fitting

9 A F



Attach Vent (9) to Lid using Bolt (A) and Nut (F). Lower Lid onto Firebowl. The clips can now be used to hold Lid in place when not in use.

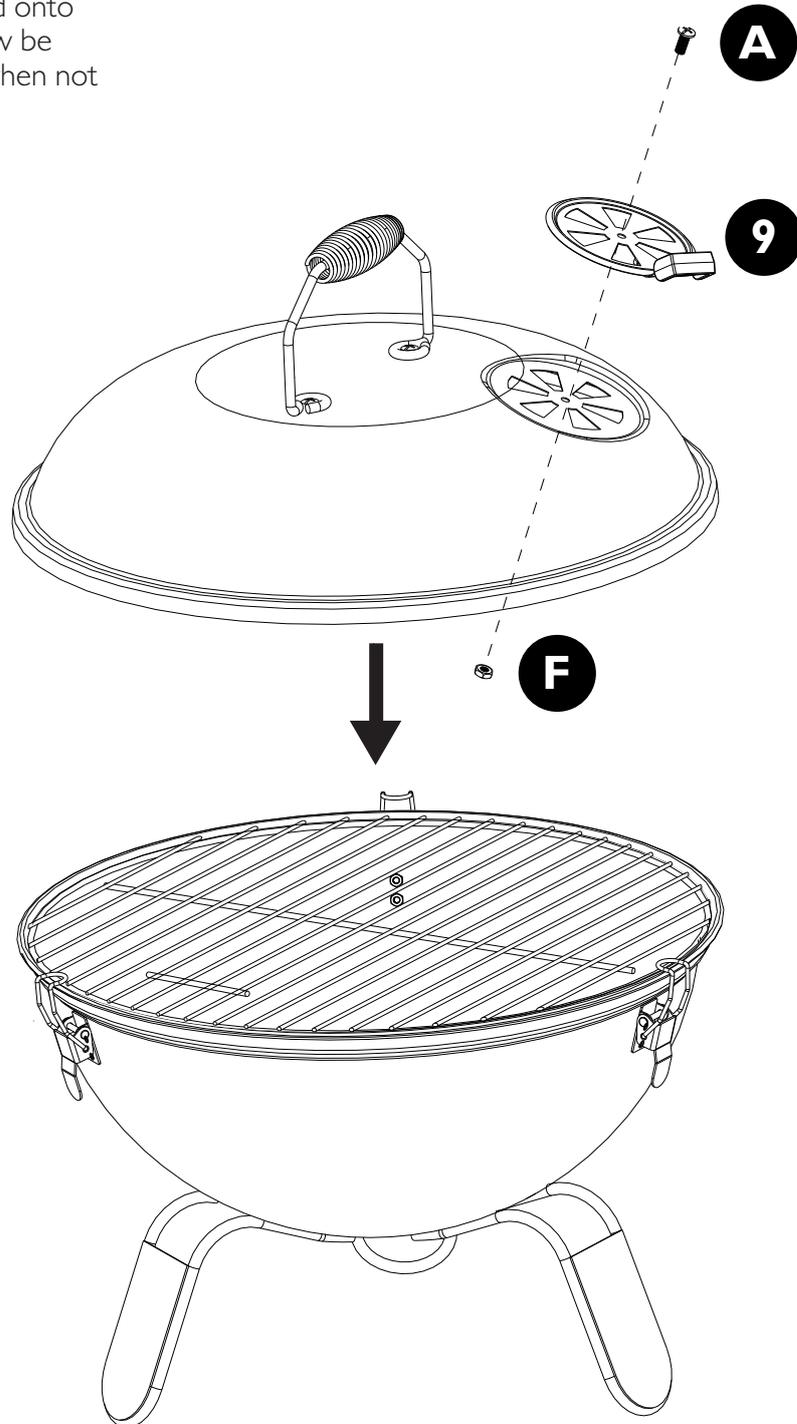

RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

If you require any additional information or have any issues with this product
please get in touch with us by:

Customer Services: 03456 002 389

or

Email: yourenquiry@johnlewis.co.uk

For all other enquiries please contact us on 03456 049 049

Your feedback is very important to us and we would love to hear your comments
on your new furniture. Please visit our website to leave a review. Thank you.