





Product information	<ul style="list-style-type: none"> Indoor use only 3 step dimmable Clean the fitting with a soft dry cloth. Do not use abrasive chemical cleaners as this will damage the finish This product contains a Li-ion battery
---------------------	---

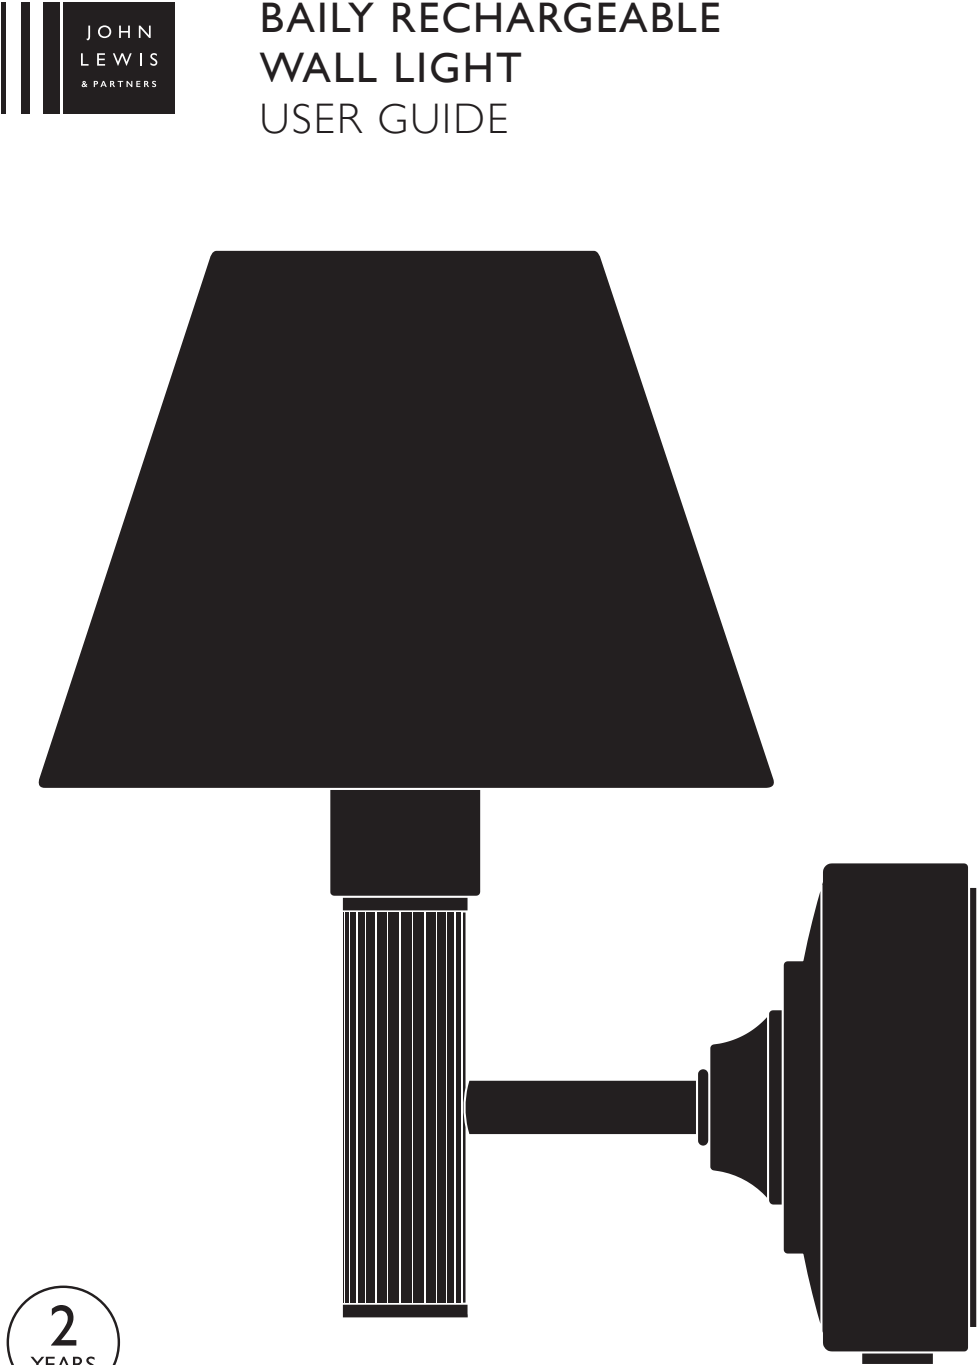 
Aftercare and Troubleshooting	<p>Please note the touch sensor will use a small amount of current at all times and will slowly drain the battery even when the light is off.</p> <p>If you find the light turning itself off, even when the product is put on charge, it means the battery has been almost completely drained and needs initial charging before the light can be switched on again. Please refer to Step 5.</p> <p>If there are technical issues with this product that you are unable to resolve, please contact your nearest John Lewis & Partners shop or call Technical Support on 03301 230106.</p>
-------------------------------	---

Specification	<p>Max power: 1.4W</p> <p>2700K 171Lm</p> <p>INPUT Max.: 10W DC 5V 2A</p> <p>Battery: 3.7V 3600mAh</p> <p>IP rating: 20</p> <p>Weight: 0.7kg</p> <p>Charging time: 4 hours when fully discharged</p> <p>Time in use: 10-11 hours on full brightness</p> <p>Direct current </p>
---------------	---



Non-replaceable light source

2-year guarantee	At John Lewis & Partners we test every light to high quality standards. That means we can offer you a 2-year guarantee.
------------------	---

Recycling	<p>This symbol  indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis & Partners do not operate instore take back, but as members of the Distributor Take Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.</p>
-----------	---



2

YEARS

70259523
 70259524

Getting started

Thank you for purchasing this John Lewis & Partners product. For your safety, and to make sure everything is working properly, please read the instructions carefully before use.

Warnings

This product is battery powered and the internal battery is recharged via a supplied USB-A to USB-C cable.

This product should only be connected to equipment of Class II or class III. Batteries are only to be charged by persons over 8 years of age.

Only charge via a input max. 10W DC 5V 2A SELV plug-in adapter (phone charger or similar USB outlet).

This product is for indoor use only, and not suitable for a bathroom or outdoor location.

Do not plug this product directly into the mains or by other means other than the supplied cable.

This product is not suitable for children under 3 years of age.

The battery must not be opened, destroyed or incinerated.

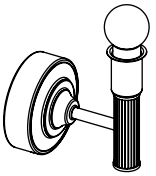 

 



The battery in this product is non-replaceable and if damage occurs must be disposed of responsibly.

The light source in this product is non-replaceable and when the light source reaches its end of life or if damage occurs, the product should be disposed of responsibly.

This product is suitable for installation on surfaces with normal flammability e.g. wood, plasterboard, masonry. It is not suitable for use on highly flammable surfaces (e.g. polystyrene, textiles).

Never put anything on the product or hang anything on any part of this product.

Parts list

Description	Image	Quantity
Light fitting		x 1
Back plate		x 1
Shade		x 1
USB cable		x 1
Wall plugs		x 2
Screws		x 2

Product assembly

Step 1

Carefully unpack the carton, making sure all the parts are present before assembly.

Step 2

Ensure there is a solid mounting surface to support the weight of the light fitting. Using the back plate (A) as a template, mark the position of the mounting holes. Drill holes and fit supplied wall plugs (B) (suitable for masonry only). Take care to avoid damaging any concealed wiring and pipes. Fix the bracket to the wall using supplied screws (C). Ensure the lip of the plate is facing up (H).

Step 3

Fit the product to the back plate and attach the shade by gently pushing the shade clips (D) inside the shade onto the bulb.

Step 4

The magnetic back plate allows easy fitting and removal of the light to enable easy recharging. To remove the back plate from the product, gently twist and pull against the magnetic backing.

Connect the USB cable to the product (E) and to a USB outlet (F) (phone charger or similar USB outlet rated input max. 10W DC 5V 2A).

Step 5

Charge the battery before first use. Ensure the product is fully charged before operating. The light indicator on button (G) will turn from red to green when fully charged. Your light is now ready for use. Refit onto the back plate.

To operate the on/off dimmer, just touch the button (G). (one touch brightest, second touch brighter, third touch low light level and fourth to turn off).

When used on the brightest setting the light will start to dim after 10-11 hours of use.
Top up the battery by charging until the light turns green.

Always unplug after charging.
Do not use while charging to extend battery life.

