



ASSEMBLY AND CARE INSTRUCTIONS

Sanctuary Rope Modular Lounge Set



This is an important document.

 
Please retain for future reference.

Please keep your receipt of purchase. Please note we are unable to process any warranty claim without proof of purchase

Care Instructions

- Before assembly, unwrap all packaging materials and place the components on top of the carton or on a smooth, clean surface to prevent it from scratching
- Please keep sofa and any cushions away from sources of extreme heat and naked flames
- Do not stand on this product
- Do not lean back on this product. This product is only designed to be used with all four feet touching the ground
- We recommend cleaning this product periodically with warm, soapy water and a cloth or non-abrasive brush. Do not use harsh or abrasive chemicals.
- STAINSAFE Cushions should be cleaned with water only as detergents can weaken the stain-resistant coating. If detergents are used please retreat the affected area with a fabric protection spray.
- To keep your product looking its best, we would always recommend covering with an LG Outdoor Furniture Cover when not being used for longer periods. Throughout the winter months either bring indoors or cover as above. Failure to do so may invalidate your warranty


Necessary Tools



You will find a pack within this box tied to a red ribbon which contains the fittings.

WARNING –the fittings pack contains **SMALL ITEMS** which are a potential choking hazard and should be kept away from children at all times.

 
 

 
 
 



Assembly Requirements

Number of people required to assemble	
Approximate Assembly time	45 minutes

Read this leaflet in full before commencing assembly.


Part List Supplied

 Left Armrest Sofa

A1	LEFT SOFA LEG		1
B	SOFA SEAT		1
C	SOFA BACK		1
D	BOLT (M6*30)		3
E	BOLT (M6*38)		1
F	BOLT (M6*50)		3
G	WASHER (D 6)		7
H	BOLT CAP		7
Z	ALLEN KEY		1


Assembly Instructions

 STEP 01

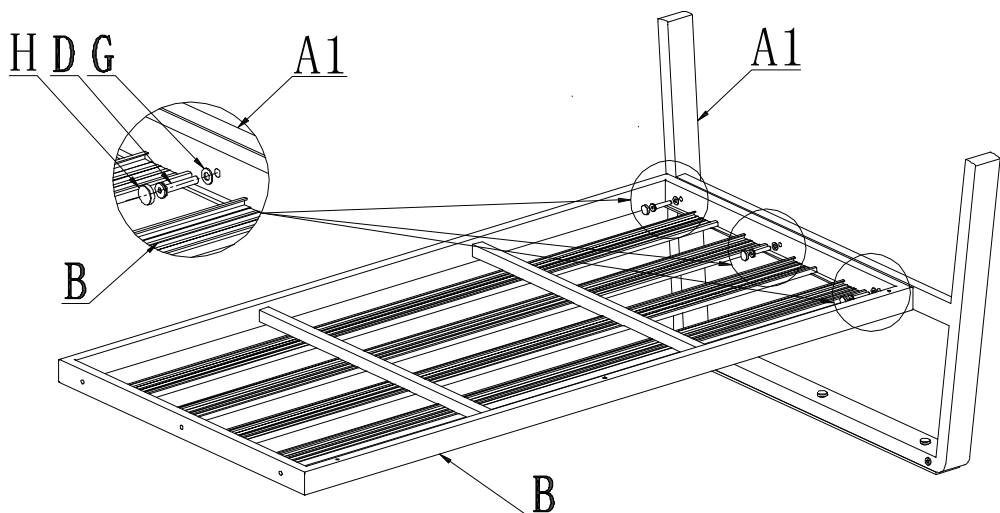

Assembly Instructions

 STEP 02

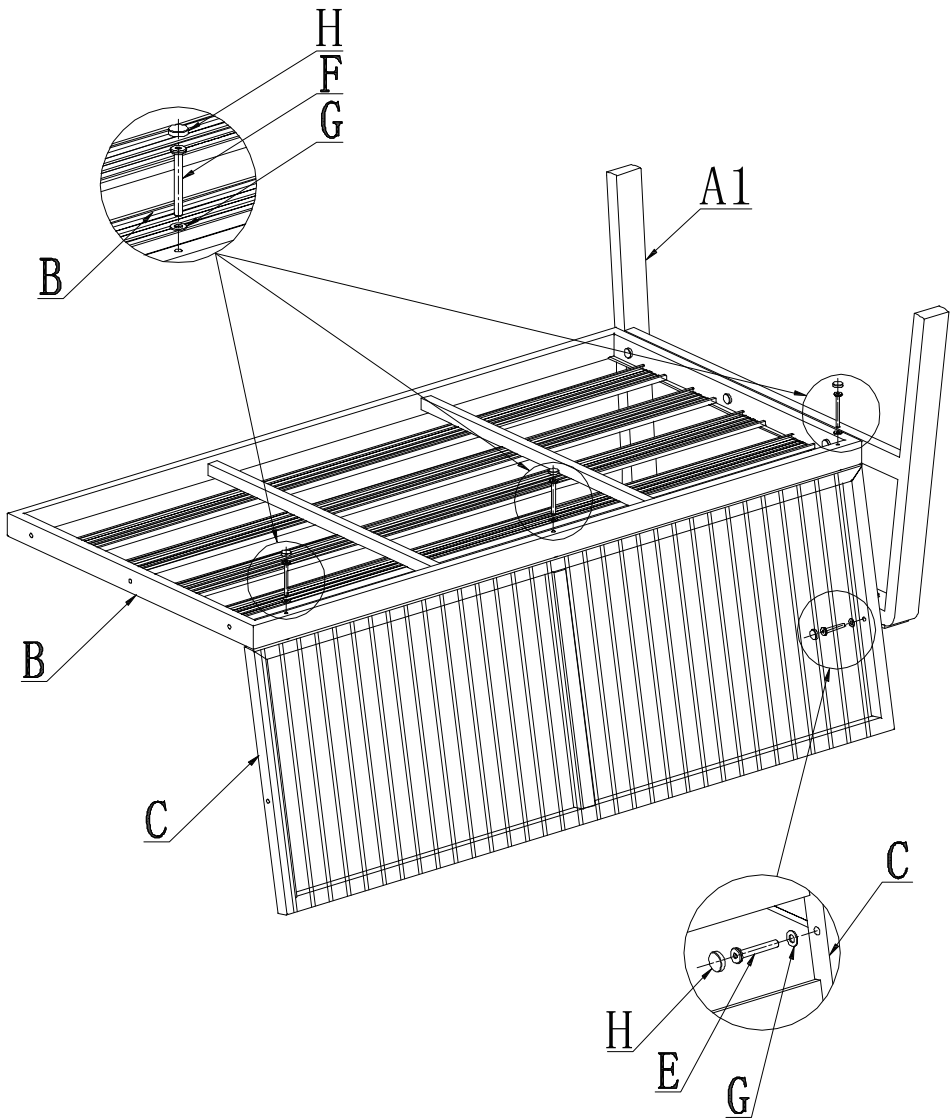

 
 

 
 
 



STEP 03



PLEASE ENSURE ALL FIXINGS ARE LEFT LOOSE DURING ASSEMBLY BUT ARE SECURELY TIGHTENED UPON COMPLETION.


Part List Supplied

 Right Armrest Sofa

A2	RIGHT SOFA LEG		1
B	SOFA SEAT		1
C	SOFA BACK		1
D	BOLT (M6*30)		3
E	BOLT (M6*38)		1
F	BOLT (M6*50)		3
G	WASHER (D 6)		7
H	BOLT CAP		7
Z	ALLEN KEY		1


Assembly Instructions

 STEP 01

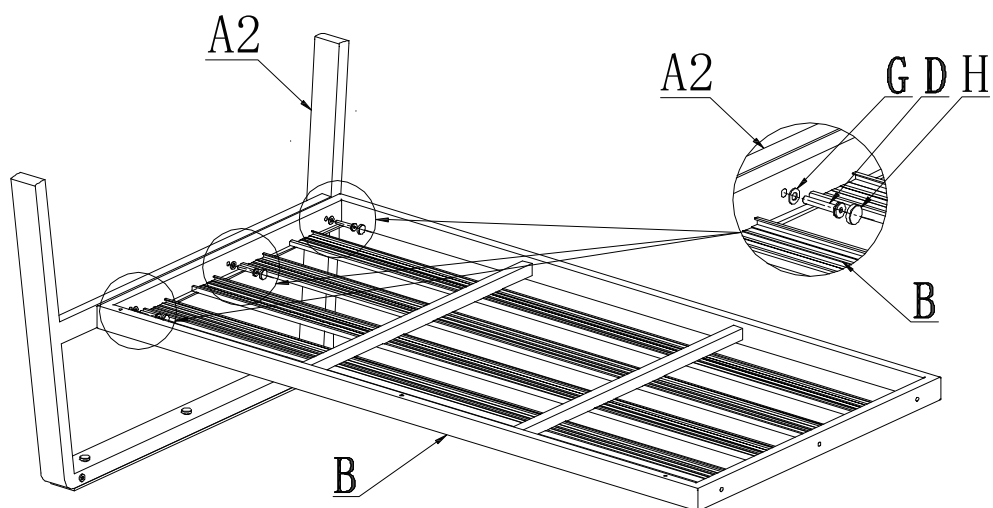


Assembly Instructions

  STEP 02

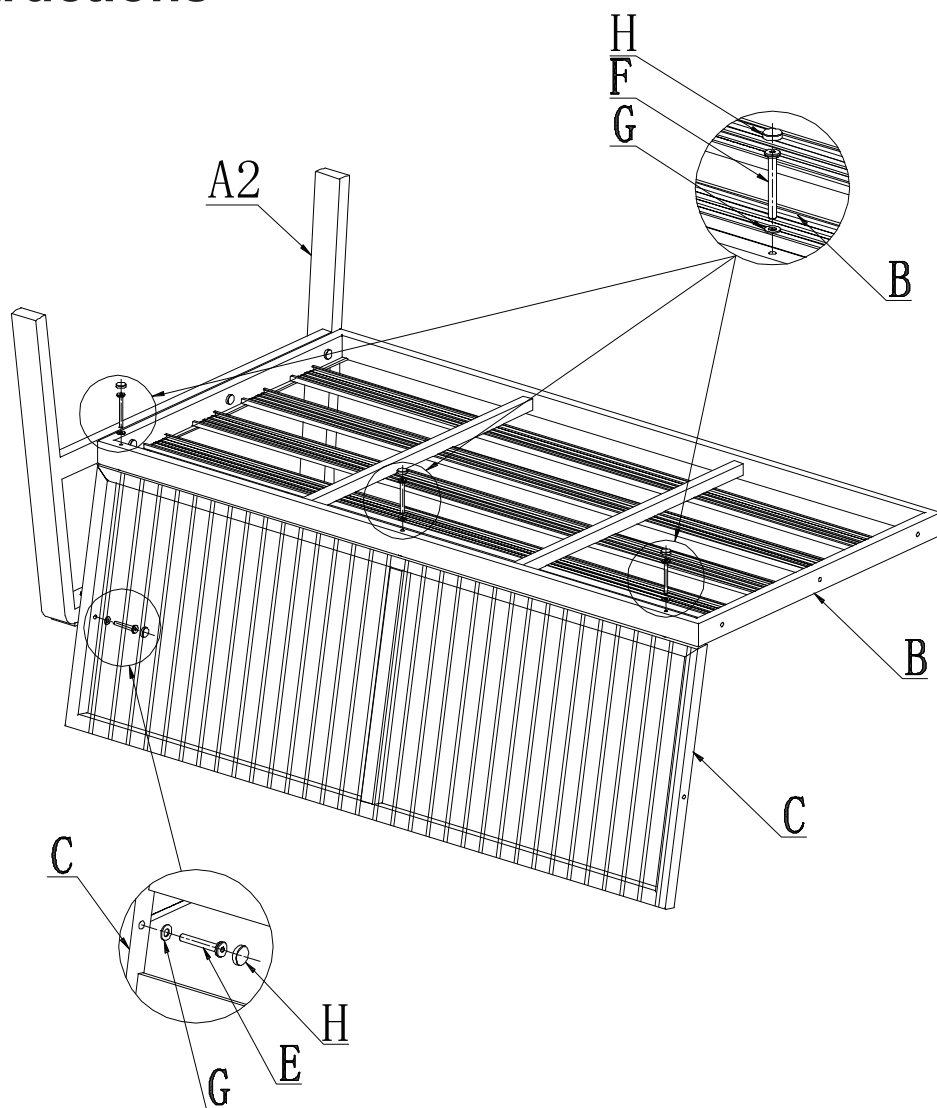





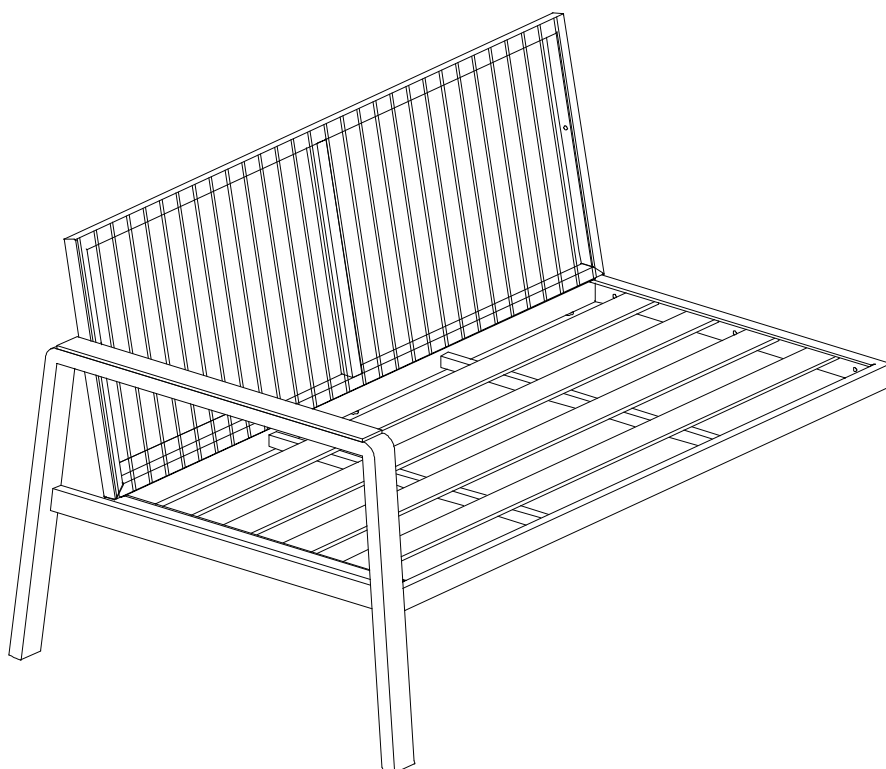







  STEP 03






    PLEASE ENSURE ALL FIXINGS ARE LEFT LOOSE DURING ASSEMBLY BUT ARE SECURELY TIGHTENED UPON COMPLETION.

Set Connection Part List Supplied


AA	LEFT SOFA		1
BB	RIGHT SOFA		1
R	BOLT (M6*40)		6
T	BOLT (M6*75)		2
G	WASHER (D 6)		16
H	BOLT CAP		8
U	NUT		8
V	NUT CAP		8
Z	ALLEN KEY		1
Y	SPANNER	 M6	1
DD	BACK CUSHION		4
EE	SEAT CUSHION		4

 Below Parts in Corner Sofa Carton


CC	CORNER SOFA		1
FF	CORNER BACK CUSHION		3
GG	CORNER SEAT CUSHION		1

Assembly Instructions

 STEP 01

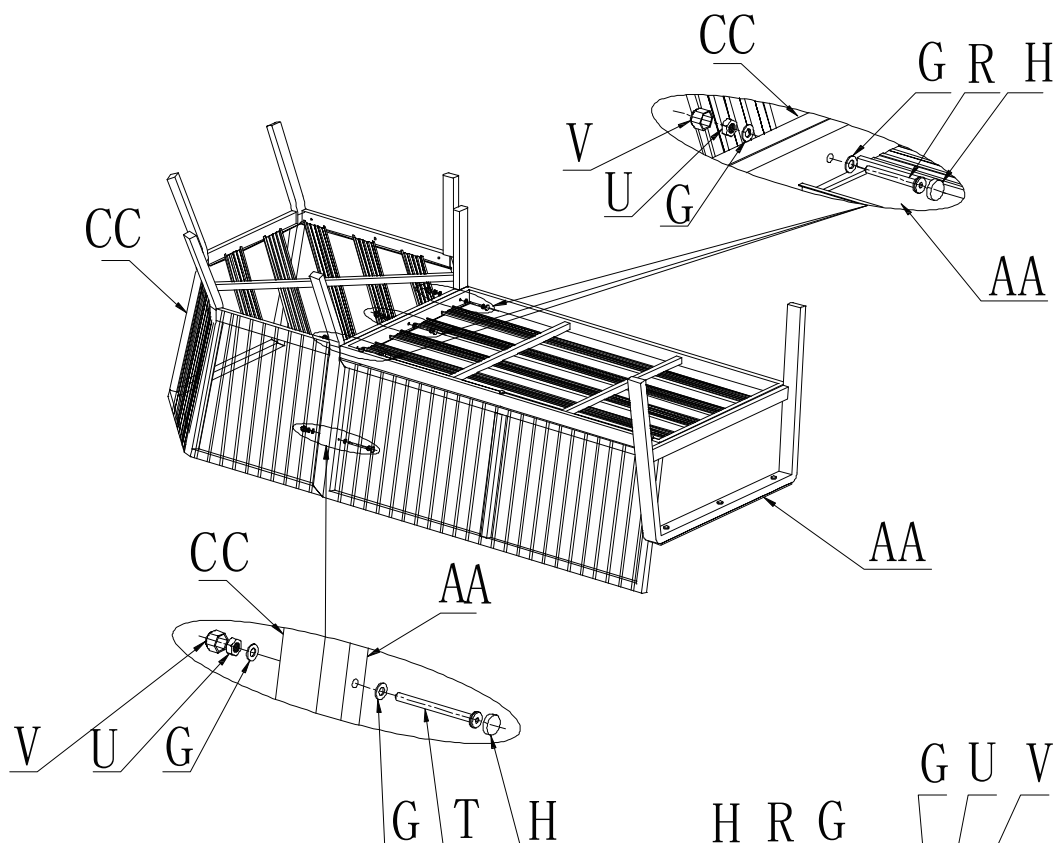


 STEP 02

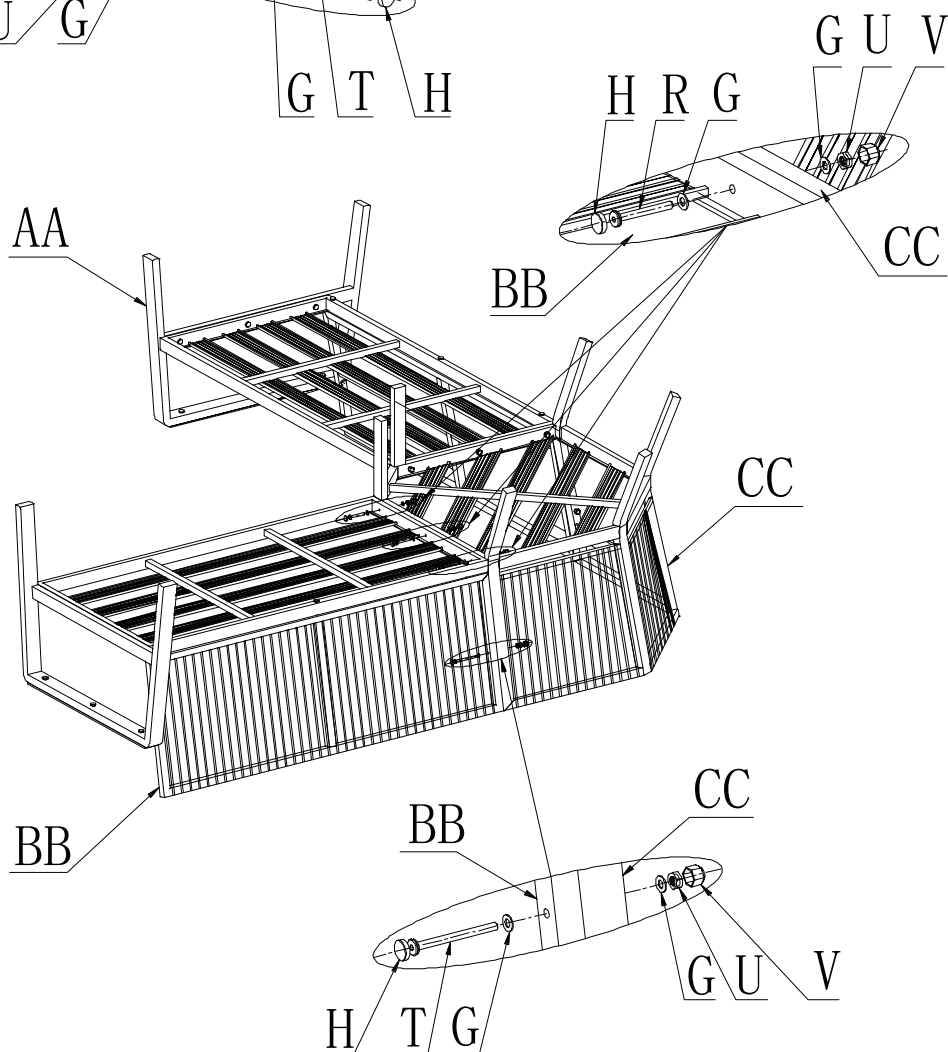

PLEASE ENSURE ALL FIXINGS ARE LEFT LOOSE DURING ASSEMBLY BUT ARE SECURELY TIGHTENED UPON COMPLETION.

 STEP 03

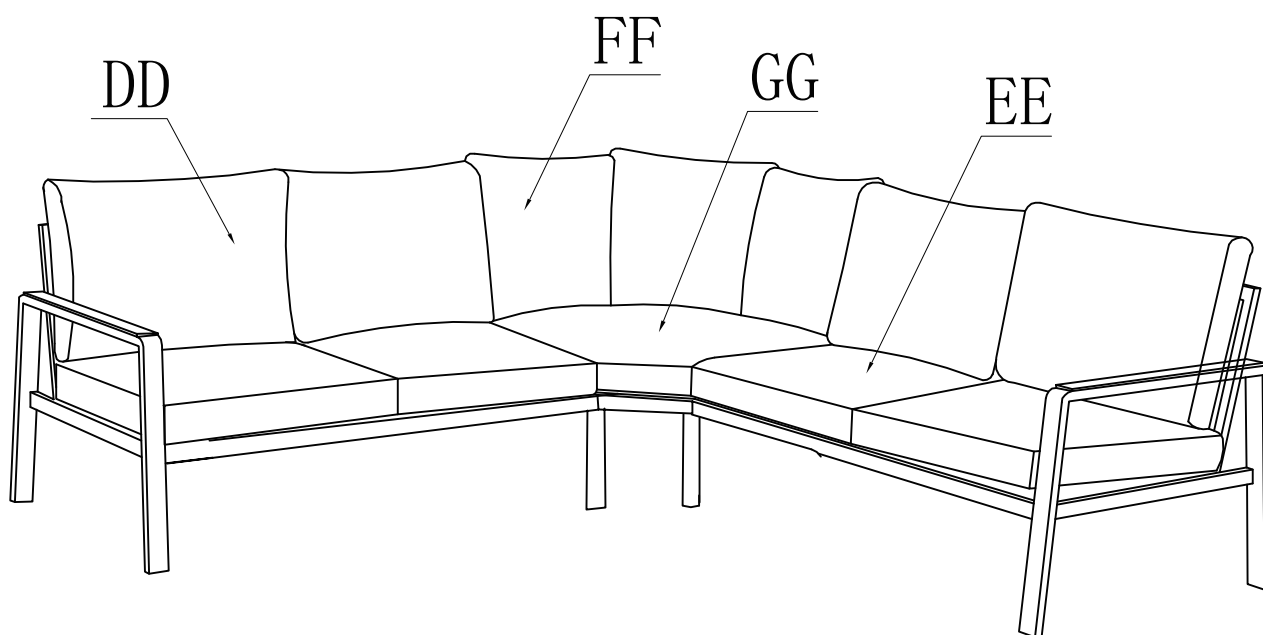

General Warranty Conditions

The warranty applies to the original purchaser from the date of purchase and covers manufacturing faults and defects only. If an item should fail as a result of a manufacturing fault or defect under normal domestic use, the manufacturer at their discretion will repair, refinish or replace the failed item.

The manufacturer reserves the right to substitute failed items with a similar product should the model or colour no longer be available. Any replacement will be for the failed item only, not a complete set. The original warranty period is not extended in the event of a repair, refinish or replacements.

In the event of a failure, it is the customer's responsibility to return the item to the store of purchase along with a copy of the receipt. LG Outdoor will confirm that the customer has registered their warranty. Warranty specifically excludes general wear and tear, rusting of steel components and parts, corrosion, commercial use and damage caused as a result of failure to observe reasonable care, maintenance and assembly instructions for both furniture and hardware.

This product comes with a Limited Warranty which covers the following:

* 3 Year Limited Warranty - Aluminium Frames - which excludes damage to the finish caused by corrosion, scratching, pitting, fading or oxidation

For all other components not covered by the above a standard 12 month warranty will apply

To register your warranty please visit lgoutdoor.co.uk/furniture-warranty within 28 days of purchase

LEISUREGROW 

Dewmead Farm
New Inn Road
Hinxworth
SG7 5HG
consumer@leisuregrow.com