

Product information

- Indoor use only
- 3 step dimmable
- Clean the fitting with a soft dry cloth. Do not use abrasive chemical cleaners as this will damage the finish
- This product contains Li-ion batteries

Aftercare and Troubleshooting

 
Please note the touch sensor will use a small amount of current at all times and will slowly drain the battery even when the light is off.

If you find the lamp turning itself off, even when the product is put on charge, it means the battery has been almost completely drained and needs initial charging before the lamp can be switched on again. Please refer to Step 3.

If there are technical issues with this product that you are unable to resolve, please contact your nearest John Lewis & Partners shop or call Technical Support on 03301 230106.

Specification

Max power: 2W LED
3000K 129Lm
Rated input (charging): DC 5V or INPUT Max.: 5W DC 5V 1A
Battery: 3.6V 3600mAh
IP rating: 20
Weight: 0.8kg
Charging time: 8 hours when fully discharged
4 hours (approx.) in normal use



Replaceable light source by a professional

For further information please visit: www.lighting-info.co.uk/106266

2-year guarantee

At John Lewis & Partners we test every light to high quality standards. That means we can offer you a 2-year guarantee.

Recycling

This symbol  indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis & Partners do not operate instore take back, but as members of the Distributor Take Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

John Lewis plc
SW1V 2QQ
johnlewis.com

Made in China




19/02/2025

Please retain these instructions for future reference.

JOHN
LEWIS
& PARTNERS

MUSHROOM LED TOUCH BATTERY POWERED TABLE LAMP USER GUIDE

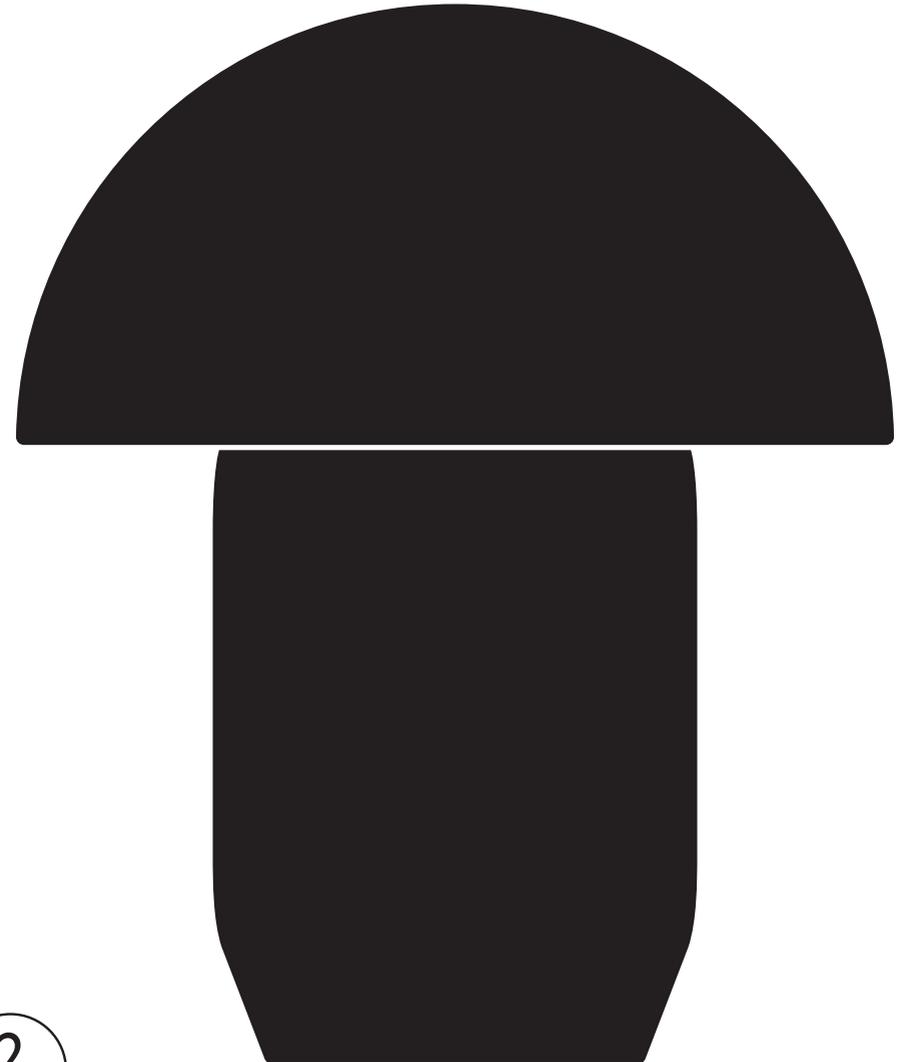

Product Code:
70670420
70670421


Getting started

Thank you for purchasing this John Lewis & Partners product. For your safety, and to make sure everything is working properly, please read the instructions carefully before use.

Warnings

This product is battery powered and the internal battery is recharged via a plug-in SELV power adapter.
Under no circumstances should the product be used or charged with a different plug-in power adapter otherwise damage could occur.
The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
This product is for indoor use only, and not suitable for a bathroom or outdoor location.
Do not plug this product directly into the mains or by other means other than the supplied driver.
The transformer or power supply is not a toy.
This product is not suitable for children under 3 years of age.
The battery must not be opened, destroyed or incinerated.
The battery in this product is non-replaceable and if damage occurs must be disposed of responsibly.

Parts list

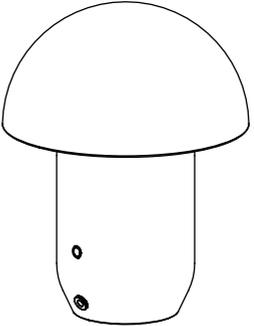Description	Image	Quantity
Light fitting		x 1
Plug-in DC power adapter		x 1

Product assembly

Step 1

Carefully unpack the carton, making sure all the parts are present before assembly.

Step 2

Connect the DC connector (A) to the product (B).

Step 3

Charge the battery, which is already fitted to the product before first use.
Plug in the power adapter and ensure the product is fully charged before operating.
The light indicator on button (C) will turn from red to green when fully charged.
Your table lamp is now ready for use.

To operate the on/off dimmer, touch the button (C) on the back of your lamp.
(one touch low light level, second touch brighter, third touch brightest and fourth to turn off).

When used on the brightest setting the light will start to dim after 6-8 hours of use.
Top up the battery by charging the lamp until the light turns green (approx. 4 hours).

Always unplug after charging. Do not use while charging to extend battery life.

Note:

The shade had been pre-assembled for your convenience.
If the shade is loose, tighten by rotating clockwise.

