

Microwave Oven

User manual and installation  
instructions

**C1AMG84.1B**



# Table of contents

## INFORMATION FOR USE

|             |   |           |
|-------------|---|-----------|
| <b>1</b>    | <b>Safety .....</b>                                     | <b>2</b>  |
| <b>2</b>    | <b>Preventing material damage .....</b>                 | <b>6</b>  |
| <b>3</b>    | <b>Environmental protection and saving energy .....</b> | <b>6</b>  |
| <b>4</b>    | <b>Familiarising yourself with your appliance .....</b> | <b>8</b>  |
| <b>5</b>    | <b>Accessories.....</b>                                 | <b>10</b> |
| <b>6</b>    | <b>Before using for the first time .....</b>            | <b>11</b> |
| <b>7</b>    | <b>Basic operation .....</b>                            | <b>12</b> |
| <b>8</b>    | <b>Microwave .....</b>                                  | <b>12</b> |
| <b>9</b>    | <b>Automatic programmes.....</b>                        | <b>15</b> |
| <b>10</b>   | <b>Time-setting options.....</b>                        | <b>17</b> |
| <b>11</b>   | <b>Basic settings.....</b>                              | <b>18</b> |
| <b>12</b>   | <b>Cleaning and servicing .....</b>                     | <b>18</b> |
| <b>13</b>   | <b>Troubleshooting.....</b>                             | <b>20</b> |
| <b>14</b>   | <b>Disposal.....</b>                                    | <b>22</b> |
| <b>15</b>   | <b>Customer Service.....</b>                            | <b>22</b> |
| <b>16</b>   | <b>How it works.....</b>                                | <b>22</b> |
| <b>17</b>   | <b>INSTALLATION INSTRUCTIONS .....</b>                  | <b>35</b> |
| <b>17.2</b> | <b>Safe installation .....</b>                          | <b>35</b> |

## 1 Safety

Observe the following safety instructions.

### 1.1 General information

- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

### 1.2 Intended use

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under the warranty.

The appliance can only be used safely if it is correctly installed according to the safety instructions. The installer is responsible for ensuring that the appliance works perfectly at its installation location.

Only use this appliance:

- To prepare meals and drinks.
- For household use and similar applications, such as: In kitchens for employees in shops, offices and other commercial sectors; in agriculture; by customers in hotels and other residential facilities; in bed and breakfasts.
- up to an altitude of max. 4000 m above sea level.

This appliance complies with the standards EN 55011 and CISPR 11. It is a group 2, class B product. Group 2 means that microwaves are produced for the purpose of heating food. Class B means that the appliance is suitable for private households.

### 1.3 Restriction on user group

This appliance may be used by children aged 15 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance. Children must not perform cleaning or user maintenance unless they are at least 15 years old and are being supervised.

Keep children under the age of 8 years away from the appliance and power cable.

### 1.4 Safe use

Always place accessories in the cooking compartment the right way round.

→ "Accessories", Page 10

### **WARNING – Risk of fire!**

Combustible objects that are left in the cooking compartment may catch fire.

- ▶ Never store combustible objects in the cooking compartment.
- ▶ If smoke is emitted, the appliance must be switched off or the plug must be pulled out and the door must be held closed in order to stifle any flames.

Loose food remnants, fat and meat juices may catch fire.

- ▶ Before using the appliance, remove the worst of the food residues and remnants from the cooking compartment, heating elements and accessories.

Opening the appliance door creates a draught. Greaseproof paper may come into contact with the heating element and catch fire.

- ▶ Never place greaseproof paper loosely over accessories when preheating the appliance and while cooking.

- ▶ Always cut greaseproof paper to size and use a plate or baking tin to hold it down.

Overheating of the appliance may cause a fire. If the appliance is installed behind a decorative door or unit door, this will result in a build-up of heat during operation with the decorative door or unit door closed.

- ▶ Only operate the appliance when the decorative door or unit door is open.

### **⚠ WARNING – Risk of burns!**

The appliance and its parts that can be touched become hot during use.

- ▶ Caution should be exercised here in order to avoid touching heating elements.
- ▶ Young children under 8 years of age must be kept away from the appliance.

Accessories and cookware get very hot.

- ▶ Always use oven gloves to remove accessories or cookware from the cooking compartment.

When the cooking compartment is hot, any alcoholic vapours inside may catch fire. The appliance door may spring open. Hot steam and jets of flame may escape.

- ▶ Only use small quantities of drinks with a high alcohol content in food.
- ▶ Do not heat spirits ( $\geq 15\%$  vol.) when undiluted (e.g. for marinating or pouring over food).
- ▶ Open the appliance door carefully.

### **⚠ WARNING – Risk of scalding!**

The accessible parts of the appliance become hot during operation.

- ▶ Never touch these hot parts.
- ▶ Keep children at a safe distance.

Hot steam may escape when you open the appliance door. Steam may not be visible, depending on the temperature.

- ▶ Open the appliance door carefully.
- ▶ Keep children at a safe distance.

If there is water in the cooking compartment when it is hot, this may create hot steam.

- ▶ Never pour water into the cooking compartment when the cooking compartment is hot.

### **⚠ WARNING – Risk of injury!**

Scratched glass in the appliance door may develop into a crack.

- ▶ Do not use any harsh or abrasive cleaners or sharp metal scrapers to clean the glass on the appliance door, as they may scratch the surface.

The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.

- ▶ Keep your hands away from the hinges. Components inside the appliance door may have sharp edges.

- ▶ Wear protective gloves.

Alcoholic vapours may catch fire in the hot cooking compartment, and the appliance door may spring open and may fall off. The door panels may shatter and fragment.

→ *"Preventing material damage", Page 6*

- ▶ Only use small quantities of drinks with a high alcohol content in food.
- ▶ Do not heat spirits ( $\geq 15\%$  vol.) when undiluted (e.g. for marinating or pouring over food).
- ▶ Open the appliance door carefully.

### **⚠ WARNING – Risk of electric shock!**

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

If the insulation of the power cord is damaged, this is dangerous.

- ▶ Never let the power cord come into contact with hot appliance parts or heat sources.
- ▶ Never let the power cord come into contact with sharp points or edges.
- ▶ Never kink, crush or modify the power cord.

An ingress of moisture can cause an electric shock.

- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

If the appliance or the power cord is damaged, this is dangerous.

- ▶ Never operate a damaged appliance.
- ▶ Never operate an appliance with a cracked or fractured surface.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- ▶ Call customer services. → *Page 22*

### **⚠ WARNING – Risk of suffocation!**

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

Children may breathe in or swallow small parts, causing them to suffocate.

- ▶ Keep small parts away from children.
- ▶ Do not let children play with small parts.

## **1.5 Microwave**

CAREFULLY READ THE IMPORTANT SAFETY INSTRUCTIONS AND KEEP THEM SAFE FOR FUTURE USE

### **⚠ WARNING – Risk of fire!**

Using the appliance for anything other than its intended purpose is dangerous and may cause damage. For example, heated slippers and pillows filled with grain or cereal may catch fire, even several hours later.

- ▶ Never dry food or clothing with the appliance.
- ▶ Never heat up slippers, pillows filled with grain or cereal, sponges, damp cleaning cloths or similar with the appliance.
- ▶ The appliance must only be used to prepare food and drink.

Food and its packaging and containers may catch fire.

- ▶ Never heat food in heat-retaining packaging.
- ▶ Do not leave food unattended while it is heating in containers made of plastic, paper or other combustible materials.
- ▶ Never set the microwave power too high or the cooking time too long. Follow the instructions provided in this user manual.
- ▶ Never use the microwave to dry food.
- ▶ Never defrost or heat food with a low water content, such as bread, at too high a microwave power or for too long.

Cooking oil may catch fire.

- ▶ Never use the microwave to heat cooking oil on its own.

### **⚠ WARNING – Risk of explosion!**

Liquids and other food may easily explode when in containers that have been tightly sealed.

- ▶ Never heat liquids or other food in containers that have been tightly sealed.

### **⚠ WARNING – Risk of burns!**

Foods with peel or skin may burst or explode during heating, or even afterwards.

- ▶ Never cook eggs in their shell or heat hard-boiled eggs in their shell.
- ▶ Never cook shellfish or crustaceans.
- ▶ Always prick the yolk of eggs before microwaving.
- ▶ The skin of foods that have a peel or skin, such as apples, tomatoes, potatoes and sausages, may burst. Before heating, prick the peel or skin.

Heat is not distributed evenly through baby food.

- ▶ Never heat baby food in closed containers.

- ▶ Always remove the lid or teat.
- ▶ Stir or shake well after heating.
- ▶ Check the temperature before giving the food or drink to a child.

Heated food gives off heat. The cookware may become hot.

- ▶ Always use oven gloves to remove cookware or accessories from the cooking compartment.

Airtight packaging may burst when food is heated.

- ▶ Always follow the instructions on the packaging.
- ▶ Always use oven gloves to remove the dishes from the cooking compartment.

The accessible parts of the appliance become hot during operation.

- ▶ Never touch these hot parts.
- ▶ Keep children at a safe distance.


Using the appliance for anything other than its intended purpose is dangerous. This is because, for instance, overheated slippers, pillows filled with grain or cereal, sponges and damp cleaning cloths, etc., may cause burns to the skin.

- ▶ Never dry food or clothing with the appliance.
- ▶ Never heat up slippers, pillows filled with grain or cereal, sponges, damp cleaning cloths or similar with the appliance.
- ▶ The appliance must only be used to prepare food and drink.

### **⚠ WARNING – Risk of scalding!**

There is a possibility of delayed boiling when a liquid is heated. This means that the liquid reaches the boiling temperature without the usual steam bubbles rising to the surface. Exercise caution even when only gently shaking the container. The hot liquid may suddenly boil over and splatter.

- ▶ Always place a spoon in the container when heating liquids. This prevents delayed boiling.

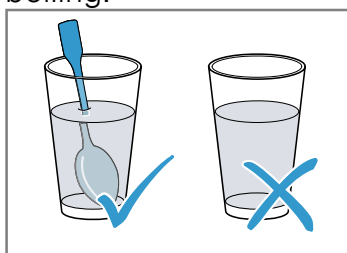

### **⚠ WARNING – Risk of injury!**

Unsuitable cookware may crack. Porcelain or ceramic cookware can have small perforations in the handles and lid. These perforations conceal a cavity below. If moisture penetrates this cavity, it could cause the cookware to crack.

- ▶ Only use microwave-safe cookware. Cookware and containers made from metal or cookware with metal edging may lead to sparks being formed during simple microwave operation. The appliance is damaged.
- ▶ Never use metal containers during microwave-only operation.
- ▶ Only use microwave-safe cookware or use the microwave in combination with a type of heating.

### **⚠ WARNING – Risk of electric shock!**

The appliance uses a high voltage.

- ▶ Never remove the casing.

### **⚠ WARNING – Risk of serious harm to health!**

Inadequate cleaning may destroy the surface of the appliance, reduce its service life, and lead to dangerous situations, such as escaping microwave energy.

- ▶ Clean the appliance on a regular basis, and remove any food residue immediately.
- ▶ Always keep the cooking compartment, door seal, door and door stop clean.  
→ "Cleaning and servicing", Page 18

Never operate the appliance if the cooking compartment door or the door seal is damaged. Microwave energy may escape.

- ▶ Never use the appliance if the cooking compartment door, the door seal or the plastic door frame is damaged.
- ▶ Any repair work must only be carried out by customer service.

Microwave energy will escape from appliances that do not have any casing.

- ▶ Never remove the casing.
- ▶ For any maintenance or repair work, contact the customer service.

## 2 Preventing material damage

### 2.1 General

#### ATTENTION!

Alcoholic vapours may catch fire in the hot cooking compartment and cause permanent damage to the appliance. The appliance door may spring open due to an explosion and it may fall off. The door panels may shatter and fragment. Due to the resulting negative pressure, the cooking compartment may become considerably deformed inwards.

- ▶ Do not heat spirits ( $\geq 15\%$  vol.) when undiluted (e.g. for marinating or pouring over food).

When the cooking compartment is hot, any water inside it will create steam. The change in temperature may cause damage.

- ▶ Never pour water into the cooking compartment when it is still hot.

The prolonged presence of moisture in the cooking compartment leads to corrosion.

- ▶ Always wipe away the condensation after cooking. Always allow the cooking compartment to cool down with the door closed after cooking at high temperatures.
- ▶ Do not keep moist food in the cooking compartment for a long time with the door closed.
- ▶ Do not store food in the cooking compartment.
- ▶ Take care not to trap anything in the appliance door.

If the seal is very dirty, the appliance door will no longer close properly during operation. This may damage the front of adjacent kitchen units.

- ▶ Keep the seal clean at all times.
- ▶ Never operate the appliance if the seal is damaged or missing.

Sitting or placing objects on the appliance door may damage it.

- ▶ Do not place, hang or support objects on the appliance door.

With certain models, accessories may scratch the door pane when closing the appliance door.

- ▶ Always push accessories fully into the cooking compartment.

### 2.2 Microwave

Follow these instructions when using the microwave.


#### ATTENTION!

Metal touching the wall of the cooking compartment will cause sparks, which may damage the appliance or the inner door pane.

- ▶ Metal (e.g. a spoon in a glass) must be kept at least 2 cm from the cooking compartment walls and the inside of the door.

Placing aluminium containers in the appliance may cause sparks, which will damage the appliance.

- ▶ Do not use aluminium containers in the appliance. Operating the appliance without food in the cooking compartment may lead to overloading.
- ▶ Do not switch on the microwave unless there is food inside. The only exception to this rule is when performing a short cookware test.

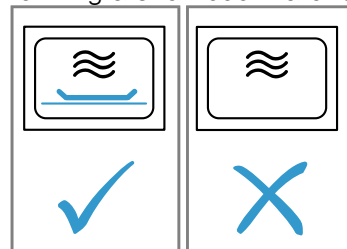

If you prepare several bags of microwave popcorn in immediate succession at a microwave power level that is too high, the cooking compartment may be damaged.

- ▶ Leave the appliance to cool down for several minutes between each use.
- ▶ Never set a microwave power level that is too high.
- ▶ Use a maximum microwave output of 600 watts.
- ▶ Always place the popcorn bag on a glass plate.

The microwave feed is damaged by the removal of the cover.

- ▶ Never remove the cover of the microwave feed in the cooking compartment.

Using unsuitable cookware may result in damage.

- ▶ When using the grill, the microwave combi mode or the hot air, only use tableware that can withstand the high temperatures.

## 3 Environmental protection and saving energy

### 3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

- ▶ Sort the individual components by type and dispose of them separately.

### 3.2 Saving energy

If you follow these instructions, your appliance will use less power.

**Note:** To save energy, the display is dimmed after 1 minute in standby mode.

Only preheat the appliance if the recipe or the recommended settings tell you to do so.

- Not preheating the appliance can reduce the energy used.

Use dark-coloured, black-coated or enamelled baking tins.

- These types of baking tin absorb the heat particularly well.

When cooking multiple dishes, do so in succession or in parallel.

- The cooking compartment is heated after cooking the first dish. This reduces the cooking time for the following dishes.

If the cooking time is relatively long, you can switch the appliance off 10 minutes before the cooking time ends.

- There will be enough residual heat to finish cooking the dish.

Allow frozen food to defrost before cooking.

- This saves the energy that would otherwise be required to defrost it.

Open the appliance door as little as possible during operation.

- This will maintain the temperature in the cooking compartment and eliminate the need for the appliance to reheat.

Heat two cups of liquid at the same time.

- Heating several dishes at the same time requires less energy than heating dishes one after the other.

Hide the clock in standby mode.


- The appliance saves energy in standby mode.

**Note:** You can find the information required as per Regulation (EU) 2023/826 online at [www.neff-home.com](http://www.neff-home.com) on the product and service pages for your appliance, in the user manual and additional documents.

## 4 Familiarising yourself with your appliance

### 4.1 Controls

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

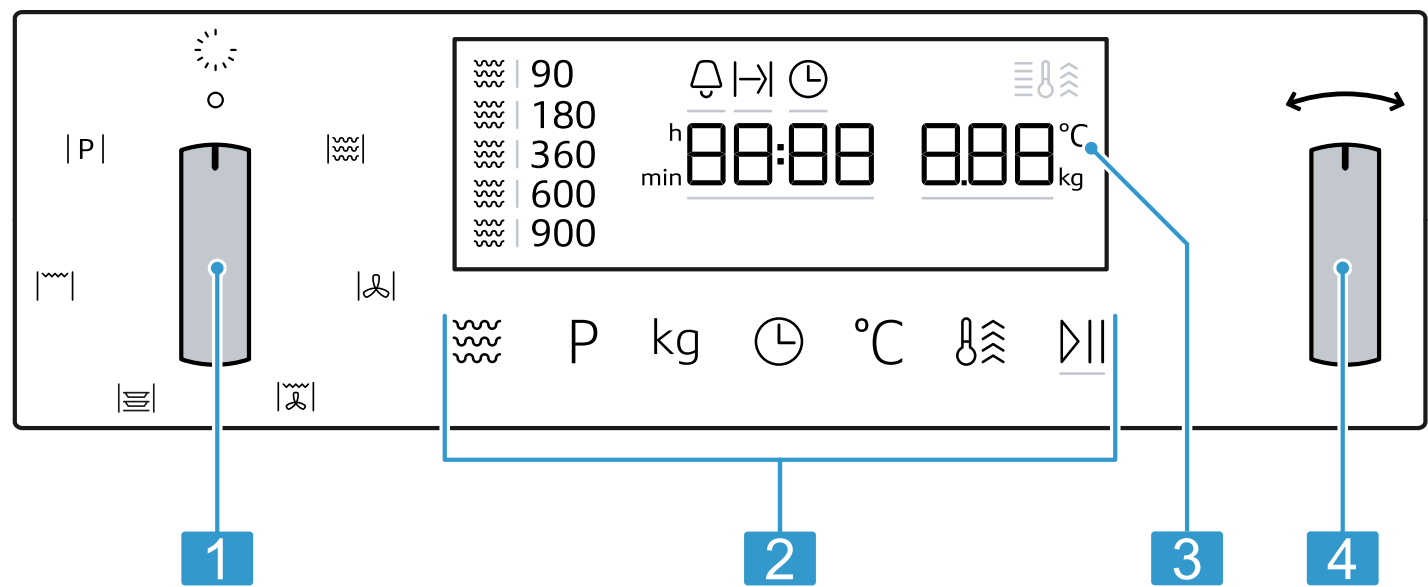

On certain models, specific details such as the colour and shape may differ from those pictured.

|   |                   |
|---|-------------------|
| 1 | Function selector |
| 2 | Touch fields      |
| 3 | Display           |
| 4 | Rotary selector   |

#### Function selector

Use the function selector to set the types of heating and other functions.  
On some product variants, the function selector can be pushed in.

If you turn the function selector from the off position to a function, it takes a few seconds for the relevant function to be available.

#### Rotary selector

Use the rotary selector to change the settings values shown in the display.  
On some product variants, the rotary selector can be pushed in.  
In selection lists, e.g. programmes, the first selection follows the last.  
For values, e.g. weight, turn the rotary selector back the other way when you reach the minimum or maximum value.

#### Touch fields

Touch fields are touch-sensitive surfaces. To select a function, touch the relevant field.


| Symbol | Name                 | Use  |
|--------|----------------------|--|
| ☼      | Microwave            | Select the microwave power levels or switch on the microwave function for a type of heating. |
| P      | Automatic programmes | Call up the selection of automatic programmes.   |
| 🕒      | Time-setting options | Timer, cooking time or set the time.   |
| °C     | Temperature          | Select set the temperature.  |



| Symbol | Name       | Use   |
|--------|------------|---|
| kg     | Weight     | Select set the weight.  |
| ⏻      | Start/stop | Press briefly: Start or stop operation.<br>Press and hold: End operation. The settings are reset. |

### Display

You can see the current setting values or options in the display.

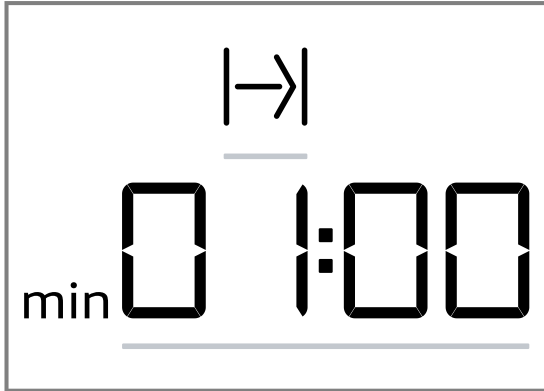

|               |   |
|---------------|---|
| Active value  | The directly adjustable value is highlighted white with a red bar underlined. You can use the rotary selector to change the active value. |
| Passive value | You cannot directly adjust values outside of the brackets. If you want to change a value, you must first activate the value.              |

### Display elements

Here you can find a short explanation of the various display elements.

| Symbol  | Name            | Meaning  |
|---------|-----------------|--|
| 🔔       | Timer           | If the symbol is highlighted, the timer appears in the display.        |
| ⏻       | Cooking time    | If the symbol is highlighted, the cooking time appears in the display. |
| 🕒       | Clock           | If the symbol is highlighted, the clock appears in the display.        |
| h:min   | Hours/minutes   | The time is displayed in hours and minutes.                            |
| min:sec | Minutes/seconds | The time is displayed in minutes and seconds.                          |
| 🔥       | Rapid heating   | If the symbol is highlighted, rapid heating is activated.              |
| °C      | Temperature     | The temperature is displayed in °C.                                    |
| kg      | Weight          | The weight is displayed in kg.   |

### Temperature display

The temperature display shows the heating progress.



After operation starts, the thermometer lights up and the bars next to it light up one after another to display the heating up progress of the interior temperature. When all the bars are lit, the appliance has reached the set temperature. When using the grill, all the bars are lit from the start.

When using the microwave, there is no temperature display.





 
Due to thermal inertia, the temperature displayed may differ slightly from the actual temperature inside the cooking compartment.

### Night mode

To save energy, the control panel brightness is automatically reduced to a lower level between 10 p.m. and 5.59 a.m.

## 4.2 Types of heating

Here you can find an overview of the types of heating. You can find recommendations on using the types of heating.

| Symbol   | Name             | Temperature/levels  | Use   |
|--|------------------|---|---|
|  | Microwave        | Microwave power settings:<br>■ 90 W<br>■ 180 W<br>■ 360 W<br>■ 600 W<br>■ 900 W | For defrosting, cooking and heating foods and liquids.                              |
|  | Hot air          | 40 °C<br>100-230 °C   | Let yeast dough rise, defrost cream cakes.<br>For baking and roasting on one level. |
|  | Hot air grilling | 100-230 °C  | Roasting poultry, whole fish and large pieces of meat.                              |
|  | Plate warming    | 30-70 °C  | Warming plates.   |
|  | Grill            | Grill settings:<br>■ 1 = low<br>■ 2 = medium<br>■ 3 = high                      | Grilling flat items such as steak and sausages, or making toast. Browning food.     |
| P  | Programmes       | -   | There are preprogrammed settings for many dishes.                                   |

## 4.3 Cooking compartment

The functions in the cooking compartment make your appliance easier to use.

### Interior lighting

When you open the appliance door, the light in the cooking compartment switches on. If the appliance door remains open for longer than 15 minutes, the light switches off again.

In most operating modes, the interior lighting switches on as soon as operation starts. The interior lighting switches off again when operation stops.

You can specify whether you want the interior lighting to switch on during operation in the basic settings.

→ Page 18

### Cooling fan

The cooling fan switches on and off as required. The hot air escapes through the ventilation slots above the appliance door.

### ATTENTION!

Covering the ventilation slots will cause the appliance to overheat.

 
- Do not cover the ventilation slots.

To cool the cooking compartment more quickly after operation, the cooling fan continues to run for a certain period afterwards. If the appliance is running in microwave operation, the appliance remains cool, but the cooling fan still switches on. The cooling fan may continue to run even when microwave operation has ended.

### Condensation

Condensation can occur in the cooking compartment and on the appliance door when cooking. Condensation is normal and does not adversely affect appliance operation. Wipe away the condensation after cooking.

## 4.4 Appliance door

If you open the appliance door during operation, operation stops. If the appliance door is closed, you can continue operation with .

# 5 Accessories

Use original accessories. These have been made especially for your appliance.

The accessories supplied may differ depending on the appliance model.

| Accessories | Use   |
|-------------|---|
| Wire rack   | <ul style="list-style-type: none"> <li>■ Wire rack for baking and roasting in oven operation.</li> <li>■ Wire rack for grilling, e.g. steaks, sausages and bread</li> <li>■ Wire rack as a storage space, e.g. for flat ovenproof dishes</li> </ul> |

## 5.1 Other accessories

You can purchase other accessories from our customer service, specialist retailers or online.

You will find a comprehensive range of products for your appliance in our brochures and online:

[www.neff-home.com](http://www.neff-home.com)

Accessories are appliance-specific. When purchasing accessories, always quote the exact product number (E no.) of your appliance.

You can find out which accessories are available for your appliance in our online shop or from our customer service.

### Glass roasting dish

Use

- Stews
- Bakes

### Pizza tray



Use

- Tray bakes
- Biscuits


## 5.2 Inserting the accessory

The accessory can be inserted in two positions.


- ▶ Insert the accessory so that it does not touch the appliance door.

|  |  |
|--|--|
|  | Insert the accessory in the high position. |
|  | Insert the accessory in the low position.  |

The accessories supplied may differ depending on the appliance model.

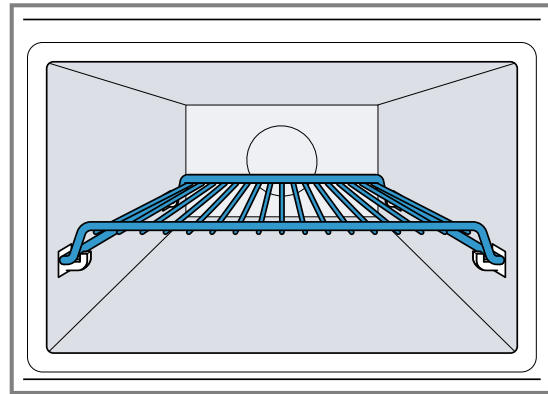

The image shows the  engagement position.

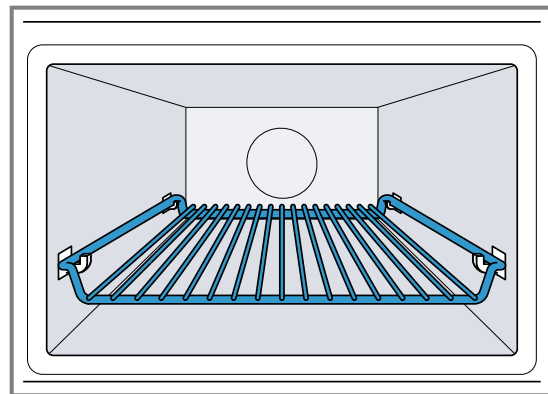

The image shows the  engagement position.

# 6 Before using for the first time

Configure the settings for initial start-up. Clean the appliance and accessories.

## 6.1 Performing the initial configuration

After connecting the appliance to the power supply or following a power cut, the following prompt appears in the display for the setting the time. It may take a few seconds for the prompt to appear.

- ▶ Connect the appliance to the power supply.
- ✓ 12:00 flashes in the display and ☉ lights up.


### Setting the time

1. Set the time using the rotary selector.
2. Press ☉.
- ✓ The time is set.

**Note:** In order to reduce the energy consumption of your appliance in standby, you can hide the time.

## 6.2 Cleaning the appliance before using it for the first time

Clean the cooking compartment and accessories before using the appliance to prepare food for the first time.

1. Make sure that there is no leftover packaging, accessories or other objects in the cooking compartment.
2. Close the appliance door.
3. Use the function selector to set Hot air .
4. Use the rotary selector to set the temperature to 180 °C.
5. Press ▷||.
- ✓ The appliance starts.
6. After one hour, press ▷||.
7. Turn the function selector to the off position.
- ✓ The appliance is cleaned.
- ✓ The appliance is switched off.

## 6.3 Cleaning the accessories

- ▶ Clean the accessory thoroughly with soapy water and a soft dish cloth.



## 7 Basic operation

### 7.1 Switching on the appliance



- ▶ Turn the function selector to switch on the appliance.
- ✓ The appliance is ready to use.
- ✓ A default value appears in the display.

### 7.2 Switching off the appliance

Switch your appliance off when you are not using it. If no settings are applied for an extended period, the appliance switches itself off automatically.

 



- ▶ Turn the function selector to the off position.
- ✓ The appliance stops any ongoing functions.
- ✓ The display shows the time.
- ✓ Some displays also remain visible in the display when the appliance has been switched off.

### 7.3 Setting the type of heating and temperature

1. Use the function selector to set the required type of heating.
  - ✓ A default value appears in the display.
2. If necessary, change the settings. To do this, touch the appropriate field and use the rotary selector to change the value.
3. Press .
  - ✓ The appliance starts.
  - ✓  lights up.
  - ✓ With a type of heating with temperature, the temperature display lights up gradually.
4. If necessary, use the rotary selector to change the temperature while the oven is in operation. When the appliance is in operation, you cannot set the temperature to 40 °C.

### 7.4 Pausing operation

You can pause operation at any time.

1. Press  or open the appliance door.
  - ✓ Operation is paused.
  - ✓  flashes.
2. To continue operation, close the appliance door and press .
  - ✓ Operation continues.
  - ✓  lights up.

### 7.5 Stopping operation



You can stop operation at any time.

- ▶ Turn the function selector to the off position. The fan may continue to run after operation has been paused or stopped.
- ✓ The appliance stops any ongoing functions.

### 7.6 Rapid heating






To save time, you can shorten the preheat time for certain types of heating from a minimum temperature of 100 °C.

You can use rapid heating for the following types of heating:



-  Hot air, exception: Hot air 40 °C
-  Hot air grilling

#### Configuring rapid heating

To ensure an even cooking result, do not place the accessory with the food in the cooking compartment until rapid heating has finished. Do not set a cooking time until rapid heating has finished.

1. Set a suitable type of heating and a temperature of at least 100 °C.
2. Press .
  - ✓  lights up in the display.
3. Press .
  - ✓ Rapid heating starts.
  - ✓  lights up.
  - ✓ Once the set temperature has been reached, the rapid heating process ends. A signal sounds and  goes out in the display. Your appliance continues to run with the set type of heating and temperature.
  - ✓ Rapid heating is automatically deactivated within no more than 15 minutes.

#### Cancelling rapid heating

 

- ▶ Press .
- ✓  goes out in the display. Your appliance continues to run with the set type of heating and temperature.

### 7.7 Safety switch-off function

For your safety, the appliance has a safety switch-off function. The appliance is automatically switched off if it has been in operation for an extended period.

How long the appliance waits before switching itself off depends on the setting:

- Hot air 40 °C and preheating: 24 hours
- Hot air 100-230°C and hot air grilling: 5 hours
- Grill: 90 minutes

If the appliance has been switched off by the safety switch-off function,  is shown in the display. You can confirm this message by pressing .

## 8 Microwave

You can use the microwave to cook, heat up, bake or defrost food very quickly. The microwave can be used on its own or in combination with a type of heating.

When the appliance is in microwave-only mode, you can place the cookware on the cooking compartment floor or on the wire rack.

## 8.1 Microwave power settings

Here you can find an overview of the different microwave power settings and when to use them.

| Microwave output in watts | Maximum cooking time | Use   |
|---------------------------|----------------------|---|
| 90 W                      | 1:30 hours           | Defrosting delicate foods.  |
| 180 W                     | 1:30 hours           | Defrosting food and continued cooking.  |
| 360 W                     | 1:30 hours           | Cooking meat and fish or heating delicate foods.                                |
| 600 W                     | 1:30 hours           | Heating and cooking food.   |
| 900 W                     | 30 minutes           | Heating liquids.<br>The maximum power setting is not designed for heating food. |

### Default settings

The appliance suggests a cooking time for each microwave power setting. You can accept this value or change it in the relevant area.

## 8.2 Microwave-safe cookware and accessories

To heat food evenly and avoid damaging your appliance, it is important to use the right cookware and accessories.

Read the manufacturer's instructions before using any cookware in the microwave. If in doubt, carry out a cookware test. Testing cookware for microwave suitability → *Page 13*

### Microwave-safe

| Cookware and accessories  | Reason   |
|---|--|
| Cookware made from heat-resistant, microwave-safe material: <ul style="list-style-type: none"> <li>■ Glass</li> <li>■ Glass ceramic</li> <li>■ Porcelain</li> <li>■ Temperature-resistant plastic</li> <li>■ Fully glazed ceramic without cracks</li> </ul> | Microwaves do not damage heat-resistant material.  |
| Accessories supplied:<br>Wire rack  | The wire rack supplied has been designed specifically for the appliance and is therefore suitable for microwave use.   |
| Metal cutlery   | You can use metal cutlery, e.g. place a spoon in a glass, to prevent delayed boiling.<br><b>Note:</b> Metal may create sparks, which could damage the cooking compartment and the inner door pane. Metal must be kept at least 2 cm from the cooking compartment walls and the inside of the door. |

### Not microwave-safe

| Cookware and accessories                | Reason   |
|---|--|
| Metal cookware                          | Microwaves cannot pass through metal. The food is barely heated or not heated at all.  |
| Cookware with gold or silver decoration | Microwaves can damage gold and silver decoration. Only use this kind of cookware if the manufacturer guarantees that it is microwave-safe. |

### Microwave-safe in MicroCombi mode

In MicroCombi mode, a microwave output of up to 600 W watts can be added to a type of heating. This means that metal dishes can be used in MicroCombi mode.

| Cookware and accessories | Reason   |
|--------------------------|--|
| Accessories supplied     | The accessories supplied, e.g. the wire rack, do not create sparks in MicroCombi mode.   |
| Metal baking tins        | Cakes will brown both on top and on the bottom, as baking tins made of metal conduct heat more efficiently.<br><b>Note:</b> Metal may create sparks, which could damage the cooking compartment and the inner door pane. Metal must be kept at least 2 cm from the cooking compartment walls and the inside of the door. |

## 8.3 Testing cookware for microwave suitability

Test cookware to see whether it is suitable for microwave use. Testing cookware is the only time the appliance should be operated in microwave mode without any food inside.

**⚠ WARNING – Risk of scalding!**

The accessible parts of the appliance become hot during operation.

- ▶ Never touch these hot parts.
- ▶ Keep children at a safe distance.

1. Place the empty cookware in the cooking compartment.
2. Set the appliance to run for 30 seconds to 1 minute at maximum power.
3. Press **▶||** to start.
4. Check the cookware several times:
  - If the cookware is cold or warm to the touch, it is suitable for microwave use.
  - If the cookware becomes hot or sparks are created, stop the cookware test. The cookware is not microwave-safe.


**8.4 Configuring the microwave settings**



Different power levels and settings are available for different types of food and recipes.

**ATTENTION!**

Operating the appliance without food in the cooking compartment may lead to overloading.

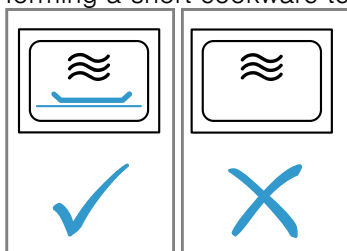- ▶ Do not switch on the microwave unless there is food inside. The only exception to this rule is when performing a short cookware test.



1. Read the safety instructions → *Page 4* and the section on how to prevent material damage → *Page 6*.
2. Read the information on microwave-safe cookware and accessories. → *Page 13*
3. Set the function selector to .
4. To set the required microwave power setting, press .
5. Use the rotary selector to set the required cooking time.
6. Press **▶||** to start.  
You can change the cooking time at any time during operation using the rotary selector.
  - ✓ The cooking time starts to count down and the microwave starts.
  - ✓ Once the cooking time has elapsed, the microwave stops and a signal sounds.
7. When the dish is cooked, turn the function selector to the off position.


**8.5 Intervals for the time settings**

 The interval for setting a cooking time in microwave operation changes with the length of the cooking time.

| Cooking time | Interval   |
|--------------|------------|
| 0–1 minutes  | 5 seconds  |
| 1–3 minutes  | 10 seconds |
| 3–15 minutes | 30 seconds |

| Cooking time               | Interval  |
|----------------------------|-----------|
| 15 minutes – 1 hour        | 1 minute  |
| 1 hour – 1 hour 30 minutes | 5 minutes |

**8.6 Changing the microwave power**

- ▶ Press .  
Repeatedly pressing switches from the highest to the lowest microwave power setting.  
If the microwave function is only added after starting, the appliance pauses. Press **▶||** to start.

**8.7 Pausing operation**

You can pause operation at any time.

1. Press **▶||** or open the appliance door.
  - ✓ Operation is paused.
  - ✓ **▶||** flashes.
2. To continue operation, close the appliance door and press **▶||**.
  - ✓ Operation continues.
  - ✓ **▶||** lights up.



 
**8.8 Stopping operation**

You can stop operation at any time.




- ▶ Turn the function selector to the off position.  
The fan may continue to run after operation has been paused or stopped.
- ✓ The appliance stops any ongoing functions.

**8.9 MicroCombi**

To reduce the cooking time, you can use certain of the types of heating in combination with microwave mode. MicroCombi mode can be used with the following types of heating:


-  Hot air
-  Hot air grilling
-  Grill

   Exceptions:

-  Microwave power setting 900 W
-  Hot air 40 °C
-  Warming plates


 
**Configuring MicroCombi mode**

Switch on microwave mode in addition to a type of heating.

1. Set the function selector to a combinable type of heating.
  - ✓ A default value for the temperature is displayed.
2. Set the temperature using the rotary selector.
3. To set the required microwave power setting, press .  
  - ✓ A default value for the cooking time is displayed.
4. Use the rotary selector to set the cooking time.
5. Press **▶||** to start.
  - ✓ The cooking time counts down and MicroCombi mode starts.
  - ✓ Once the cooking time has elapsed, MicroCombi mode ends automatically and a signal sounds.







## Changing the microwave power

  - ▶ Press . Repeatedly pressing switches from the highest to the lowest microwave power setting. If the microwave function is only added after starting, the appliance pauses. Press  to start.

## Pausing operation

You can pause operation at any time.

1. Press  or open the appliance door.
  - ✓ Operation is paused.
  - ✓  flashes.
2. To continue operation, close the appliance door and press .
  - ✓ Operation continues.
  - ✓  lights up.

## Stopping operation


 
 

You can stop operation at any time.

- ▶ Turn the function selector to the off position. The fan may continue to run after operation has been paused or stopped.
- ✓ The appliance stops any ongoing functions.

## 8.10 Heating and drying the cooking compartment

Always dry the cooking compartment after operation to ensure that no moisture remains.

1. Allow the appliance to cool down.

2. Remove the worst of the food residues from the cooking compartment immediately.
3. Wipe any humidity from the cooking compartment floor.
4. Use the function selector to set the  type of heating.
5. Press °C.
6. Use the rotary selector to set the temperature to 150 °C.
7. Press  twice.
  - ✓  is highlighted in the display.
8. Use the rotary selector to set a cooking time of 15 minutes.
9. Press  to start.
  - ✓ The drying process starts and ends after 15 minutes.
10. Open the appliance door to allow the steam to escape.

## 8.11 Drying the cooking compartment by hand

Always dry the cooking compartment after operation to ensure that no moisture remains.

1. Allow the appliance to cool down.
2. Remove the worst of the food residues from the cooking compartment.
3. Dry the cooking compartment with a sponge.
4. Leave the appliance door open for 1 hour so that the cooking compartment dries completely.

# 9 Automatic programmes

Automatic programmes can help you prepare different dishes by selecting the optimal settings automatically.

## 9.1 Tips on configuring the settings for dishes

Follow these tips to achieve optimal cooking results.

- Only use food that is in perfect condition.

- Only use meat at refrigerator temperature.
- Only use frozen food straight from the freezer.
- Take the food out of its packaging and weigh it. If you cannot set the exact weight on the appliance, round the weight up or down.
- Place the food in the cold cooking compartment.
- Always use microwave-safe, heat-resistant cookware, for example made of glass or ceramic.

## 9.2 Overview of dishes

The appliance prompts you to enter the weight. You can only enter weights within the intended weight range.

### Defrost

When the appliance is in microwave-only mode, you can place the cookware on the cooking compartment floor or on the wire rack.

| No. | Food           | Accessories                  | Weight range in kg | Information   |
|-----|----------------|------------------------------|--------------------|---|
| P01 | Minced meat    | Shallow cookware without lid | 0,2-1,0            | After turning, remove any minced meat that has already defrosted.   |
| P02 | Pieces of meat | Shallow cookware without lid | 0,2-1,0            | Drain off any liquid when turning and under no circumstances use it for other purposes or allow it to come into contact with other foods. |









| No.        | Food                    | Accessories                  | Weight range in kg | Information   |
|------------|-------------------------|------------------------------|--------------------|---|
| <i>P03</i> | Chicken, chicken pieces | Shallow cookware without lid | 0,4-1,8            | Drain off any liquid when turning and under no circumstances use it for other purposes or allow it to come into contact with other foods. |
| <i>P04</i> | Bread                   | Shallow cookware without lid | 0,2-1,0            | Bread should only be defrosted in the required amounts, as it quickly becomes stale. If possible, separate the slices.                    |

### Cooking programmes

When the appliance is in microwave-only mode, you can place the cookware on the cooking compartment floor or on the wire rack.



| No.        | Food       | Accessories       | Weight range in kg | Information   |
|------------|------------|-------------------|--------------------|---|
| <i>P05</i> | Rice       | Cookware with lid | 0,05-0,2           | Do not use boil-in-the-bag rice. Rice foams a lot during cooking. Enter the uncooked weight (without liquid). Add two to two and a half times the amount of liquid to the rice. |
| <i>P06</i> | Potatoes   | Cookware with lid | 0,15-1,0           | Cut into pieces of equal size. Add 1 tbsp water per 100 g.  |
| <i>P07</i> | Vegetables | Cookware with lid | 0,15-1,0           | Cut into pieces of equal size. Add 1 tbsp water per 100 g.  |

### Combi cooking programmes

| No.        | Food                             | Accessories            | Rack position   | Weight range in kg | Information   |
|------------|----------------------------------|------------------------|---|--------------------|---|
| <i>P08</i> | Bake, frozen                     | Cookware without lid   |  | 0,4-1,2            | The bake should not be more than 3 cm deep.   |
| <i>P09</i> | Chicken, whole                   | Cookware without lid   |  | 0,5-2,0            | Breast side down.   |
| <i>P10</i> | Sirloin, medium                  | Cookware without lid   |  | 0,5-1,5            |   |
| <i>P11</i> | Pork neck joint                  | Cookware with lid      |  | 0,5-2,0            |   |
| <i>P12</i> | Lamb, medium                     | Cookware with lid      |  | 0,8-2,0            | Shoulder joint or boned leg of lamb   |
| <i>P13</i> | Meatloaf                         | Cookware without lid   |  | 0,5-1,5            | The meat loaf should not be more than 7 cm deep.  |
| <i>P14</i> | Fish, whole                      | Cookware without lid   |  | 0,3-1,0            | Scale the fish beforehand. Place the fish in the cookware in its "swimming position".                                       |
| <i>P15</i> | Rice stew with fresh ingredients | Deep cookware with lid |  | 0,05-0,2           | Add one part rice, three parts water, four parts vegetables. Only use fresh ingredients. Only enter the weight of the rice. |

## 9.3 Applying settings for dishes

- Set the function selector to P.
- ✓ The display shows the first dish number and a default value for the weight.
- Use the rotary selector to set the required weight.
- Press kg.
- Turn the rotary selector to set the weight. Before starting, you can use P and kg to switch between the dish and the weight.
- ✓ The appliance automatically sets the right cooking time.

- Press . After starting, the dish and weight cannot be changed. The set weight can be displayed with kg.
- ✓ The appliance starts.
- ✓  lights up.
- ✓ You will see the cooking time counting down.
- ✓ For some programmes, a short audible signal sounds when you have to stir or turn the dish.
- When the cooking time has elapsed:
  - A signal sounds. The appliance stops heating.
  - Turn the function selector to the off position.

## 9.4 Pausing operation

You can pause operation at any time.

1. Press **⏸** or open the appliance door.
  - ✓ Operation is paused.
  - ✓ **⏸** flashes.
2. To continue operation, close the appliance door and press **⏸**.
  - ✓ Operation continues.

- ✓ **⏸** lights up.

## 9.5 Stopping operation

You can stop operation at any time.

- ▶ Turn the function selector to the off position.  
The fan may continue to run after operation has been paused or stopped.
- ✓ The appliance stops any ongoing functions.

# 10 Time-setting options

Your appliance features time-setting options that you can use to set the cooking time and the timer.

## 10.1 Checking the time-setting options

**Requirement:** If multiple time-setting options are set, the corresponding symbols light up. During operation, the timer and cooking time are available. In standby, the timer and the time are available.

- ▶ Press **⏸** until **⏸**, **⏰** or **⌚** is in focus.
- ✓ The respective value is shown in the display.

## 10.2 Changing the time

**Requirement:** To change the time on the clock, the appliance must be switched off.

1. Press **⏸** twice.
  - ✓ **⏸** and the time appear on the display.
2. Set the time using the rotary selector.
3. Press **⏸**.
  - ✓ The time is set.
  - ✓ If **⏸** is not pressed, the set value is applied after a few seconds.

**Note:** In order to reduce the energy consumption of your appliance in standby, you can hide the time.

## 10.3 Cooking time

You can set a time after which operation ends automatically. The maximum cooking time is 23 hours and 59 minutes.

### Setting the cooking time

1. Set the type of heating and temperature.
2. Press **⏸** until **⌚** is in focus.
3. Use the rotary selector to set the required cooking time.
4. Press **⏸**.
  - ✓ The appliance starts.
  - ✓ **⏸** lights up.
  - ✓ You will see the cooking time counting down.

### Ending the cooking time

**Requirement:** A signal sounds. The appliance stops heating. **00:00** is shown in the display.

1. Press **⏸**.
  - ✓ The signal is switched off.
2. Turn the function selector to the off position.
  - ✓ The appliance is switched off.

### Changing the cooking time

- ▶ Change the cooking time using the rotary selector.
- ✓ After a few seconds, the display shows the changed cooking time.
- ✓ You will see the cooking time counting down.

### Clearing the cooking time

1. If the timer function has been set, press **⏸**.
2. Use the rotary selector to set the cooking time to **00:00**.
  - ✓ After a few seconds, the cooking time is cleared. The appliance does not interrupt operation.

## 10.4 Timer

You can set the time on the timer. Once this time has elapsed, a signal tone sounds. You can set a maximum time on the timer of 24 hours.

The function works independently of the operation and other time-setting options. The timer signal is different from other signals.

### Setting the timer

1. Press **⏸** until **⏰** is in focus.
2. Use the rotary selector to set the required timer duration.
  - ✓ After a few seconds, the appliance displays the set timer duration.
  - ✓ The timer starts.
  - ✓ **⏰** lights up in the display.
  - ✓ You will see the timer duration counting down.

### Ending the timer

**Requirement:** A signal sounds. **00:00** is shown in the display.

- ▶ Press any symbol.
- ✓ The timer is switched off.

### Changing the timer

- ▶ Use the rotary selector to change the timer duration.
- ✓ After a few seconds, the appliance displays the set timer duration.

### Cancelling the timer

- ▶ Use the rotary selector to set the timer duration to **0:00**.
  - ✓ The timer is switched off.



## 11 Basic settings

You can configure the basic settings for your appliance to meet your needs.

### 11.1 Overview of the basic settings

Here you can find an overview of the basic settings and factory settings. The basic settings depend on the features of your appliance.

**Note:** If the childproof lock is activated, the time is automatically displayed.

| Display | Basic setting      | Selection  | Description   |
|---------|--------------------|--|---|
| c01     | Signal duration    | 1 = short = 10 seconds<br>2 = medium = 30 seconds <sup>1</sup><br>3 = long = 2 minutes | Set the signal duration for after a cooking time elapses or the timer reaches zero. |
| c02     | Button tone        | 0 = off<br>1 = on <sup>1</sup>   | Switch the button tones on or off.  |
| c03     | Display brightness | 1 = low<br>2 = medium <sup>1</sup><br>3 = high   | Set the brightness of the display.  |
| c04     | Time indicator     | 0 = off<br>1 = on <sup>1</sup>   | Show the clock time in the display.   |
| c05     | Interior lighting  | 0 = off<br>1 = on <sup>1</sup>   | Switch the interior lighting on or off.   |
| c06     | Factory setting    | 0 = off <sup>1</sup><br>1 = on   | Reset the changed settings to the factory settings.                                 |
| c08     | Signal volume      | 1 = low<br>2 = medium <sup>1</sup><br>3 = high   | Setting the signal volume.  |

<sup>1</sup> Factory setting (may vary according to model)

### 11.2 Changing the basic settings

**Requirement:** The appliance must be switched off.

- Press and hold ☰ for a few seconds.
  - ✓ The first basic setting is shown on the display.
- Use the rotary selector to change the basic setting.
- Press ☰.
  - ✓ The next basic setting is shown on the display.
- Use ☰ to select all of the required basic settings and change the values.

- To save the changes, press and hold ☰ for a few seconds.

**Note:** The changes to the basic settings will be retained even after a power cut.

### 11.3 Discarding changes to the basic settings

- ▶ Turn the function selector.
- ✓ All changes are discarded and not saved.

## 12 Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

### 12.1 Cleaning products

Only use suitable cleaning agents.

#### **WARNING – Risk of electric shock!**

An ingress of moisture can cause an electric shock.

- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

#### **ATTENTION!**

Unsuitable cleaning agents damage the surfaces of the appliance.

- ▶ Do not use harsh or abrasive cleaning products.

- ▶ Do not use cleaning products with a high alcohol content.
- ▶ Do not use hard scouring pads or cleaning sponges.
- ▶ Do not use any special cleaners for cleaning the appliance while it is hot.
- ▶ Only use glass cleaners, glass scrapers or stainless steel care products if recommended in the cleaning instructions for the relevant part.

Salt contained in new sponge cloths may damage surfaces.

- ▶ Wash new sponge cloths thoroughly before use.

You can find out which cleaning products are suitable for each surface or part of the appliance in the individual cleaning instructions.

## 12.2 Cleaning the appliance

Clean the appliance as specified. This will ensure that the different parts and surfaces of the appliance are not damaged by incorrect cleaning or unsuitable cleaning products.

### **WARNING – Risk of burns!**

The appliance and its parts that can be touched become hot during use.

- ▶ Caution should be exercised here in order to avoid touching heating elements.
- ▶ Young children under 8 years of age must be kept away from the appliance.

### **WARNING – Risk of fire!**

Loose food remnants, fat and meat juices may catch fire.

- ▶ Before using the appliance, remove the worst of the food residues and remnants from the cooking compartment, heating elements and accessories.

### **WARNING – Risk of injury!**

Scratched glass in the appliance door may develop into a crack.

- ▶ Do not use any harsh or abrasive cleaners or sharp metal scrapers to clean the glass on the appliance door, as they may scratch the surface.

1. Read the information on cleaning products.  
→ *Page 18*
2. Observe the information on cleaning the appliance components or surfaces.
3. Unless otherwise specified:
  - Clean the components of the appliance with hot soapy water and a dish cloth.
  - Dry with a soft cloth.

## 12.3 Cleaning the cooking compartment

1. Follow the instructions for  
→ *"Cleaning products", Page 18.*
2. Use hot soapy water or a vinegar solution for cleaning.
3. Use oven cleaner to remove very heavy soiling. Only use oven cleaner when the cooking compartment is cold.  
Do not use oven spray, other aggressive oven cleaners or abrasive materials.  
To avoid scratching the surface, do not use scouring pads, rough sponges or pan cleaners.  
**Tip:** To eliminate unpleasant odours, heat up a cup of water with a few drops of lemon juice for 1 to 2 minutes at maximum microwave power. Always place a spoon in the container to prevent delayed boiling.
4. Dry with a soft cloth.

### **Cleaning the glass floor**

1. Follow the instructions for  
→ *"Cleaning products", Page 18.*
2. Clean the glass floor with hot soapy water and a soft dish cloth.  
Do not use metal or glass scrapers for cleaning. Do not scour.
3. Dry with a soft cloth.

## 12.4 Cleaning the front of the appliance

### **ATTENTION!**

Incorrect cleaning may damage the front of the appliance.

- ▶ Do not use glass cleaner, metal scrapers or glass scrapers for cleaning.
- ▶ To prevent corrosion on stainless steel fronts, remove any limescale, grease, starch and albumin (e.g. egg white) stains immediately.
- ▶ On stainless steel surfaces, use special stainless steel cleaning products suitable for hot surfaces.

1. Read the information on cleaning products.  
→ *Page 18*
2. Clean the front of the appliance using hot soapy water and a dish cloth.  
**Note:** Slight differences in colour on the front of the appliance are caused by the use of different materials, such as glass, plastic and metal.
3. For stainless steel appliance fronts, apply a thin layer of the stainless steel cleaning product with a soft cloth.  
You can obtain the stainless steel cleaning products from the after-sales service or the online shop.
4. Dry with a soft cloth.

## 12.5 Cleaning the control panel

### **ATTENTION!**

Incorrect cleaning may damage the control panel.

- ▶ Never wipe the control panel with a wet cloth.
1. Read the information on cleaning products.  
→ *Page 18*
  2. Clean the control panel using a microfibre cloth or a soft, damp cloth.
  3. Dry with a soft cloth.

## 12.6 Cleaning the accessories

1. Read the information on cleaning products.  
→ *Page 18*
2. Soften baked-on food remnants with a damp dish cloth and hot soapy water.
3. Clean the accessory with hot soapy water and a soft dish cloth or a scrubbing brush.
4. Clean the wire rack with stainless steel cleaner or in the dishwasher.  
Use steel wool or oven cleaner to remove very heavy soiling.
5. Dry with a soft cloth.

## 12.7 Tips on caring for your appliance

Follow the tips on appliance care to make sure your appliance functions properly at all times.

| Measure  | Advantage                                       |
|--|---|
| Always keep the appliance clean and remove dirt immediately. Always clean the cooking compartment after use. | Prevents dirt from accumulating and burning on. |

| Measure   | Advantage                              |
|---|--|
| Remove splashes and patches of limescale, grease, starch and albumin (e.g. egg white) immediately.                                | Prevents corrosion.                    |
| Use the pizza tray for very moist cakes.  | Keeps the cooking compartment cleaner. |
| Use suitable cookware for roasting, e.g. a roasting dish.   | Keeps the cooking compartment cleaner. |
| You can purchase suitable cleaning and care products from our after-sales service. Always follow the manufacturer's instructions. |  |

## 12.8 Cleaning the door panels

### ATTENTION!

Incorrect cleaning may damage the door panes.

- ▶ Do not use a glass scraper.

1. Read the information on cleaning products.  
→ *Page 18*
2. Clean the door panels with a soft dish cloth and glass cleaner.

**Note:** Shadows on the door panels, which look like streaks, are caused by reflections made by the interior lighting.

3. Dry with a soft cloth.

## 12.9 Cleaning the door seal

### ATTENTION!

Incorrect cleaning may damage the door seal.

- ▶ Do not use metal scrapers or glass scrapers for cleaning.
- ▶ Do not use abrasive cleaning agents.

1. Read the information on cleaning products.  
→ *Page 18*
2. Clean the door seal with hot soapy water and a soft dish cloth.
3. Dry with a soft cloth.

## 12.10 Drying the cooking compartment by hand

### ⚠ WARNING – Risk of burns!

The appliance will become hot during operation.

- ▶ Allow the appliance to cool down before cleaning it.

1. Remove any food remnants from the cooking compartment.
2. Dry the cooking compartment with a soft cloth.
3. Leave the appliance door open until the cooking compartment has dried completely.

## 12.11 EasyClean

The cleaning aid is a quick alternative for occasionally cleaning the cooking compartment. The cleaning aid softens dirt by evaporating the soapy water. It is then easier to remove the dirt.

### ATTENTION!

Incorrect cleaning may damage the appliance.

- ▶ Never pour liquid into the cooking compartment.

### Setting the cleaning aid

1. Add a few drops of washing-up liquid to a cup of water.
2. Place a spoon in the cup to prevent delayed boiling.
3. Place the cup in the centre of the cooking compartment.
4. Set the microwave output to 600 W.
5. Set the cooking time to 5 minutes.
6. Start the microwave.
7. Once the cooking time has elapsed, leave the doors closed for an additional three minutes.
8. Wipe out the cooking compartment with a soft cloth.
9. Leave the cooking compartment to dry with the door open.

# 13 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

### ⚠ WARNING – Risk of injury!

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ If the appliance is defective, call Customer Service.  
→ *"Customer Service", Page 22*

### ⚠ WARNING – Risk of electric shock!

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

## 13.1 Malfunctions

| Fault                         | Cause and troubleshooting   |
|-------------------------------|---|
| The appliance is not working. | The mains plug of the power cord is not plugged in.<br>▶ Connect the appliance to the power supply. |

| <b>Fault</b>   | <b>Cause and troubleshooting</b>  |
|--|---|
| The appliance is not working.  | <p>The circuit breaker in the fuse box has tripped.</p> <ul style="list-style-type: none"> <li>▶ Check the circuit breaker in the fuse box.</li> </ul> <p>There has been a power cut.</p> <ul style="list-style-type: none"> <li>▶ Check whether the lighting in your room or other appliances are working.</li> </ul> <p>Malfunction</p> <ol style="list-style-type: none"> <li>1. Switch off the fuse in the fuse box.</li> <li>2. Switch the fuse back on after approx. 10 seconds.</li> <li>✓ If the fault was a one-off, the message disappears.</li> <li>3. If the message appears again, call the after-sales service. Please specify the exact error message when calling.<br/>→ "Customer Service", Page 22</li> </ol> |
| Appliance is not heating, colon is flashing in the display.                | <p>Demo mode is activated.</p> <ol style="list-style-type: none"> <li>1. Briefly disconnect the appliance from the power supply by switching the circuit breaker in the fuse box off and then on again.</li> <li>2. Deactivate demo mode within 5 minutes by changing the basic setting <math>\epsilon 7</math> to <math>\bar{0}</math>.</li> </ol>   |
| Microwave operation is stopped.  | <p>Malfunction</p> <ol style="list-style-type: none"> <li>1. Switch off the fuse in the fuse box.</li> <li>2. Switch the fuse back on after approx. 10 seconds.</li> <li>✓ If the fault was a one-off, the message disappears.</li> <li>3. If the message appears again, call the after-sales service. Please specify the exact error message when calling.<br/>→ "Customer Service", Page 22</li> </ol>  |
| Food takes longer than usual to heat up.                                   | <p>The microwave power setting was too low.</p> <ul style="list-style-type: none"> <li>▶ Select a higher microwave power setting.</li> </ul> <p>You have placed a larger amount of food than normal in the appliance.</p> <ul style="list-style-type: none"> <li>▶ Set a longer cooking time.<br/>Double the amount needs double the cooking time.</li> </ul> <p>The food was colder than usual.</p> <ul style="list-style-type: none"> <li>▶ Stir or turn the food during cooking.</li> </ul>  |
| Microwave not working.   | <p>The door was not fully closed.</p> <ul style="list-style-type: none"> <li>▶ Check whether food residue or debris is trapped in the door.</li> </ul> <p>▷   has not been pressed.</p> <ul style="list-style-type: none"> <li>▶ Press ▷  .</li> </ul>  |
| 12:00 flashes in the display and the ⌚ symbol lights up.                   | <p>There has been a power cut.</p> <ul style="list-style-type: none"> <li>▶ Reset the time.<br/>→ "Setting the time", Page 11</li> </ul>  |
| The appliance is not in operation. A cooking time is shown in the display. | <p>▷   has not been pressed.</p> <ul style="list-style-type: none"> <li>▶ Press ▷  .</li> </ul>   |

## 13.2 Information on display panel

| <b>Fault</b>   | <b>Cause and troubleshooting</b>   |
|--|--|
| A message with "D" or "E" appears in the display, e.g. D0111 or E0111. | <p>Malfunction</p> <ol style="list-style-type: none"> <li>1. Switch off the fuse in the fuse box.</li> <li>2. Switch the fuse back on after approx. 10 seconds.</li> <li>✓ If the fault was a one-off, the message disappears.</li> <li>3. If the message appears again, call the after-sales service. Please specify the exact error message when calling.<br/>→ "Customer Service", Page 22</li> </ol> |
| The message $E2$ appears in the display.                               | <p>The automatic safety cut-out function has been activated.</p> <ul style="list-style-type: none"> <li>▶ Press any button.</li> </ul>   |
| The message $E11$ appears in the display.                              | <p>Moisture in the control panel.</p> <ul style="list-style-type: none"> <li>▶ Allow the control panel to dry.</li> </ul>  |

## 14 Disposal

### 14.1 Disposing of old appliance

Valuable raw materials can be reused by recycling.

1. Unplug the appliance from the mains.
2. Cut through the power cord.
3. Dispose of the appliance in an environmentally friendly manner.  
Information about current disposal methods are available from your specialist dealer or local authority.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

## 15 Customer Service

Detailed information on the warranty period and terms of warranty in your country is available from our after-sales service, your retailer or on our website.

 
If you contact Customer Service, you will require the product number (E-Nr.) and the production number (FD) of your appliance.

The contact details for Customer Service can be found in the enclosed Customer Service directory or on our website.

This product contains light sources from energy efficiency class G. These light sources are available as a spare part and should only be replaced by trained specialist staff.

### 15.1 Product number (E-Nr.) and production number (FD)

You can find the product number (E-Nr.) and the production number (FD) on the appliance's rating plate. You will see the rating plate with these numbers if you open the appliance door.



Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

## 16 How it works

Here, you can find the ideal settings for various dishes as well as the best accessories and cookware. We have tailored these recommendations to your appliance.

### 16.1 What is the best way to proceed?

**Tip:** Your appliance has programmed settings for a selection of dishes. If you want to be guided by the appliance, use the automatic programmes.

#### **WARNING – Risk of burns!**

Foods with peel or skin may burst or explode during heating, or even afterwards.

- ▶ Never cook eggs in their shell or heat hard-boiled eggs in their shell.
- ▶ Never cook shellfish or crustaceans.
- ▶ Always prick the yolk of eggs before microwaving.
- ▶ The skin of foods that have a peel or skin, such as apples, tomatoes, potatoes and sausages, may burst. Before heating, prick the peel or skin.

#### **ATTENTION!**

Acidic food may damage the wire rack

- ▶ Do not place acidic food, such as fruit or food with an acidic marinade directly on the wire rack.

#### **Note: Information for those allergic to nickel**

In rare cases, small amounts of nickel may pass into the food.

1. Select a suitable dish from the overviews.

#### **Tips**

- If you are using the appliance for the first time, proceed in accordance with the following basic information:
    - → "Safety", Page 2
    - → "Condensation", Page 10
  - If you do not find the exact dish or application that you want to prepare or implement, look for a similar dish and take the general information into consideration.
2. Remove any accessories from the cooking compartment.
  3. Select suitable cookware and accessories. Use the cookware and accessories listed in the recommended settings.
  4. Only preheat the appliance if the recipe or the recommended settings tell you to do so.
  5. Use the recommended settings when configuring the appliance settings.
  6. **WARNING – Risk of scalding!**  
Hot steam may escape when you open the appliance door. Steam may not be visible, depending on the temperature.
    - ▶ Open the appliance door carefully.
    - ▶ Keep children at a safe distance.
 When the dish is ready, switch off the appliance.



## 16.2 Defrosting, heating and cooking with the microwave

Recommended settings for defrosting, heating and cooking with the microwave.

The cooking time depends on the cookware, as well as on the temperature, composition and quantity of the food. This is why temperature ranges are given in the tables. Begin with the lower temperature and, if necessary, use a higher setting the next time. If you use different quantities than those specified in the table, adhere to the rule of thumb: Double the amount = almost double the time, half the amount = half the time.

### Tips on defrosting, heating and cooking with the microwave

Follow these tips for good results when defrosting, heating and cooking with the microwave.

| Issue  | Tip  |
|--|--|
| You want to prepare a different amount than that indicated in the table. | <p>Increase or reduce the cooking times using the following rule of thumb:</p> <ul style="list-style-type: none"> <li>Double the amount = almost double the cooking time</li> <li>Half the amount = half the cooking time</li> </ul> |

### Defrosting with the microwave

#### Note:

Cooking tips

- Use microwave-safe cookware without a lid.
- Turn or stir the food 2 to 3 times during this time. When turning, remove any liquid that escapes during defrosting.
- Delicate parts such as the legs and wings of chicken or fatty outer layers of roasts can be covered with small pieces of aluminium foil. The foil must not touch the cooking compartment walls. You can remove the foil halfway through the defrosting time.

| Recipe  | Accessory/cookware   | Microwave output in watts | Cooking time in mins |
|---|----------------------|---------------------------|----------------------|
| Whole pieces of beef, veal or pork (on the bone or boned), 800 g  | Cookware without lid | 1. 180<br>2. 90           | 1. 15<br>2. 10-20    |
| Whole pieces of beef, veal or pork (on the bone or boned), 1.0 kg | Cookware without lid | 1. 180<br>2. 90           | 1. 20<br>2. 15-25    |
| Whole pieces of beef, veal or pork (on the bone or boned), 1.5 kg | Cookware without lid | 1. 180<br>2. 90           | 1. 30<br>2. 20-30    |
| Pieces or slices of beef, veal or pork, 200 g <sup>1</sup>        | Cookware without lid | 1. 180<br>2. 90           | 1. 3<br>2. 10-15     |
| Pieces or slices of beef, veal or pork, 500 g <sup>1</sup>        | Cookware without lid | 1. 180<br>2. 90           | 1. 5<br>2. 15-20     |
| Pieces or slices of beef, veal or pork, 800 g <sup>1</sup>        | Cookware without lid | 1. 180<br>2. 90           | 1. 8<br>2. 15-20     |
| Minced meat, mixed, 200 g <sup>2</sup>                            | Cookware without lid | 90                        | 10-15                |
| Minced meat, mixed, 500 g <sup>2</sup>                            | Cookware without lid | 1. 180<br>2. 90           | 1. 5<br>2. 10-15     |
| Minced meat, mixed, 800 g   | Cookware without lid | 1. 180<br>2. 90           | 1. 10<br>2. 5-10     |
| Poultry or poultry portions, 600 g                                | Cookware without lid | 1. 180<br>2. 90           | 1. 8<br>2. 10-15     |
| Poultry or poultry portions, 1.2 kg                               | Cookware without lid | 1. 180<br>2. 90           | 1. 15<br>2. 25-35    |
| Duck, 2.0 kg  | Cookware without lid | 1. 180<br>2. 90           | 1. 20<br>2. 30-40    |
| Fish fillet, fish steak or slices, 400 g <sup>1</sup>             | Cookware without lid | 1. 180<br>2. 90           | 1. 5<br>2. 10-15     |

<sup>1</sup> Separate any defrosted parts.

<sup>2</sup> Remove any meat that has already defrosted.

<sup>3</sup> Only defrost cakes without icing, whipped cream, gelatine or custard.

| Recipe  | Accessory/cookware   | Microwave output in watts | Cooking time in mins |
|---|----------------------|---------------------------|----------------------|
| Whole fish, 300 g   | Cookware without lid | 1. 180<br>2. 90           | 1. 3<br>2. 10-15     |
| Whole fish, 600 g   | Cookware without lid | 1. 180<br>2. 90           | 1. 8<br>2. 10-15     |
| Vegetables, e.g. peas, 300 g                                  | Cookware without lid | 180                       | 10-15                |
| Vegetables, e.g. peas, 600 g                                  | Cookware without lid | 1. 180<br>2. 90           | 1. 8<br>2. 5-10      |
| Fruit, e.g. raspberries, 300 g <sup>1</sup>                   | Cookware without lid | 180                       | 7-10                 |
| Fruit, e.g. raspberries, 500 g <sup>1</sup>                   | Cookware without lid | 1. 180<br>2. 90           | 1. 8<br>2. 5-10      |
| Defrosting butter, 125 g                                      | Cookware without lid | 1. 180<br>2. 90           | 1. 1<br>2. 2-4       |
| Defrosting butter, 250 g                                      | Cookware without lid | 1. 360<br>2. 90           | 1. 1<br>2. 2-4       |
| Loaf of bread, 500 g  | Cookware without lid | 1. 180<br>2. 90           | 1. 6<br>2. 5-10      |
| Loaf of bread, 1.0 kg   | Cookware without lid | 1. 180<br>2. 90           | 1. 12<br>2. 15-25    |
| Cakes, plain, e.g. sponge cake, 500 g <sup>3</sup>            | Cookware without lid | 90                        | 15-25                |
| Cakes, plain, e.g. sponge cake, 750 g <sup>3</sup>            | Cookware without lid | 1. 180<br>2. 90           | 1. 5<br>2. 10-15     |
| Cakes, moist, e.g. fruit flan, cheesecake, 500 g <sup>3</sup> | Cookware without lid | 1. 180<br>2. 90           | 1. 5<br>2. 10-15     |
| Cakes, moist, e.g. fruit flan, cheesecake, 750 g <sup>3</sup> | Cookware without lid | 1. 180<br>2. 90           | 1. 7<br>2. 10-15     |

<sup>1</sup> Separate any defrosted parts.

<sup>2</sup> Remove any meat that has already defrosted.

<sup>3</sup> Only defrost cakes without icing, whipped cream, gelatine or custard.

## Defrosting and heating frozen food

### Note:

#### Cooking tips

- Use microwave-safe cookware with a lid. You can also use a plate or a microwave cover to cover the dish. Take ready meals out of the packaging.
- Distribute the food flat in the cookware. Food which lies flat cooks more quickly than food which is piled high.
- Turn or stir the food 2 to 3 times during this time.
- After heating, leave the food to rest for 1–2°minutes.
- The food transfers heat to the cookware. The cookware can become very hot. Use oven gloves.

| Dish   | Accessory/cookware | Microwave output in watts | Cooking time in mins |
|--|--------------------|---------------------------|----------------------|
| Menu, plated meal, ready meal, 300–400 g               | Cookware with lid  | 600                       | 10-15                |
| Soup, 400 g  | Cookware with lid  | 600                       | 8-15                 |
| Stew, 500 g  | Cookware with lid  | 600                       | 10-15                |
| Stew, 1 kg   | Cookware with lid  | 600                       | 20-25                |
| Slices or pieces of meat in sauce, e.g. goulash, 500 g | Cookware with lid  | 600                       | 25-30                |
| Slices or pieces of meat in sauce, e.g. goulash, 1 kg  | Cookware with lid  | 600                       | 25-30                |
| Fish, e.g. fillet steaks, 400 g                        | Cookware with lid  | 600                       | 10-15                |
| Fish, e.g. fillet steaks, 800 g                        | Cookware with lid  | 600                       | 18-20                |

<sup>1</sup> Add a little water to the food.

| Dish  | Accessory/cookware | Microwave output in watts | Cooking time in mins |
|---|--------------------|---------------------------|----------------------|
| Side dishes, e.g. rice, pasta, cooked, 250 g <sup>1</sup>               | Cookware with lid  | 600                       | 2-5                  |
| Side dishes, e.g. rice, pasta, cooked, 500 g <sup>1</sup>               | Cookware with lid  | 600                       | 8-10                 |
| Vegetables, e.g. peas, broccoli, carrots, precooked, 300 g <sup>1</sup> | Cookware with lid  | 600                       | 5-8                  |
| Vegetables, e.g. peas, broccoli, carrots, precooked, 600 g <sup>1</sup> | Cookware with lid  | 600                       | 14-17                |
| Creamed spinach, 500 g  | Cookware with lid  | 600                       | 11-16                |


<sup>1</sup> Add a little water to the food.

## Heating in the microwave

### WARNING – Risk of scalding!

There is a possibility of delayed boiling when a liquid is heated. This means that the liquid reaches the boiling temperature without the usual steam bubbles rising to the surface. Exercise caution even when only gently shaking the container. The hot liquid may suddenly boil over and splatter.

- ▶ Always place a spoon in the container when heating liquids. This prevents delayed boiling.

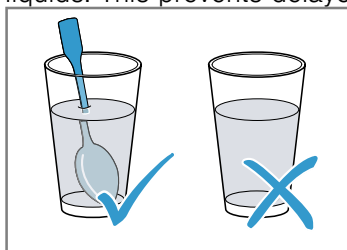

### ATTENTION!

Metal touching the wall of the cooking compartment will cause sparks, which may damage the appliance or the inner door pane.

- ▶ Metal (e.g. a spoon in a glass) must be kept at least 2 cm from the cooking compartment walls and the inside of the door.

### Note:

#### Cooking tips

- Use microwave-safe cookware with a lid. You can also use a plate or a microwave cover to cover the dish. Take ready meals out of the packaging.
- Distribute the food flat in the cookware. Food which lies flat cooks more quickly than food which is piled high.
- Turn or stir the food 2 to 3 times during this time.
- After heating, leave the food to rest for 1–2 minutes.
- The food transfers heat to the cookware. The cookware can become very hot. Use oven gloves.
- Baby food:
  - Place bottles without a teat or lid on the wire rack.
  - Stir or shake well after heating.
  - Always check the temperature of the baby food.

| Dish   | Accessory/cookware   | Microwave output in watts | Cooking time in mins |
|--|--|---------------------------|----------------------|
| Menu, plated meal, ready meal, approx. 400 g           | Cookware without lid   | 600                       | 5-10                 |
| Drinks, 200 ml   | Glass<br>Place a spoon in the glass                                  | 900                       | 1-2                  |
| Drinks, 500 ml   | Glass<br>Place a spoon in the glass                                  | 900                       | 2-4                  |
| Baby food, e.g. baby bottles, 150 ml <sup>1</sup>      | Place bottles without a teat or lid on the cooking compartment floor | 360                       | 1-2                  |
| Soup, 2 cups, 175 g each                               | Cookware without lid   | 900                       | 4-5                  |
| Soup, 4 cups, 175 g each                               | Cookware without lid   | 900                       | 5-6                  |
| Slices or pieces of meat in sauce, e.g. goulash, 500 g | Cookware with lid  | 600                       | 10-15                |
| Stew, 400 g  | Cookware with lid  | 600                       | 5-10                 |
| Stew, 800 g  | Cookware with lid  | 600                       | 10-15                |

<sup>1</sup> Stir or shake well after heating. Check the temperature.

<sup>2</sup> Add a little water to the food.

| Dish                           | Accessory/cookware   | Microwave output in watts | Cooking time in mins |
|--------------------------------|----------------------|---------------------------|----------------------|
| Vegetables, 150 g <sup>2</sup> | Cookware without lid | 600                       | 2-3                  |
| Vegetables, 300 g <sup>2</sup> | Cookware without lid | 600                       | 3-5                  |

<sup>1</sup> Stir or shake well after heating. Check the temperature.  
<sup>2</sup> Add a little water to the food.

## Cooking with the microwave

### Note:

#### Cooking tips

- Use microwave-safe cookware with a lid. You can also use a plate or a microwave cover to cover the dish. Take ready meals out of the packaging.
- Distribute the food flat in the cookware. Food which lies flat cooks more quickly than food which is piled high.
- After heating, leave the food to rest for 1–2 minutes.
- The food transfers heat to the cookware. The cookware can become very hot. Use oven gloves.
- The food will retain most of its natural flavor. Use salt and seasonings sparingly.
- Cut vegetables and potatoes into equal-sized pieces. Add 1–2 tbsp water for every 100 g. Stir while cooking.
- Add double the amount of liquid to the rice.

| Recipe   | Accessory/cookware | Microwave output in watts | Cooking time in mins |
|--|--------------------|---------------------------|----------------------|
| Whole chicken, fresh, no giblets, 1.3 kg                 | Cookware with lid  | 600                       | 30-35                |
| Fish fillet, fresh, 400 g                                | Cookware with lid  | 600                       | 10-15                |
| Vegetables, fresh, 250 g                                 | Cookware with lid  | 600                       | 5-10                 |
| Vegetables, fresh, 500 g                                 | Cookware with lid  | 600                       | 10-15                |
| Potatoes, 250 g  | Cookware with lid  | 600                       | 8-10                 |
| Potatoes, 500 g  | Cookware with lid  | 600                       | 10-15                |
| Rice, 125 g + 250 ml water                               | Cookware with lid  | 1. 600<br>2. 180          | 1. 7-9<br>2. 15-20   |
| Rice, 250 g + 500 ml water                               | Cookware with lid  | 1. 600<br>2. 180          | 1. 8-10<br>2. 20-25  |
| Desserts, e.g. blancmange (instant), 500 ml <sup>1</sup> | Cookware with lid  | 600                       | 5-8                  |

<sup>1</sup> Stir 2 to 3 times with a whisk while heating.

## Blancmange made from blancmange powder

### WARNING – Risk of burns!

Heated food gives off heat. The cookware may become hot.

- ▶ Always use oven gloves to remove cookware or accessories from the cooking compartment.

1. Mix together one packet of blancmange powder with sugar and a little milk in a tall microwave-suitable bowl in accordance with the package instructions so that there are no lumps.

2. Add the rest of the milk and stir again.
3. Place the bowl into the cooking compartment and close the appliance door.
4. Set the appliance according to the recommended settings.
5. Only stir for the first time after 3 minutes. Then stir again every minute until it reaches the required consistency.  
The cooking time depends on the temperature of the milk and the container that is used.

## Microwave popcorn

### Note:

#### Preparation tips

- Use shallow, heat-resistant glass ovenware. Do not use porcelain or heavily curved plates.
- Always place the glass ovenware on the wire rack.
- Adjust the cooking time to the quantity.

- To prevent the popcorn from burning, after 1 minute 30 seconds, briefly take the popcorn bag out of the oven and shake it. Take care as the bag will be hot!

| Dish                     | Accessory/cookware      | Microwave output in watts | Cooking time in mins |
|--------------------------|-------------------------|---------------------------|----------------------|
| Microwave popcorn, 100 g | Wire rack<br>Glass tray | 600                       | 3-5                  |

### Tips on defrosting, heating and cooking with the microwave next time

Follow these tips for good results when defrosting, heating and cooking with the microwave.

| Issue   | Tip   |
|---|---|
| Your food is too dry.   | <ul style="list-style-type: none"> <li>■ Reduce the cooking time or select a lower microwave power setting.</li> <li>■ Cover the food and add more liquid.</li> </ul> |
| The time has elapsed but the food is not defrosted, hot or cooked.  | Increase the cooking time. Large quantities and food which is piled high require longer times.  |
| The time has elapsed but your food is not yet done on the inside, but is already overdone on the outside. | <ul style="list-style-type: none"> <li>■ Stir occasionally.</li> <li>■ Reduce the microwave power setting and increase the cooking time.</li> </ul>                   |
| After defrosting, the poultry or meat is defrosted on the outside but not defrosted in the middle.        | <ul style="list-style-type: none"> <li>■ Reduce the microwave power setting.</li> <li>■ Turn large pieces of frozen food several times.</li> </ul>                    |

## 16.3 Cakes and baked items



Recommended settings for cakes and baked items. The temperature and baking time depend on the consistency and amount of the mixture. This is why ranges are given in the tables. Begin with the lower value and, if necessary, use a higher setting the next time. A lower temperature results in more even browning.

### Cakes in tins

#### Note:

Preparation tips

- The recommended settings apply to dishes placed into the non-preheated appliance.
- Always place the cake tin in the centre of the wire rack.
- Use heat-resistant, microwave-safe bakeware.
- Metal baking tins are not suitable for baking with microwaves.
- Dark-coloured metal baking tins are most suitable.

| Dish                            | Accessories/cookware     | Rack position   | Type of heating   | Temperature in °C | Microwave output in watts | Cooking time in mins |
|---------------------------------|--------------------------|---|---|-------------------|---------------------------|----------------------|
| Sponge cake, basic <sup>1</sup> | Vienna ring tin/loaf tin |  |  | 170-180           | 90                        | 40-50                |












 

 

 




<sup>1</sup> Allow cakes to cool in the oven for approx. 20 minutes.

### Baking tips

  We have compiled a few tips to help you achieve a good baking result.

| Issue   | Tip  |
|---|--|
| You want your cake to rise evenly.                                    | <ul style="list-style-type: none"> <li>■ Only grease the base of the springform cake tin.</li> <li>■ After baking, use a knife to carefully loosen the cake from the baking tin.</li> </ul>  |
| You do not want small baked items to stick to each other when baking. | Leave a minimum clearance of 2 cm around each item to be baked. This allows enough space for the baked items to expand and brown on all sides.   |
| Determine whether the cake is ready.                                  | Push a cocktail stick into the highest point on the cake. If no dough sticks to the wood, the cake is ready.   |
| You want to bake using your own recipe.                               | Use similar items in the baking tables as a guide.   |
| Use bakeware made of silicone, glass, plastic or ceramic.             | <ul style="list-style-type: none"> <li>■ The bakeware must be heat-resistant up to 250 °C.</li> <li>■ Cakes in this bakeware brown less.</li> <li>■ When using the microwave, the cooking time is shorter than the time shown in the table.</li> </ul> |



| Dish  | Accessories/<br>cookware            | Rack position   | Type of heating   | Temperature in °C | Microwave output in watts | Cooking time in mins |
|---|-------------------------------------|---|---|-------------------|---------------------------|----------------------|
| Sponge cake, delicate (e.g. sand cake) <sup>1</sup>               | Vienna ring tin/loaf tin            |  |  | 150-170           | -                         | 70-90                |
| Sponge flan base  | Flan base tin                       |  |  | 160-180           | -                         | 30-40                |
| Fruit cake, delicate, made of sponge                              | Springform/ring tin                 |  |  | 170-190           | 90                        | 30-45                |
| 3-egg fatless sponge cake   | Springform cake tin, diameter 26 cm |  |  | 170-180           | -                         | 30-40                |
| Fruit tart or cheesecake with shortcrust pastry base <sup>1</sup> | Springform cake tin, diameter 26 cm |  |  | 170-180           | 180                       | 35-45                |
| Pizza   | Round pizza tray                    |  |  | 220-230           | -                         | 15-25                |
| Savoury cakes, (e.g. quiche)                                      | Springform cake tin, diameter 26 cm |  |  | 200-220           | -                         | 50-70                |
| Nut cake  | Springform cake tin, diameter 26 cm |  |  | 170-180           | 90                        | 30-35                |
| Yeast dough with moist topping                                    | Round pizza tray                    |  |  | 170-190           | -                         | 55-65                |
| Plaited loaf with 500 g flour                                     | Round pizza tray                    |  |  | 170-190           | -                         | 35-45                |











<sup>1</sup> Allow cakes to cool in the oven for approx. 20 minutes.

## Small baked items

### Note:

Preparation tips

- The recommended settings apply to dishes placed into the non-preheated appliance.
- Always place the cake tin in the centre of the wire rack.
- Dark-coloured metal baking tins are most suitable.





| Dish        | Accessories/<br>cookware | Rack position   | Type of heating   | Temperature in °C | Cooking time in mins |
|-------------|--------------------------|---|---|-------------------|----------------------|
| Biscuits    | Round pizza tray         |  |  | 150-170           | 20-35                |
| Macaroons   | Round pizza tray         |  |  | 110-130           | 35-45                |
| Meringues   | Round pizza tray         |  |  | 100               | 80-100               |
| Muffins     | Muffin tray on wire rack |  |  | 160-180           | 35-40                |
| Puff pastry | Round pizza tray         |  |  | 190-200           | 35-45                |

## Bread and bread rolls

### Note:

Preparation tips

- The recommended settings apply to dishes placed into the non-preheated appliance.
- Always place the cake tin in the centre of the wire rack.
- Dark-coloured metal baking tins are most suitable.

| Dish                          | Accessories/<br>cookware | Rack position   | Type of heating   | Temperature in °C    | Cooking time in mins |
|-------------------------------|--------------------------|---|---|----------------------|----------------------|
| Bread, 1.5 kg                 | Loaf tin                 |  |  | 1. 230<br>2. 200-210 | 1. 10-15<br>2. 40-50 |
| Bread rolls, e.g. wheat rolls | Round pizza tray         |  |  | 210-230              | 25-35                |

## Tips for next time you bake

If something goes wrong when baking, you can find some tips here.

| Issue  | Tip  |
|--|--|
| Your cake collapses.   | <ul style="list-style-type: none"> <li>Note the ingredients and preparation instructions that are given in the recipe.</li> <li>Use less liquid.</li> <li>Or:</li> <li>Reduce the baking temperature by 10 °C and increase the baking time.</li> </ul>   |
| Your cake is too dry.  | Increase the baking temperature by 10 °C and shorten the baking time.  |
| Your cake is generally too light in colour.                                      | <ul style="list-style-type: none"> <li>Check the shelf position and accessories.</li> <li>Increase the baking temperature by 10 °C.</li> <li>Or:</li> <li>Increase the baking time.</li> </ul>   |
| Your cake is too light on top and too dark underneath.                           | Slide the cake in one level higher.  |
| Your cake is too dark on top and too light underneath.                           | <ul style="list-style-type: none"> <li>Slide the cake in one level lower.</li> <li>Reduce the baking temperature and increase the baking time.</li> </ul>  |
| Your cake is unevenly browned.   | <ul style="list-style-type: none"> <li>Reduce the baking temperature.</li> <li>Cut the greaseproof paper to a suitable size.</li> <li>Place the baking tin in the centre.</li> <li>As far as possible, shape small baked items to be the same size and thickness.</li> </ul>   |
| Your cake is cooked on the outside but is not fully baked through on the inside. | <ul style="list-style-type: none"> <li>Reduce the baking temperature and increase the baking time.</li> <li>Add less liquid.</li> <li>For cakes with a moist topping:               <ul style="list-style-type: none"> <li>Pre-bake the base.</li> <li>Sprinkle the baked base with almonds or breadcrumbs.</li> </ul> </li> <li>Place the topping on the base.</li> </ul> |

| Issue  | Tip   |
|--|---|
| The cake will not come out of the tin when turned upside down. | <ul style="list-style-type: none"> <li>Allow the cake to cool for 5–10 minutes after baking.</li> <li>Use a knife to carefully loosen the edge of the cake.</li> <li>Turn the cake tin upside down again and cover it several times with a cold, wet cloth.</li> <li>Next time you bake, grease the baking tin and sprinkle it with breadcrumbs.</li> </ul> |
| Sparks are generated between the tin and the wire rack.        | <ul style="list-style-type: none"> <li>Check that the tin is clean on the outside.</li> <li>Change the position of the tin in the cooking compartment.</li> <li>Continue baking without the microwave and increase the baking time.</li> </ul>  |

## 16.4 Roasting and grilling

Recommended settings for roasting and grilling  
The temperature and roasting time depend on the type and amount of food being cooked. This is why ranges are given in the tables. Begin with the lower value and, if necessary, use a higher setting the next time.

### Roasting in cookware

If you prepare dishes in cookware, you can remove them from the cooking compartment more easily and serve them directly in the cookware. When preparing food in cookware with a lid, the cooking compartment remains cleaner.

#### General information about roasting in cookware

- Use heat-resistant, microwave-safe cookware.
- Metal roasting dishes are not suitable for roasting with microwaves.
- Place the cookware onto the wire rack.
- Check in advance whether the cookware fits in the cooking compartment.
- Glass cookware is best.  
Place hot glass ovenware on a dry mat after cooking. The glass may crack if placed on a cold or wet surface.
- The cookware can become very hot. Use oven gloves to take the cookware out of the oven.
- Follow the manufacturer's instructions for your roasting dishes.

#### Cookware without lid

Use a deep roasting dish.

#### Cookware with lid

- Use a suitable lid that seals well.
- When roasting meat, there should be at least 3 cm between the food and the lid as the meat may expand.

- Meat, poultry and fish can also become crispy in a covered roasting dish. Use a roasting dish with a glass lid. If necessary, set a higher temperature.

### **⚠ WARNING – Risk of scalding!**

Very hot steam may escape when the lid is opened after cooking. Steam may not be visible, depending on the temperature.

- ▶ Lift the lid in such a way that the hot steam can escape away from you.
- ▶ Keep children away from the appliance.

### **Notes**

- Lean meat or pot roast
  - Add liquid to the cookware so that it is approx. 1/2 cm deep, e.g. water, wine, vinegar or similar liquid.  
The amount of liquid depends on the type of meat, what the cookware is made of and on whether or not a lid is used.  
More liquid needs to be added to enamelled or dark metal roasting pan than for glass cookware. Add slightly more liquid for pot roasts.
  - During roasting, the liquid in the roasting dish will evaporate. Carefully add liquid as necessary.
  - Turn pieces of meat halfway through the cooking time.
- Fish
  - When steaming fish, add one to three table-spoons of liquid to the cookware, e.g. lemon juice or vinegar.

### **Grilling**

Grill foods that should be crispy.



- Do not grill food with the oven door open.
- Do not preheat.
- Use food to be grilled that is of a similar weight and thickness.  
This allows the food to be grilled to brown evenly and remain succulent and juicy.
- Place the food to be grilled directly on the wire rack.
- Use grill tongs to turn the grilled items.  
If you pierce the meat with a fork, the juices will run out and it will become dry.

### **Beef**

#### **Note:**

Preparation tips

- The recommended settings apply to dishes placed into the non-preheated appliance.
- Turn sirloin and steaks halfway through the cooking time. Allow the dish to stand for around a further 10 minutes at the end.

| Dish                                | Accessories/<br>cookware          | Rack posi-<br>tion  | Type of<br>heating  | Temperature in<br>°C/grill setting | Microwave<br>output in<br>watts | Cooking<br>time in mins |
|-------------------------------------|-----------------------------------|---|---|------------------------------------|---------------------------------|-------------------------|
| Pot-roasted beef, ap-<br>prox. 1 kg | Wire rack<br>Cookware with<br>lid |  |  | 180-200                            | 180                             | 120-145                 |

- Do not add salt until after the meat has been grilled.  
Salt draws water from the meat.

**Note:** Dark meat, such as beef, browns more quickly than lighter-coloured meat, such as veal or pork. When grilling light-coloured meat or fish, these often only brown slightly on the surface, although they are cooked and juicy on the inside.


 

 
The grill element switches on and off continuously. This is normal. The frequency of this depends on the grill level that is set.

Smoke may be produced when grilling.

### **Tips for roasting and braising**

Follow these tips for good results when roasting and braising.

| Issue  | Tip  |
|--|--|
| Prevent lean meat from drying out.                         | ■ Coat lean meat with fat or oil as required and cover it with strips of bacon.  |
| Prepare joints with the rind on.                           | <ul style="list-style-type: none"> <li>■ Score the rind in a criss-cross pattern.</li> <li>■ Roast the joint with the rind facing down first.</li> </ul>   |
| Keep the cooking compartment as clean as possible.         | ■ Prepare the food in a covered roasting dish at a higher temperature.   |
| The meat should remain succulent and hot, e.g. roast beef. | <ul style="list-style-type: none"> <li>■ When the roast is ready, switch off the oven and leave it to rest for 10 minutes in the cooking compartment with the door closed. This helps distribute the meat juices more evenly. The resting time is not included in the indicated cooking time.</li> <li>■ After preparing it, wrap the food in foil.</li> </ul> |






 
| Dish  | Accessories/<br>cookware             | Rack posi-<br>tion  | Type of<br>heating  | Temperature in<br>°C/grill setting | Microwave<br>output in<br>watts | Cooking<br>time in mins |
|---|--------------------------------------|---|---|------------------------------------|---------------------------------|-------------------------|
| Sirloin, medium, ap-<br>prox. 1 kg                              | Wire rack<br>Cookware<br>without lid |  |  | 210-230                            | 180                             | 30-40                   |
| Beef steak, medium, 2-<br>3 pieces, 2-3 cm thick,<br>200 g each | Wire rack<br>Glass tray              |  |  | 3                                  | -                               | 20-30                   |

## Pork

### Note:

#### Preparation tips

- The recommended settings apply to dishes placed into the non-preheated appliance.
- Turn rindless joints halfway through the cooking time. Allow the joint to stand for around a further 10 minutes at the end.
- Place the joint in the cookware rind-side up. Score the rind. Do not turn the joint. Allow the joint to stand for around a further 10 minutes at the end.
- Turn neck steaks after 2/3 of the cooking time.





| Dish   | Accessories/<br>cookware             | Rack posi-<br>tion  | Type of<br>heating  | Temperature in<br>°C/grill setting | Microwave<br>output in<br>watts | Cooking<br>time in mins |
|--|--------------------------------------|---|---|------------------------------------|---------------------------------|-------------------------|
| Rindless joint, e.g. pork<br>neck, approx. 750 g | Wire rack<br>Cookware with<br>lid    |    |    | 220-230                            | 180                             | 40-50                   |
| Joint with rind, e.g.<br>shoulder, approx. 1 kg  | Wire rack<br>Cookware<br>without lid |   |   | 190-210                            | -                               | 130-150                 |
| Pork neck, 2-3 pieces, 2-<br>3 cm thick          | Wire rack<br>Glass tray              |  |  | 3                                  | -                               | 25-35                   |

## Other meat dishes

### Note:

#### Preparation tips

- The recommended settings apply to dishes placed into the non-preheated appliance.
- Allow the meat loaf to stand for around a further 10 minutes at the end.
- Turn the sausages after 2/3 of the cooking time.

| Dish   | Accessories/<br>cookware             | Rack posi-<br>tion  | Type of<br>heating  | Temperature in<br>°C/grill setting | Microwave<br>output in<br>watts | Cooking<br>time in mins |
|--|--------------------------------------|---|---|------------------------------------|---------------------------------|-------------------------|
| Meat loaf, approx. 750 g                             | Wire rack<br>Cookware<br>without lid |  |  | 180-200                            | 600                             | 15-20                   |
| Sausages for grilling, 4 to<br>6, approx. 150 g each | Wire rack<br>Glass tray              |  |  | 3                                  | -                               | 25-35                   |




 




## Poultry

### Note:

#### Preparation tips

- The recommended settings apply to dishes placed into the non-preheated appliance.
- Arrange whole chickens breast-side down. Turn halfway through the cooking time.
- Arrange chicken portions and duck breast skin side up. Do not turn the dishes.

- Turn goose legs halfway through the cooking time. Pierce the skin.


 

 
| Dish                                | Accessories/<br>cookware          | Rack position   | Type of heating   | Temperature in °C/grill setting | Microwave output in watts | Cooking time in mins |
|-------------------------------------|-----------------------------------|---|---|---------------------------------|---------------------------|----------------------|
| Chicken, whole, approx. 1.2 kg      | Wire rack<br>Cookware with lid    |  |  | 220-230                         | 360                       | 35-45                |
| Chicken portions, approx. 800 g     | Wire rack<br>Cookware without lid |  |  | 210-230                         | 360                       | 20-30                |
| Duck breast, approx. 500 g          | Wire rack<br>Glass tray           |  |  | 3                               | 90                        | 20-30                |
| Goose breast, goose legs, 700–900 g | Wire rack<br>Cookware without lid |  |  | 210-230                         | 90                        | 30-40                |

## Fish

### Note:

Preparation tips

- The recommended settings apply to dishes placed into the non-preheated appliance.
- For grilling, place the whole fish, e.g. salmon or trout, onto the middle of the wire rack.
- Grease the wire rack with oil beforehand.

| Dish                         | Accessories/<br>cookware | Rack position   | Type of heating   | Grill setting | Cooking time in mins |
|------------------------------|--------------------------|---|---|---------------|----------------------|
| Fish steaks, 2–3, 150 g each | Wire rack<br>Glass tray  |   |   | 3             | 20-25                |
| Fish, whole, 2-3, 300 g each | Wire rack<br>Glass tray  |  |  | 3             | 20-30                |

## Tips for next time you roast

If roasting is not successful the first time, you can find some tips here.

| Issue   | Tip  |
|---|--|
| Your roast is too dark and the crackling is partly burnt. | <ul style="list-style-type: none"> <li>Select a lower temperature.</li> <li>Reduce the roasting time.</li> </ul>   |
| Your roast is too dry.                                    | <ul style="list-style-type: none"> <li>Select a lower temperature.</li> <li>Reduce the roasting time.</li> </ul>   |
| The crackling on your roast is too thin.                  | <ul style="list-style-type: none"> <li>Increase the temperature.</li> <li>Or:</li> <li>Switch on the grill briefly at the end of the roasting time.</li> </ul> |
| Your roasting juices are burnt.                           | <ul style="list-style-type: none"> <li>Select a smaller item of cookware.</li> <li>When roasting, add more liquid.</li> </ul>                                  |

| Issue  | Tip   |
|--|---|
| Your roasting juices are too clear and watery. | <ul style="list-style-type: none"> <li>Use a larger item of cookware so that more liquid evaporates.</li> <li>When roasting, add less liquid.</li> </ul>  |
| The meat catches during braising.              | <ul style="list-style-type: none"> <li>Check whether the roasting dish and lid fit together and close properly.</li> <li>Reduce the temperature.</li> <li>Add liquid when braising.</li> </ul>  |
| Your roast is not well-done enough.            | <ul style="list-style-type: none"> <li>Carve the meat into portions.</li> <li>Prepare the juices in the roasting dish.</li> <li>Place the sliced meat in the juices.</li> <li>Place the slices of meat in the microwave to finish cooking.</li> </ul> |

## 16.5 Bakes, gratins and toast








 
### Note:

Preparation tips

- The recommended settings apply to dishes placed into the non-preheated appliance.



- Use a 4 to 5 cm deep microwave-safe, heat-resistant dish for bakes and potato gratins.
- Leave bakes and gratins to cook in the oven for a further 5 minutes after the oven has been switched off.
- Toast the slices of bread first.















| Dish   | Accessories/<br>cookware | Rack posi-<br>tion  | Type of<br>heating  | Temperature in<br>°C/grill setting | Microwave<br>output in<br>watts | Cooking<br>time in mins |
|--|--------------------------|---|---|------------------------------------|---------------------------------|-------------------------|
| Sweet bake, approx. 1.5 kg                                       | Cookware<br>without lid  |  |  | 140-160                            | 360                             | 25-30                   |
| Savoury bake, made with<br>cooked ingredients, ap-<br>prox. 1 kg | Cookware<br>without lid  |  |  | 150-170                            | 600                             | 20-25                   |
| Potato gratin made from<br>raw ingredients, ap-<br>prox. 1.1 kg  | Cookware<br>without lid  |  |  | 210-220                            | 600                             | 20-25                   |
| Toast with topping, 4 slices                                     | Wire rack                |  |  | 3                                  | -                               | 8-10                    |

## 16.6 Frozen convenience products

### Note:

Preparation tips

- Observe the manufacturer's instructions on the packaging.
- The recommended settings apply to dishes placed into the non-preheated appliance.
- Do not arrange chips, croquettes or potato röstis on top of each other.

| Dish                                    | Accessories/<br>cookware | Rack posi-<br>tion  | Type of<br>heating  | Temperature in<br>°C | Microwave<br>output in<br>watts | Cooking<br>time in mins |
|---|--------------------------|---|---|----------------------|---------------------------------|-------------------------|
| Thin-crust pizza                        | Wire rack                |  |  | 220-230              | -                               | 10-15                   |
| Pizza baguette                          | Wire rack                |  |  | 1. -<br>2. 220-230   | 1. 600<br>2. -                  | 1. 2<br>2. 13-18        |
| Chips                                   | Round pizza<br>tray      |  |  | 220-230              | 90                              | 10-15                   |
| Croquettes                              | Round pizza<br>tray      |  |  | 210-220              | -                               | 10-15                   |
| Rösti, stuffed potato pock-<br>ets      | Round pizza<br>tray      |  |  | 200-220              | 90                              | 15-20                   |
| Strudel                                 | Round pizza<br>tray      |  |  | 220-230              | -                               | 20-30                   |
| Bakes, e.g. lasagne, ap-<br>prox. 450 g | Cookware with<br>lid     |  |  | 220-230              | 600                             | 10-15                   |

## 16.7 Test dishes

These overviews have been produced for test institutes to facilitate appliance testing in accordance with EN 60350-1:2013 or IEC 60350-1:2011 and EN 60705:2012, IEC 60705:2010.

### Defrosting with the microwave

| Dish        | Accessories/cook-<br>ware | Rack position                  | Microwave<br>output in<br>watts | Cooking time in<br>mins |
|-------------|---------------------------|--------------------------------|---------------------------------|-------------------------|
| Meat, 500 g | Cookware without<br>lid   | Cooking com-<br>partment floor | 1. 180<br>2. 90                 | 1. 5<br>2. 10-15        |

## Cooking with the microwave

Recommended settings for cooking test dishes in the microwave.






 
| Dish               | Accessories/cookware | Rack position             | Microwave output in watts | Cooking time in mins |
|--------------------|----------------------|---------------------------|---------------------------|----------------------|
| Custard, 1 kg      | Cookware without lid | Cooking compartment floor | 1. 600<br>2. 180          | 1. 10-13<br>2. 20-30 |
| Sponge flan, 475 g | Cookware without lid | Cooking compartment floor | 600                       | 8-10                 |
| Meat loaf, 900 g   | Cookware without lid | Cooking compartment floor | 18-23                     | 18-23                |

## Cooking in combination with a microwave

### Note:








 
Preparation tips

- Use a deep dish for chicken.
- Arrange the chicken breast-side down. Turn halfway through the cooking time.

| Dish          | Accessories/cookware              | Rack position   | Type of heating   | Temperature in °C | Microwave output in watts | Cooking time in mins |
|---------------|-----------------------------------|---|---|-------------------|---------------------------|----------------------|
| Potato gratin | Wire rack<br>Cookware without lid |    |    | 210-220           | 600                       | 25-30                |
| Cakes         | Wire rack<br>Cookware without lid |    |    | 190-200           | 180                       | 20-27                |
| Chicken       | Wire rack<br>Cookware without lid |  |  | 190               | 360                       | 30-45                |


 

 
## Baking

**Note:** The recommended settings apply to dishes placed into the non-preheated appliance.

| Dish                   | Accessories/cookware                             | Rack position   | Type of heating   | Temperature in °C | Cooking time in mins |
|------------------------|--|---|---|-------------------|----------------------|
| Hot water sponge cake  | Wire rack<br>Springform cake tin, diameter 26 cm |  |  | 170-180           | 30-40                |
| Double-crust apple pie | Wire rack<br>Springform cake tin, diameter 20 cm |  |  | 170-190           | 80-100               |
| Viennese whirls        | Glass tray                                       |  |  | 160-170           | 30-35                |
| Small cakes            | Glass tray                                       |  |  | 160-170           | 25-30                |

## Grilling

**Note:** Turn beef burgers halfway through the cooking time.

| Dish             | Accessories/cookware    | Rack position   | Type of heating   | Grill setting | Cooking time in mins |
|------------------|-------------------------|---|---|---------------|----------------------|
| Toasting bread   | Wire rack               |  |  | 3             | 4-5                  |
| Beef burgers, x9 | Wire rack<br>Glass tray |  |  | 3             | 35-45                |

## 17 Installation instructions


Observe this information when installing the appliance.



mm

### 17.1 Scope of delivery

After unpacking all parts, check for any damage in transit and completeness of the delivery.

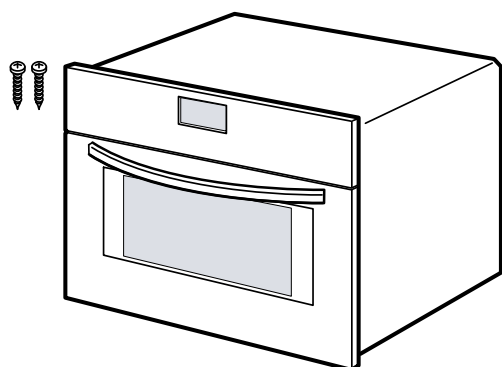

### 17.2 Safe installation

Follow these safety instructions when installing the appliance.

- The appliance can only be used safely if it is correctly installed according to the safety instructions. The installer is responsible for ensuring that the appliance works perfectly at its installation location.
- Do not use the door handle for the transport or installation.
- Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transit.
- Before starting up the appliance, remove any packaging material and adhesive film from the cooking compartment and the door.
- Proceed in accordance with the installation sheets for installing accessories.
- Fitted units must be heat-resistant up to 95 °C, and adjacent unit fronts up to 70 °C.
- Do not install the appliance behind a decorative door or the door of a kitchen unit. There is a risk of overheating.

- Cut-out work on the units should be carried out before installing the appliance. Remove any shavings. Otherwise, the correct operation of electrical components may be adversely affected.
- Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under the warranty.

#### **⚠ WARNING – Risk of injury!**

Parts that are accessible during installation may have sharp edges and may lead to cutting injuries.

- ▶ Wear protective gloves.

#### **⚠ WARNING – Risk of fire!**

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.
- ▶ Only use adapters and power cords approved by the manufacturer.
- ▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.

#### **ATTENTION!**

Carrying the appliance by the door handle could break it. The door handle cannot support the weight of the appliance.

- ▶ Do not carry or hold the appliance by the door handle.

### 17.3 Electrical connection

In order to safely connect the appliance to the electrical system, follow these instructions.

- The appliance corresponds to protection class I and must only be operated with a protective earth connection.
- The fuse protection must correspond to the power rating specified on the appliance's rating plate and to the local regulations.
- The appliance must be disconnected from the power supply whenever installation work is being carried out.

#### **Electrically connecting the appliance with the protective contact plug**

**Note:** The appliance must only be connected to a protective contact socket that has been correctly installed.

- ▶ Insert the mains plug of the appliance into a nearby socket.

When the appliance is installed, the mains plug of the power cable must be freely accessible. If free access to the mains plug is impossible, an all-pole isolating switch must be integrated into the permanent electrical installation in accordance with the installation regulations.

### Electrically connecting an appliance without a protective contact plug

**Note:** Only licensed specialists may connect the appliance. Damage caused by incorrect connection is not covered under the warranty.

An isolating switch must be integrated into the permanent electrical installation according to the installation regulations.

1. Identify the phase and neutral conductors in the socket.  
The appliance may be damaged if it is not connected correctly.
2. See the rating plate for the voltage.
3. Connect the wires of the mains power cable according to the colour coding:
  - Green/yellow = Protective conductor ⊕
  - Blue = Neutral conductor
  - Brown = Phase (external conductor)

### 17.4 Fitted units


This appliance is only intended to be fully fitted in a kitchen. It is not intended to be used as a tabletop appliance or within a cupboard.

The installation cabinet must not have a back panel behind the appliance. Maintain a clearance of at least 35 mm between the wall and the cabinet base or the rear panel of the cabinet situated above.

The installation cabinet must have a ventilation opening of 50 cm<sup>2</sup> on the front. To do this, trim the base panel or fit a ventilation grille. Do not cover ventilation slots and air intake openings.

### 17.5 Installation in a tall unit

Observe the installation dimensions and the safety clearances in a tall unit.

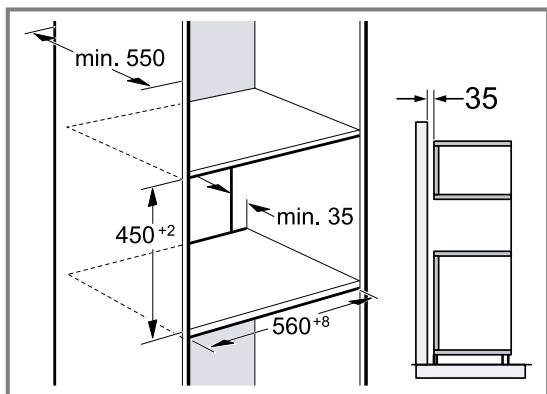


To ventilate the appliance, the intermediate floor must have a ventilation cut-out.

If the tall unit has another back panel in addition to the element back panels, this must be removed.

Only install the appliance up to a height which allows the accessory to be easily removed.

### 17.6 Installing two appliances on top of each other


Your appliance can also be installed above or below another appliance. Observe the installation dimensions and the installation instructions when installing appliances on top of each other.

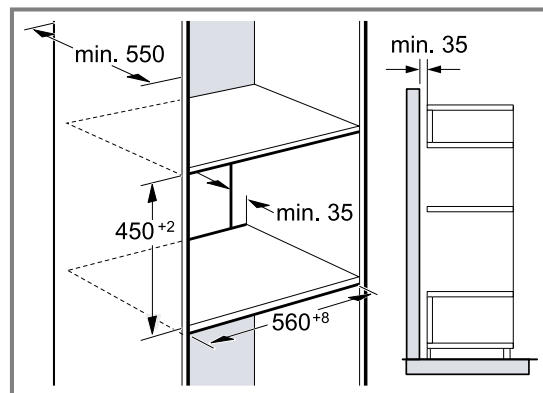

To ventilate the appliances, the intermediate floor must have a ventilation cut-out.

To ensure sufficient ventilation of the two appliances, there must be a ventilation opening of at least 200 cm<sup>2</sup> in the plinth area. To do this, trim the base panel or fit a ventilation grille.


Ensure that air exchange is guaranteed in accordance with the diagram.

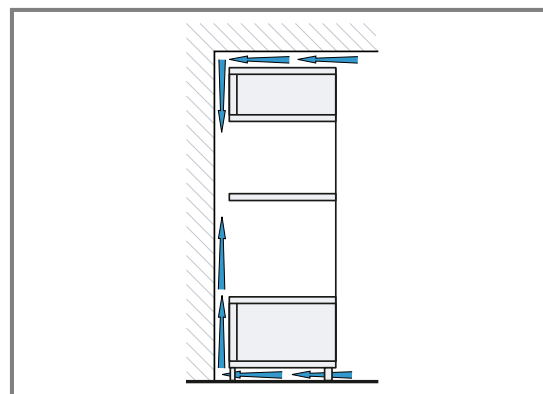

Only install appliances up to a height that allows the accessory to be easily removed.

### 17.7 Installation below a worktop

Observe the installation dimensions and the safety clearances when installing below a worktop.

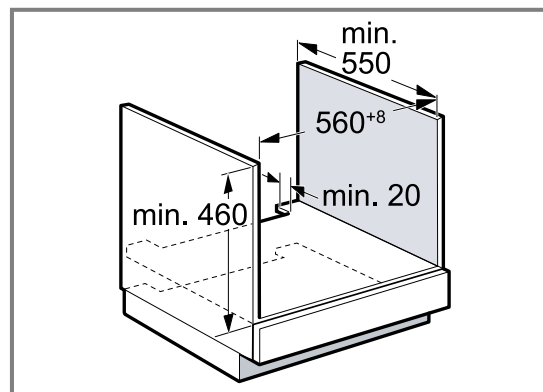


To ventilate the appliance, the intermediate floor must have a ventilation cut-out.

The worktop must be secured to the fitted unit. Observe any available installation instructions for the hob.


Observe different national installation instructions for the hob.

In order to ensure sufficient ventilation of the appliance, there must be a ventilation opening of at least 100 cm<sup>2</sup>. For example, trim the base panel or fit a ventilation grille.

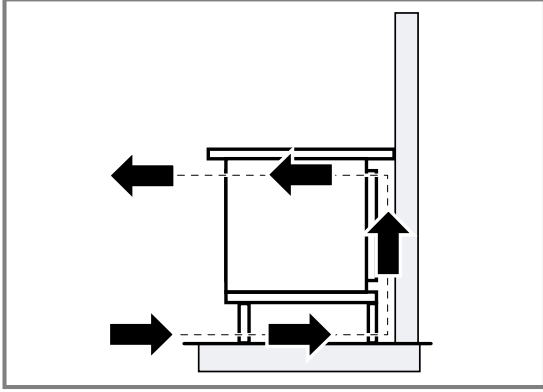

### 17.8 Installing below a hob

If the appliance is installed below a hob, the following minimum dimensions must be adhered to (including substructure, if applicable).

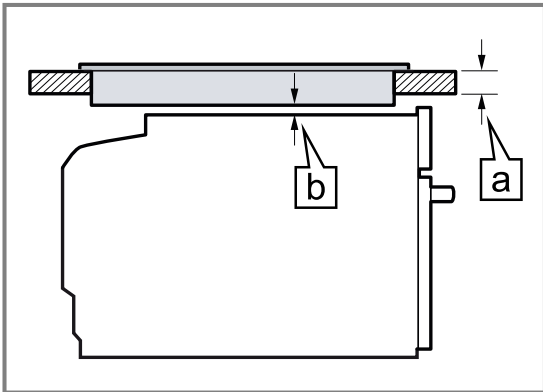

The minimum worktop thickness **b** is based on the required minimum clearance **a**.


| Hob type                   | <b>a</b> raised in mm | <b>a</b> flush in mm | <b>b</b> in mm |
|----------------------------|-----------------------|----------------------|----------------|
| Induction hob              | 45                    | 46                   | 5              |
| Full-surface induction hob | 55                    | 56                   | 5              |
| Gas hob                    | 35                    | 46                   | 5 <sup>1</sup> |
| Electric hob               | 35                    | 38                   | 2              |

<sup>1</sup> Observe different national installation instructions for the hob.

Observe the installation instructions for the hob.


### 17.9 Corner installation

Observe the installation dimensions and the safety clearances when installing in a corner.

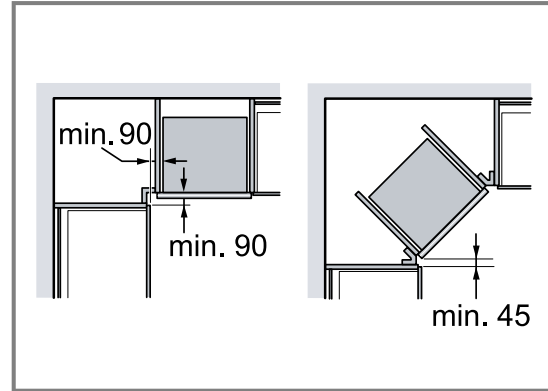


### 17.10 Installing the appliance

1. Centre the appliance.
2. Screw the appliance onto the unit.

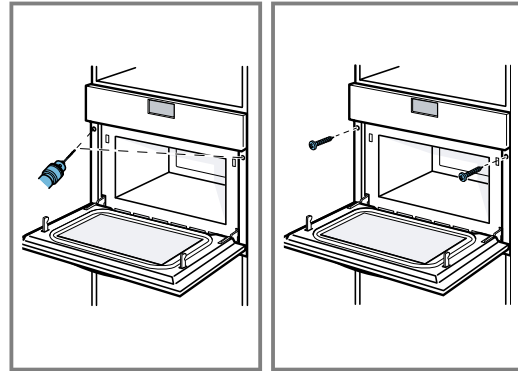

### 17.11 For handleless kitchens with vertical bar handle strips:


1. Attach a suitable filling piece on both sides in order to cover any sharp edges and to guarantee safe installation.

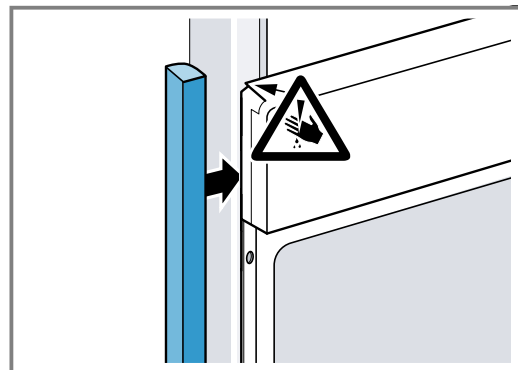


2. Secure the filling piece to the unit.



3. Pre-drill the filling piece and the unit to establish a screw connection.

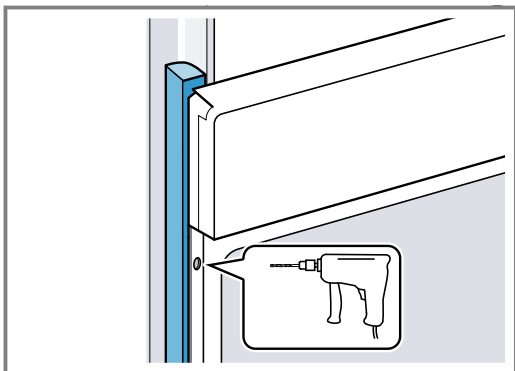

4. Secure the appliance using a suitable screw.

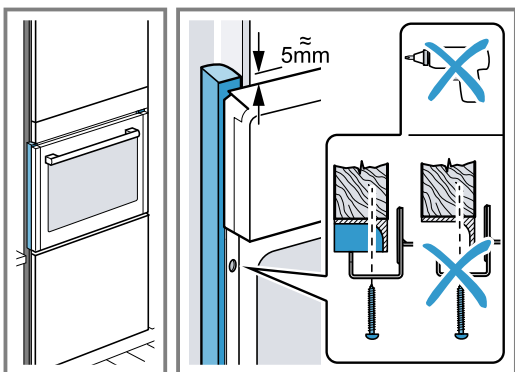

## 17.12 Removing the appliance

1. Disconnect the appliance from the power supply.
2. Undo the fastening screws.
3. Lift the appliance slightly and pull it out completely.



A series of horizontal lines for writing, starting from the top right of the page and extending downwards to the bottom of the page.



Valid within Great Britain:  
Imported to Great Britain by  
BSH Home Appliances Ltd.  
Grand Union House  
Old Wolverton Road  
Wolverton, Milton Keynes  
MK12 5PT  
United Kingdom



Register your product online  
**neff-home.com**

**BSH Hausgeräte GmbH**  
Carl-Wery-Straße 34  
81739 München, GERMANY



**9001972902**  
050131  
en