

Product information

- Indoor use only
- Non-dimmable
- Replacement bulbs should be the same type and rating, available from John Lewis Partners or other established brands
- Clean the fitting with a soft dry cloth. Do not use abrasive chemical cleaners as this will damage the finish

Aftercare and Troubleshooting

You've switched on the light, but it's not working:

1. Check your power supply is switched on
2. Turn off the light and check that the bulb is inserted correctly
3. Check the bulb is still in working order

If there are technical issues with this product that you can't solve, please contact your nearest John Lewis & Partners shop or call Technical Support on 03301 230106.

Specification

Max power: 1 x 10W
Recommended bulb:
10W LED E27 GLS bulb for maximum brightness.
Lower wattages are also available.
Rated input: 220 –240V, 50Hz
Bulb not included
IP rating: 20
Weight: 5kg

5-year guarantee

At John Lewis & Partners we test every light to high quality standards. That means we can offer you a 5-year guarantee.

Recycling

This symbol  indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis & Partners do not operate instore take back, but as members of the Distributor Take Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

John Lewis plc
SW1V 2QQ
johnlewis.com

Made in China



15/09/2025

Please retain these instructions for future reference.



BALDWIN FLOOR LAMP USER GUIDE



Getting started

Thank you for purchasing this John Lewis & Partners product. For your safety, and to make sure everything is working properly, please read the instructions carefully before use.

Warnings

This is a Class II product and must NOT be earthed.

It is for indoor use only, and not suitable for a bathroom location.

Your lamp has been packaged as separate parts to prevent damage during transit. The lamp must be protected by a 3 Amp fuse in the mains plug. Do not plug into the mains until your lamp is fully assembled.

Under no circumstances must this floor lamp be covered with any material as this could pose a safety hazard. It must be used on a stable, flat surface.

 
When manoeuvring or assembling this product, it must be lifted from the base.

Always use correct type and wattage bulb. Never exceed the wattage stated.

If the mains cable becomes damaged it must only be replaced by a technically competent, qualified person.

For your safety, always switch off the supply before cleaning or changing the bulb.

Parts list

Description	Image	Quantity
Light fitting (3 sections + base) and x 1 shade ring (fitted to lampholder)		x 1
Shade		x 1
Spanner		x 1

Product assembly

Step 1

 
Carefully unpack the carton, making sure all the parts are present before assembly and place on a stable, flat surface. Remove the protective plastic end-caps from the tubes (Fig. 1).

Step 2

Join the upper (A) and middle (B) sections of the stem into the lower section (C) by screwing in a clockwise direction. Take care not to trap the cable or cross the threads.

Fig. 1



 


Step 3

Slot the stem (D) into the base (E) and gently pull through any excess cable.

Rotate carefully but firmly to make sure the shade faces forward (see fig. 2). Adjust and secure in place by tightening the nut under the base with the supplied spanner (F).

Fig. 2

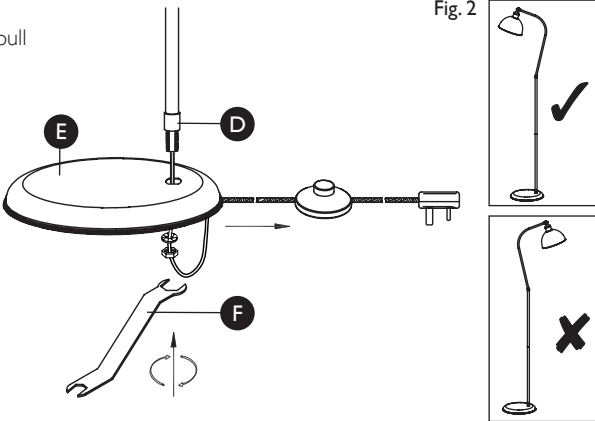

Step 5

To fit the shade (G), first remove the shade ring (H) from the lampholder. Place the shade over the lampholder and refit the shade ring to secure in place.

Step 6

Fit the recommended bulb (I) per the details overleaf.

Step 7

Plug the lamp in and switch on using the foot switch. The shade position can be adjusted by partially loosening the thumb screw in the join of the shade and arm (J).

PLEASE NOTE:

The lamp head will become hot during use. Always switch off and allow to cool before adjusting the lamp head. Ensure the stem is held while adjusting the lamp head.

