

Recommended bulb

1 x 11W ES LED energy efficient classic frosted bulb

Bulb not included

Specifications

Max. power: 11W LED

Voltage: 220-240V, 50Hz

Dimensions: H110 x W25 x D25cm

Weight: 0.9kg




Please retain these instructions for future use

John Lewis

User manual

Oberon

Electrified pendant

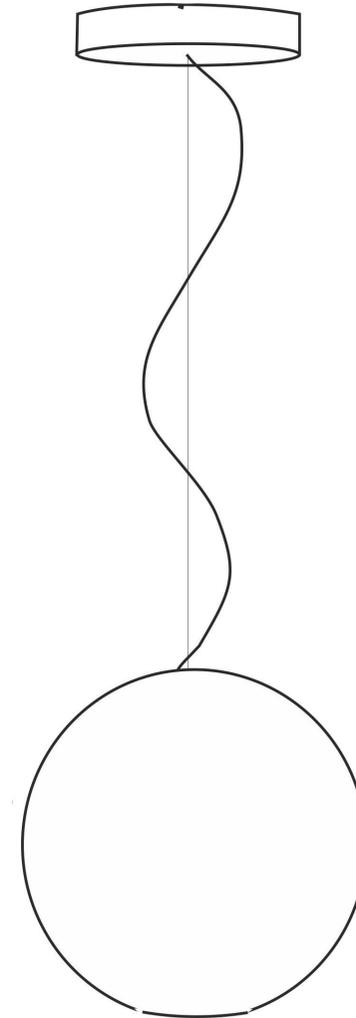

John Lewis Partnership
171 Victoria Street
London SW1E 5NN
johnlewis.com

Made in China

Thank you for purchasing this Oberon glass pendant. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

Warnings!


For your safety, this product must be installed in accordance with local Building Regulations. If in any doubt, or where required by law, consult a competent person who is registered with an electrical self-certification scheme. Further information is available online or from your Local Authority.

When changing a bulb always switch off at the mains first and allow the bulb to cool down before handling

The wattage indicated in the 'Specifications' section must not be exceeded.

Dispose of used bulb carefully. The bulb and surrounding parts can become extremely hot during use.

For indoor use only.

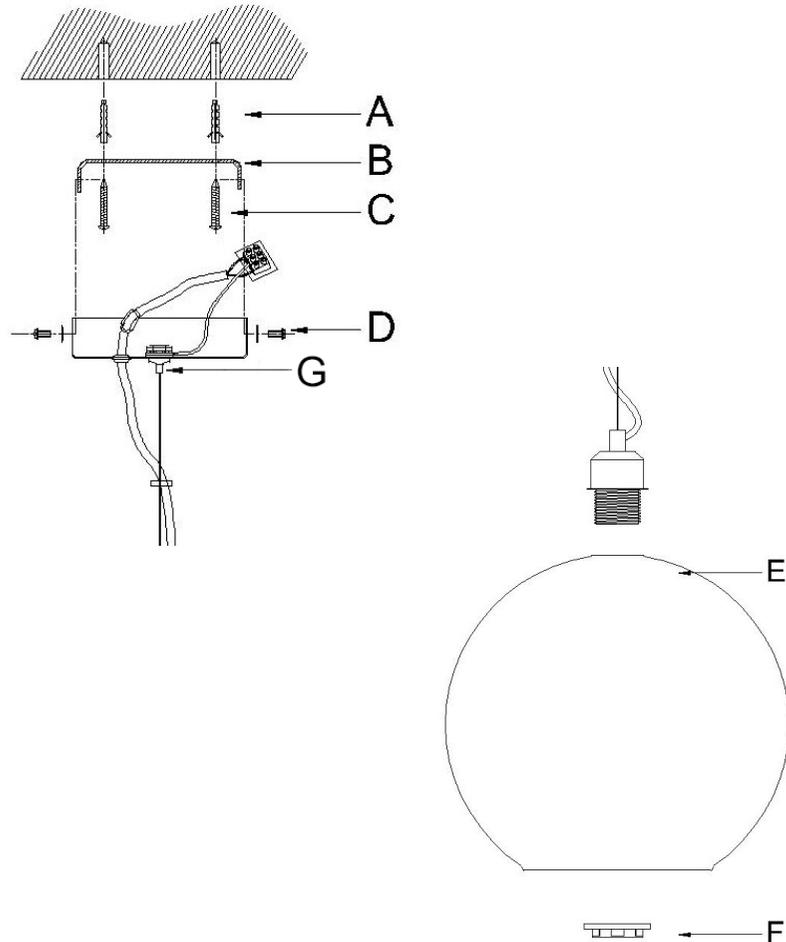

Assembly

- This product is Class I and must be earthed.
- To prevent electrocution, switch off at the mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electricity supply without your knowledge.
- If replacing an existing fitting, make a note of the connections.
- Always use the correct type and wattage bulb. Never exceed the wattage stated.
- Ensure that all green/yellow wires and terminals marked with are connected to the supply earth.

Terminals and cables in your light fitting are marked as follows:

Terminal marking	Fitting wiring	Mains wiring
E	Green / Yellow	Green / Yellow (Earth)
N	Clear	Black or Blue (Neutral)
L	Clear	Red or Brown (Live)

There are 2 clear wires L & N, please note that these wires can be safely fitted to either of the L or N terminals

Please note, you may find that there are only 2 wires in your household mains supply in which case there is no earth. Please contact a qualified electrician and ask him to provide an earth facility.

1. Ensure the mains electricity supply is switched off at the fuse board.
2. If removing an existing fitting, note down all wiring connections.
3. Remove mounting bracket B from the ceiling cup by removing screws D at the side of the ceiling cup.
4. Using bracket B as a template mark the fixing locations with a pencil.
5. Using the screws C and raw plugs A provided, firmly fix the mounting bracket B to a ceiling joist or other solid mounting adjacent to the supply wiring.
6. The overall drop height of this product can be altered. Adjust the cord-grip inside the ceiling cup and adjust the cable length to your required drop height, making sure that the weight of the pendant is supported by the metal support wire and not on the cable.
7. To shorten the support wire (raises the pendant) simply pull upwards to the required length, to lengthen the support wire (lowers the pendant), locate the small tube G which the support cable passes through under the pendant then push this tube upwards towards the ceiling cup and hold, you should now be able to push the wire back through, release the tube to re-secure the wire. Trim any excess support wire to approximately 1cm being careful of any sharp edges
8. Connecting to the house mains, strip each of the 3 wires to 1cm. Twist and double back on itself.
9. Loosen the terminal screws to allow the wires to be connected as per the terminal and wiring markings above. Insert the wires and tighten the terminals ensuring no strands of wire are unsecured.
10. Cover the connector block with 2 layers of good quality electrical insulation tape continuing at least 2.5cm either side of the connections.
11. Neatly place the wires and connector block inside the ceiling cup, align the light fixture onto the mounting bracket B, ensure no wires will be obscured or squashed before securing it with the side screws D.
12. Insert and screw the bulb without using excessive force. The type of bulb can be found in the 'Recommended bulb' section.
13. Restore your mains electricity supply at the fuse board and check the operation of your fitting.

Care instructions

Ensure that the product has been switched off and allowed to cool. Using a soft, dry cloth wipe clean shade and ceiling cup only, do not wipe the bulb.