

Recommended bulb

G9 LED Bulbs Only

6 x 4 Watt energy efficient G9 LEDS

510 lumen

Bulbs replaceable

Specifications


Max. power: 60W

Voltage: 220V-240V, 50Hz

Weight: 1.5kg



Please retain these instructions for future reference.


This symbol  indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis do not operate in-store take back, but as members of the Distributor Take Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take in to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk

John Lewis Partnership
171 Victoria Street
London SW1E 5NN
johnlewis.com

Made in China

John Lewis

User manual Huxley Ceiling pendant

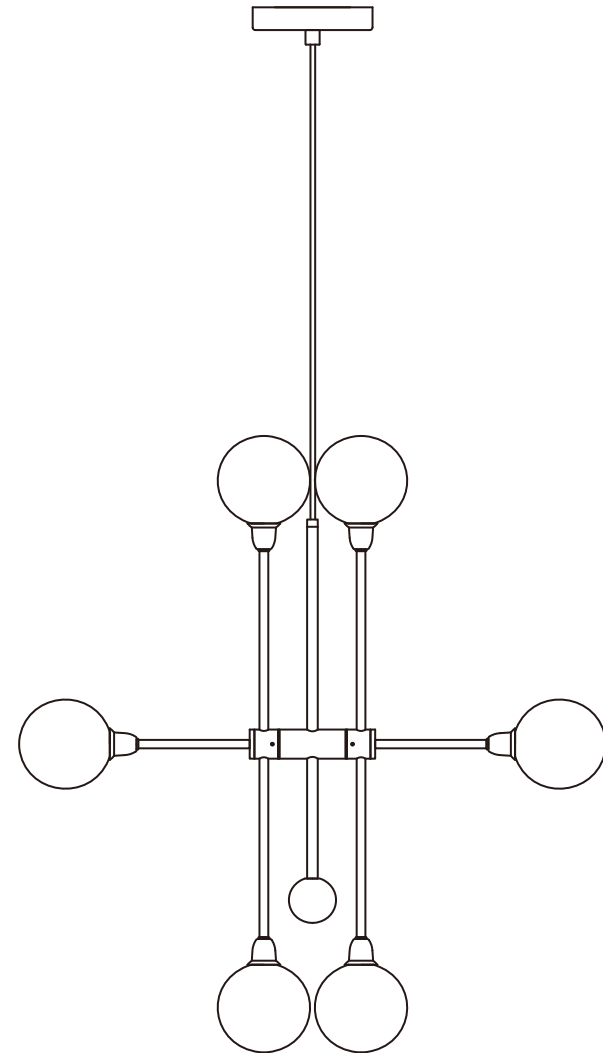

Thank you for purchasing this Huxley Ceiling Pendant. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

Warnings!

This product is Class II and must not be earthed. This fitting is for indoor use only. For your safety, this product must be installed in accordance with local Building Regulations. If in any doubt, or where required by the law, consult a competent person who is registered with an electrical self-certication scheme. Further information is available online or from your Local Authority.

Never install your appliance on a wet, freshly painted or plastered surface. To prevent electric shock, switch off the mains supply before installing or maintaining this product. Ensure other persons cannot restore the electricity supply without your knowledge. Always use the correct type and rating bulb.

If removing an existing fitting, note down all wiring connections.





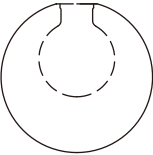
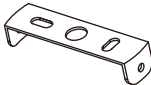

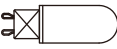

When changing a bulb, always switch off at the mains and allow the old bulb to cool down before handling. Dispose of used bulbs carefully.

The bulb and surrounding parts can become extremely hot during use.

The supply cord cannot be replaced. If the cord is damaged the product should be disposed of to avoid a safety hazard.


Do not over tighten the glass shades. If the shades are screwed down too tight the glass can break.

Parts list

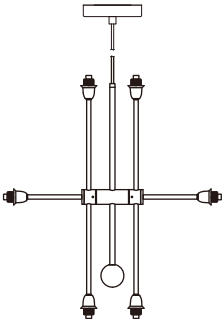A		6	E		2
B I J K L M O		1	F		2
C		6	P		1
D		2	H		6
			N		1

Assembly

- Carefully unpack the carton, making sure all parts are present before assembly. Place lamp parts on a flat surface as per sketch.
1. Ensure the house electricity supply is switched off at the fuse board.
Do not over tighten the glass shades. If the shades are screwed down too tight the glass can break.
 2. Unscrew the cord grip and adjust the cable (B) to preferred length. Secure the surplus cable inside ceiling cup (K) to the upper part of the 8-shaped plastic hook.
 3. Mark screw position on the ceiling with screw anchor (E). Make sure there is a joist (G), or other suitable means of support for the weight of the fitting at the intended fixing position. Ensure there are no hidden wires, water pipes or gas pipes before drilling holes.
a. Drill the mounting hole with a 6mm drill bit. The fixed wall plug (P) needs to penetrate joist (G) by at least 25mm.
b. Install the hook screw (D) into wall plug (P).
 4. Make electrical connections on Terminal block (I) as follows: Connect supply live (normally brown or red) to fitting live (marked "L") on the terminal block. Connect supply neutral (normally blue or black) to fitting neutral (marked "N") on the terminal block. Ensure electrical connections are tight and no loose strands of wire are left out of the connector block. Place Terminal block (I) into the black protection box (J), and screw into position.
 5. Push up the ceiling cup (K) and secure it by tightening the plastic screw (L). Attach ceiling cup (K) to fixed wall plug (P). Engage then tighten screws (F) and make sure the fitting is securely fixed.
 6. Insert G9 LED bulb (H) into socket (M). Place silicone ring (A) over the opening in shade (C). Secure glass shade (C) to the lamp by screwing it onto socket (L). Repeat to assemble all shades.
 7. Switch on the house electricity supply at the fuse board.
 8. Use allen key (N) to loosen two set screws (O) to adjust the angle of the arms and then lock to secure the position.

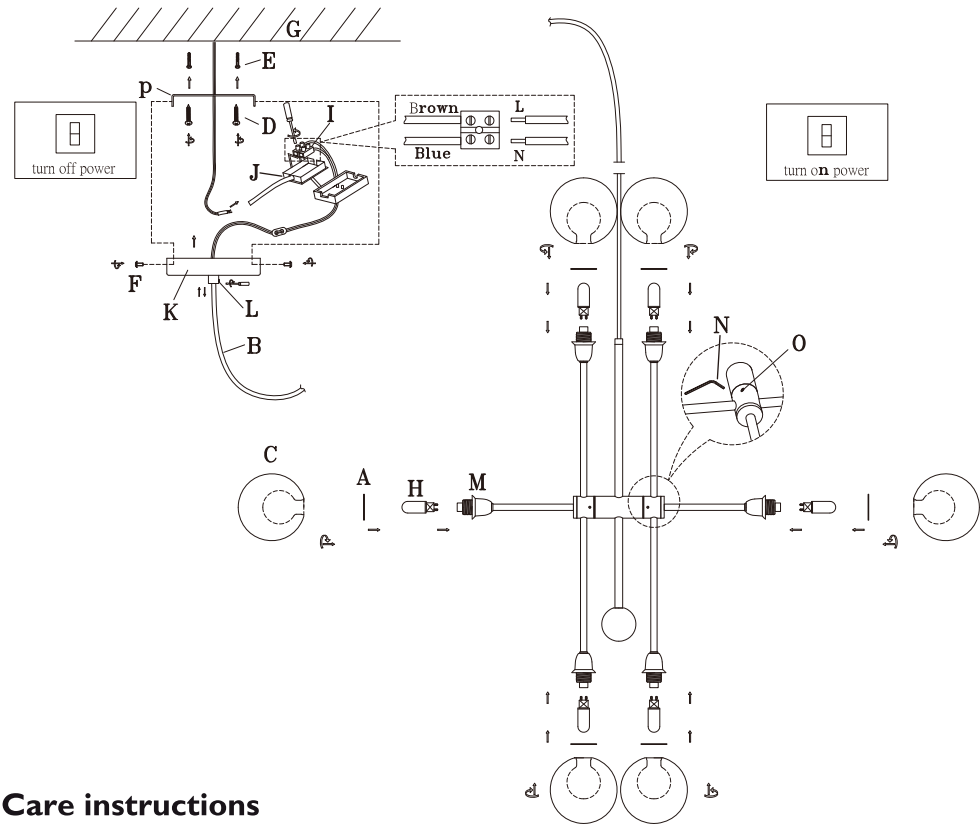

Care instructions

We recommend cleaning with a soft dry cloth. Do not use abrasive materials as these will damage the finish.