



John Lewis Partnership
171 Victoria Street
London SW1E 5NN
johnlewis.com



Made in China

Please retain these instructions for future reference

Spy listening watch and pen

<p>Battery safety</p>	<p>Batteries should be removed and replaced by adults only.</p> <p>Only use recommended batteries or those of the same or equivalent type. Do not mix old and new batteries or batteries of different types. Batteries are to be inserted with the correct polarity. The supply terminals are not to be short-circuited. Remove exhausted batteries from item. Remove batteries if equipment is not used for extended periods of time. Rechargeable batteries are to be removed from the item before being recharged. Rechargeable batteries are only to be charged under adult supervision. Do not attempt to recharge non-rechargeable batteries. Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.</p>
-----------------------	---

<p>Warning!</p>	<p>Not suitable for children under 3 years. Small parts - Choking hazard. Use with care and only under adult supervision. Recommended for children 8+.</p> <p>Remove all packaging / tags before giving to a child.</p>
-----------------	---

<p>Recycling and disposal</p>	<div data-bbox="322 735 376 791" data-label="Image"> </div> <p>This symbol indicates that batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available. Never throw batteries in a fire or attempt to open outer casing.</p> <p>The symbol indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis do not operate instore take back, but as members of the Distributor Take Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.</p>
-------------------------------	---

Thank you for purchasing this toy.
Please read the instructions and warnings carefully before use.

<p>Parts list</p>	<div data-bbox="1527 220 2002 363" data-label="List-Group"> <ol style="list-style-type: none"> Digital watch Watch SET button Watch MODE button Receiver On/Off switch Earphone jack Volume control Battery compartment UV light switch UV light Earphone Magic pen </div> <div data-bbox="1527 376 1984 643" data-label="Image"> </div>
-------------------	--

<p>Instructions for use</p>	<p>Controls for the digital watch:</p> <p>Normal display mode 1: Hour: Minute. Press MODE button: Display shows Month, and Date for 1 second and back to normal time display. Press SET button.</p> <p>Normal display mode 2: Hour: Minute, Month and Date alternatively. Press MODE button: Display shows Second, press again to show normal time. Press SET button.</p> <p>Time mode: To set Month, Date, Hour and Minute.</p> <p>Month: Press MODE button: Month advance. Press SET button.</p> <p>Date: Press MODE button: Date advance. Press SET button.</p> <p>Hour: Press MODE button: Hour advance. Press SET button.</p> <p>Minute: Press MODE button: Minute advance. (Minute not adjusted). Press SET button. (Minute adjusted). Press SET button, then MODE button.</p> <p>Normal Display Mode 1.</p>
-----------------------------	--


Spy listening watch

1. Plug the earphone (11) into the earphone jack (6) as shown.
2. Push the On/Off switch (5) upwards to turn on the receiver and adjust the volume control (7) to the desired level.
3. Point the receiver (4) towards your target to activate sound.

UV light

1. Write down your secret message with the pen (12). It is invisible under normal lighting.
2. Point the UV Light (10) towards the secret message.

Press the UV Light Switch (9) to reveal the secret message.
3. The secret message is only visible under the UV light!

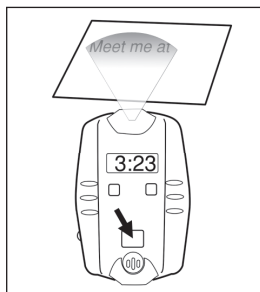

Changing the batteries


Your product is supplied with batteries.
To operate please remove the isolation tab.

Spy listener requires 3 x 1.5V AG13 (LR44) batteries (included).

Digital watch requires 1 x 1.5V AG13 (LR44) batteries (included).

Spy listener

1. Unscrew the battery compartment (8) door on the back of the unit.
2. Insert three AG13 (LR44) batteries into the unit with the "+" side on top.
3. Replace the battery compartment door and tighten the screw.
4. Replace with new batteries when the sound becomes weak or the UV light becomes dim.
5. Insert new batteries according to the polarity marks.

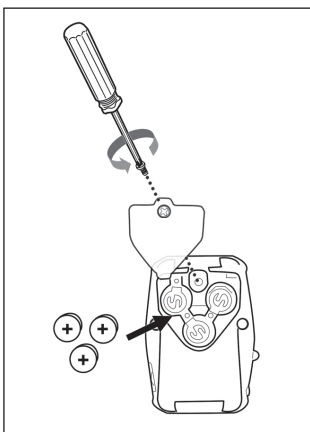

Digital watch

Follow the steps below to replace the battery when required (1).

1. Remove the two screws from the back of the watch (a) with a screwdriver (not included).
2. Take out the watch module (b) from the case. Loosen the two screws holding the metal plate of the watch module with a small cross head screwdriver (not included).
3. After the metal plate (c) is removed, take the old battery out. Insert a new LR41 battery (d), with the "+" side on top.
4. Replace the metal plate, the watch module and the back cover.

