

JOHN
LEWIS
& PARTNERS

2 SLICE TOASTER INSTRUCTION MANUAL



Contents	3	Important safety information
	6	Toaster - diagram
	7	Before first use
	7	Using your toaster
	7	Toaster safety
	8	Cleaning and maintenance
	8	Technical specifications
	8	Servicing and disposal
	8	Guarantee

Important safety information

Thank you for purchasing this toaster.

Please read the instructions and warnings carefully to ensure a long life for your product and safe usage. This instruction leaflet must be retained with the product for future reference. These warnings have been provided in the interest of safety. You **MUST** read them carefully before using the appliance.

If you are unsure of the meaning of any of these warnings, please contact your nearest John Lewis & Partners branch or John Lewis & Partners Technical Support on 03301 230106.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, unless they are properly supervised or given instructions concerning the safe use of the item by a person responsible for their wellbeing. Children must not play with the appliance. Cleaning and maintenance should not be carried out by children.



NOTE: persons with impaired vision may consult these instructions by contacting your nearest John Lewis & Partners shop or John Lewis & Partners

Technical Support on 03301 230106.

- Do not immerse the cord, plug, or any part of the toaster in water or other liquids.
- Unplug from the mains when not in use, when removing or attaching accessories and before cleaning any part of the appliance.
- Do not operate any appliance with a damaged cord or plug. Should the item malfunction, or if it is damaged in any manner, please stop using it and return it to your nearest John Lewis branch. Do not attempt to repair it yourself. Do not modify the appliance's plug.
- Do not let the power cord overhang the edge of the surface on which it stands, or touch anything hot.
- When unplugging the device, hold the plug itself, not the power cord.
- Do not use the appliance for any purpose other than its intended use.
- This appliance is for indoor use only. Do not use it outdoors.
- For household and light commercial use only.
- Do not use accessories or attachments that are not recommended by the manufacturer.
- Allow the toaster to cool before cleaning or storing it. To clean it, wipe it down with a soft, damp cloth.
- Do not insert metal foil or utensils into the toaster as this can cause a fire or electric shock.


- Do not place the toaster beneath curtains or other flammable materials.
- Do not place the toaster on or near a hot surface or appliance.
- Do not use in conjunction with an external timer or remote-control system.
- The outer surface may get hot when the appliance is operating



WARNING: Polythene bags over the product or within packaging may be dangerous. To avoid the risk of suffocation, please keep away from pets, babies and children.

Your toaster – diagram

- 1 Housing
- 2 Crumb tray handle
- 3 Crumb tray
- 4 Base
- 5 Upper cover plate
- 6 Carriage handle
- 7 Cancel
- 8 Reheat
- 9 Defrost
- 10 Power cord
- 11 Knob

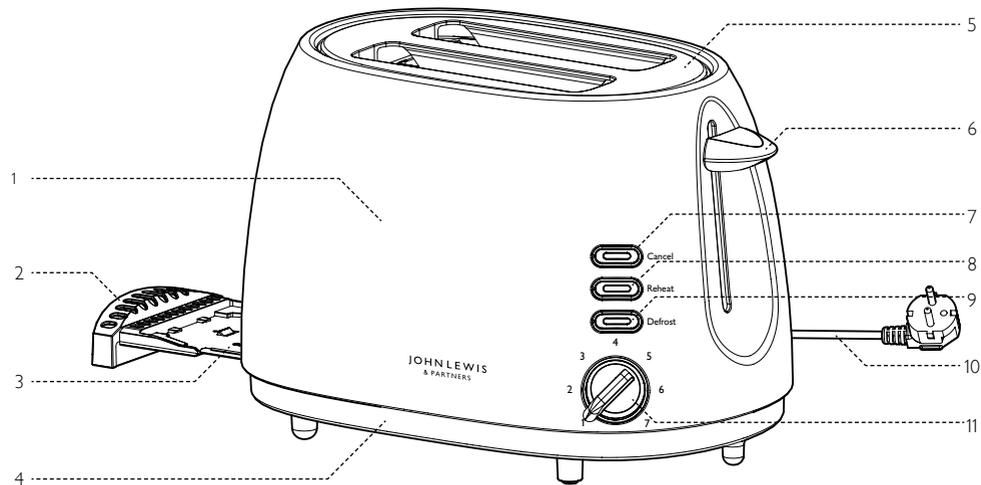

Toaster safety

- 1 Remove all packaging prior to toasting.
- 2 If the toaster starts to smoke, Press the 'Cancel' button to stop toasting immediately.
- 3 Only use the toaster for dry bread. Do not butter bread before toasting.
- 4 Never attempt to dislodge bread trapped in the slots without unplugging the toaster first. Remove bread carefully.

Before first use

The toaster may emit a metallic odour the first time it is used. This is normal and will not continue. Run the toaster once or twice and allow it to cool again before using it to toast bread.

Using your toaster

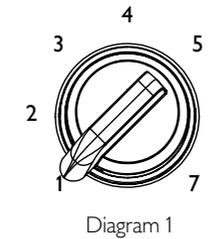


Diagram 1

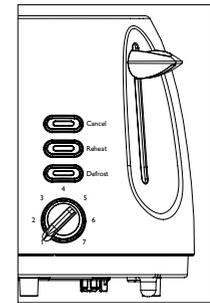


Diagram 2

- 1 Plug the power cord into the outlet.
- 2 Set the colour control dial to your desired toast colour. There are seven settings, from the lightest to the darkest level of toasting (see Diagram 1). To achieve a golden colour, set the dial in the middle.



Note: Toasting a single slice will require a lower setting than two slices. If you are using the toaster more than once continuously, later slices will toast more quickly as the device warms up.

- 3 Press down the carriage handle until it latches in place. The 'Cancel' light will come on and the appliance will begin toasting. Note: The carriage handle can only be latched when the appliance is plugged in.
- 4 Once the bread has toasted according to your chosen setting, the carriage handle will pop up (see Diagram 2). You can press the 'Cancel' button at any time to stop toasting but do not attempt to lift the carriage handle to end the process.
- 5 To toast frozen bread, first press the 'Defrost' button, then set the colour dial to your desired level.
- 6 To toast only one side of a slice of bread, set the colour level, then press the 'Reheat' button. The indicator light will come on and the toasting process will continue as usual.
- 7 To ensure a uniform bread colour, wait 30 seconds before toasting again so that the colour control can reset.

Cleaning and maintenance

- 1 Before cleaning, unplug the toaster and let it cool down completely.
- 2 Wipe the outside with a soft, damp cloth. Never use metal polish.
- 3 Pull out the crumb tray at the bottom of toaster and empty it. If the toaster is used frequently, empty the tray at least once a week. Make sure the crumb tray is back in place before using the toaster again.
- 4 When not in use or when the appliance is in storage, the power cord may be wound under the bottom of the toaster.

Technical specifications

Model: JLT093

Rated input: 220-240V~ 50-60Hz

Rated power: 800W

Servicing and disposal

This product should only be repaired or serviced by an authorised service engineer. Only genuine, approved spare parts should be used.

This symbol  indicates that this product should not be treated as normal household waste and should be recycled. John Lewis does not operate in-store take back, but as a member of the Distributor Take Back scheme has funded the development and upgrade of recycling facilities across the UK.

Please take your old appliance to your nearest collection facility. For further details, contact your local council or visit: www.recycle-more.co.uk

Guarantee

This item is guaranteed for two years in respect of defects found to be due to faulty workmanship or materials. Proof of purchase is required for the validity of the guarantee. This guarantee is no longer valid in the case of accidental damage, alteration, repair by any unauthorised persons or poor maintenance. This guarantee in no way affects your statutory rights.

Please retain these instructions for future use.



John Lewis Partnership
171 Victoria Street
London SW1E 5NN
johnlewis.com