Recommended bulb (not included)

1 x 9W ES LED Energy efficient classic GLS or 1 x 42W ES Eco Halogen GLS

When changing a bulb, always switch off at the mains and allow the bulb to cool before handling. Dispose of used bulbs carefully. Do not exceed the rated power stated or use a different shape bulb from that indicated on the fitting.

Specifications

Max. power: 1 x 60W Voltage: 240V, 50Hz IP rating: IP20 Weight: 1.50kg

Please keep these instructions for future reference.

This symbol indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis do not operate instore take back, but as members of the Distributor Trade Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

We have taken great care to ensure that this product reaches you in perfect condition. However, should any parts be damaged or missing please contact the Product Helpline on (01202) 690945.

John Lewis Partnership 171 Victoria Street London SW1E 5NN johnlewis.com

John Lewis

User manual Cupola Rise & Fall Pendant light



Thank you for purchasing this Cupola Rise & Fall pendant light. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

Warnings!

This is a Class II product and must not be earthed.

Please read these instructions carefully before commencing any work.

It is recommended that this fitting is installed by a qualified electrician.

Install in accordance with the IEE Wiring regulations and the Building Regulations.

To prevent electric shock switch off at mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply without your knowledge.

If you are in any doubt, please consult a qualified electrician.

This light fitting should be connected to a 5 amp fused circuit.

If replacing an existing fitting, make a note of the connections.

This product is suitable for installation on surfaces with normal flammability e.g. wood, plasterboard, masonry. It is not suitable for use on highly flammable surfaces (e.g. polystyrene, textiles). For your safety, always switch off the supply before cleaning or removing the shade.

Parts list

Parts list	Image	Qty
Light Fitting	∇	1
Handle		1
Finials	₿ ₿	2
Screws	(fanannam) (fanannam) (fanannam)	3
Wall Plugs		3

Step 1

Before removing the existing fitting, carefully note the position of each set of wires.

Step 2

of the fixing holes. Drill holes and fit suppled wall plugs (suitable for masonry only - for other surfaces use appropriate fixings).

Step 4

Having identified the household wiring from your existing light fitting, connect to the connection block inside the product as shown.



Figure 3

Check that

- You have correctly identified the house wires.
- The connections are tight.
- No loose strands have been
- left out of the connection block.

Step 5

See Figure 3. Fix the ceiling cover to the ceiling using the supplied screws. Screw the pulley cover (C) on to the ceiling cover to hide the pulley.

Step 6: <u>Height Adjustment</u>

See Figure 3. This product uses a pulley system to adjust the drop of the product and can be adjusted when required. To make the drop longer on the fitting, gently pull the handle (D) downwards. To make the drop shorter carefully push the handle upwards.

Step 7

Fit the bulb as per the details overleaf.

Step 8

Replace fuse or circuit breaker and switch on. Your light is now ready for use.



See Figure 1. Using the ceiling cover as a template, mark the position



⊛B ß Figure 2

Step 3

See Figure 2. Attach the handle (A) by lining it up with the holes in the side of the shade and securing with the supplied finials (B).

Care instructions

We recommend cleaning with a soft dry cloth. Do not use abrasive materials as these will damage the finish.