

Caring for your product


We recommend cleaning with a soft dry cloth.
Do not use abrasive materials as these will damage the finish.
Replace bulbs from John Lewis or established brand of the same type and compatibility.

Aftercare and Troubleshooting

Please ensure all screws and small pieces are properly tightened to the product.

When changing a bulb, always switch off the mains and allow the bulb to cool down before handling.

A bulb's watt rating indicates how much energy it uses. The higher the watt, the more energy it requires. Lumens is a measure of brightness. The higher the number of lumens, the brighter the light.

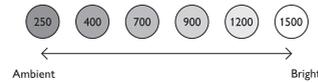

Specification

Max. power: 4W
Voltage: 220–240V, 50Hz
IP rating: 20
Weight: 2.89kg



5 year guarantee

At John Lewis & Partners we test every light to high quality standards so we are able to offer you a 5 year guarantee.

Recycling

This symbol  indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis & Partners do not operate instore take back, but as members of the Distributor Take Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.




John Lewis Partnership
171 Victoria Street
London SW1E 5NN
johnlewis.com

Made in China

Please retain these instructions for future reference.



HUXLEY 15 LIGHT CEILING PENDANT USER GUIDE

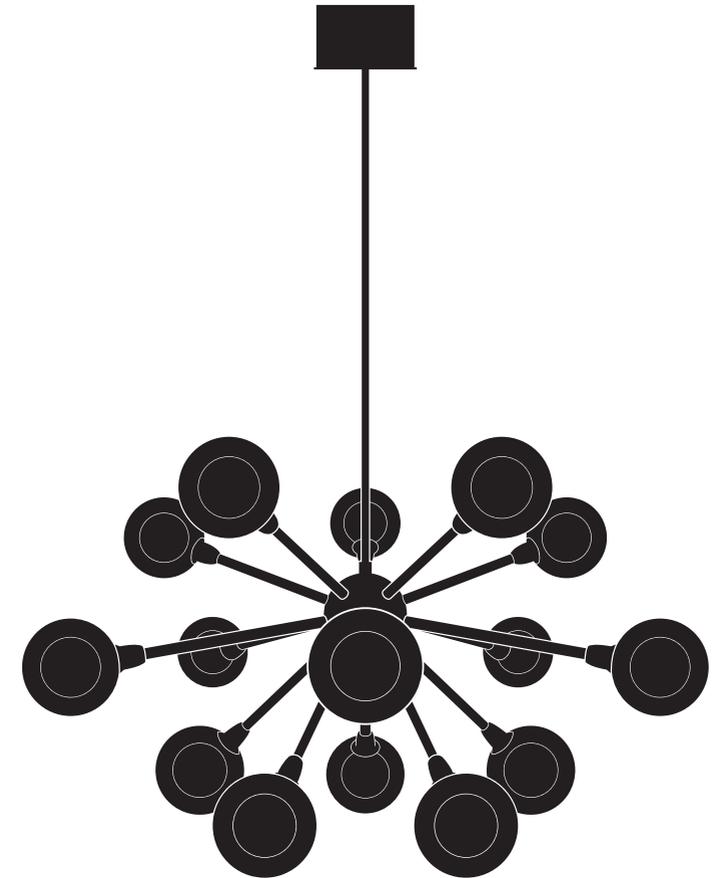

Thank you for purchasing this Huxley 15 Light Ceiling Pendant. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

Warnings



This fitting is for indoor use only.
 This product is Class II and must not be earthed.
 For your safety, this product must be installed in accordance with local Building Regulations. If in any doubt, or where required by the law, consult a competent person who is registered with an electrical self-certification scheme. Further information is available online or from your local authority. In accordance with regulations, the product ceiling rose, terminal blocks and any connectors shall not be fixed in full or partial recess.
 Never install your appliance on a wet, freshly painted or plastered surface. To prevent electric shock, switch off the mains supply before installing or maintaining this product. Ensure no one else can restore electricity supply without your knowledge, while installing the wall lamp. Always use the correct type and rating bulb.
 If removing an existing fitting, please write down all wiring connections.
 When changing a bulb, always switch off at the mains and allow the old bulb to cool down before handling. Dispose of used bulbs carefully.
 The bulb and surrounding parts can become extremely hot during use.
 The supply cord cannot be replaced. If the cord is damaged the product should be disposed of to avoid a safety hazard.
 Do not over tighten the glass shades. If the shades are screwed down too tight the glass could be break.
 Do not use a G9 LED bulb longer than 6cm to avoid puncturing the glass shade.
 The bulb is not included with this lamp. Please visit your local store to purchase the bulb prior to assembly.


Parts list

	Description	Image	Quantity
A	Glass Shades		15 PCS
B	Silicone Ring		15 PCS
C	Canopy		1 PC
D	Pole 1		1 PC
E	Pole 2		1 PC
F	Lamp Body		1 PC
G	Scews		
H	Bracket		1 PC

Recommended bulb

G9 LED Bulb only
 15 x 4 watt energy efficient G9 LED bulbs
 Bulb replaceable
 Bulb not included


1

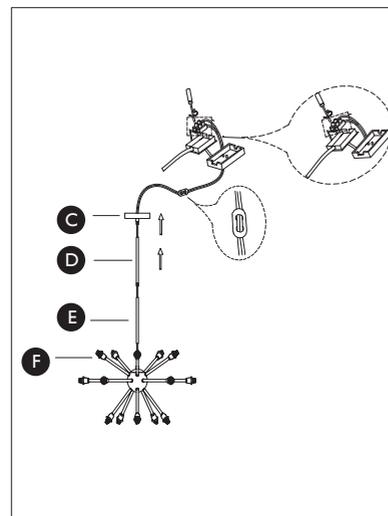

Carefully unpack the carton, making sure all parts are included before assembly. Place lamp parts on a flat surface.

Note: If you would like to shorten this lamp to fit ceiling height, you can open the electrical connections and loosen the 8-shaped cord anchorage as shown. Then unscrew the canopy (C) to reduce the number of poles (D&E) and adjust the power cord to preferred length. Secure the surplus cable inside canopy to upper part of the 8-shaped cord anchorage.

2

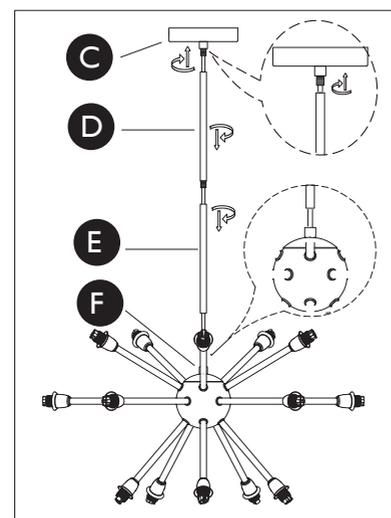


Screw pole 2 (E) clockwise into the socket of lamp body (F). Screw pole 1 (D) clockwise into the pole 2 (E) until tight. Then, screw canopy (C) clockwise into pole 1 (D) until tight.

Product Assembly

3

(H)

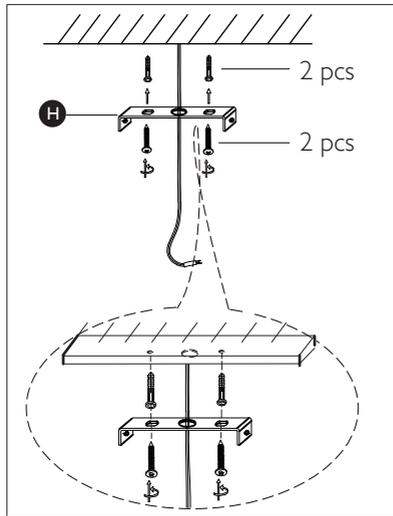


Mark screw position on the ceiling with screw anchor.

Note: Make sure there is a joist, or other suitable means of support for the weight of the fitting at the intended fixture position. Ensure there are no hidden wires, water pipes or gas pipes before drilling holes. Drill the mounting hole with a 6mm drill bit. The fixed backplate (H) needs to penetrate joist by at least 25mm. Secure the backplate (H) to wall with screws.

Note: Screws are purchase separately, they are not included in the packaging.

4

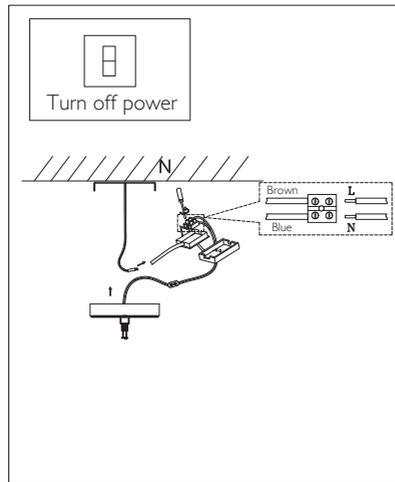


Ensure the house electricity supply is switched off at the fuse board. Make electrical connections on terminal block as shown. Connect supply live (normally brown or red color)to fitting live (marked "L") on the terminal block. Connect supply neutral (normally blue or black color) to fitting neutral (marked "N") on the terminal block. Ensure electrical connections are tight and no loose strands of wire are left out of the connector block. Place terminal block into the black protection box, and screw in the position.

Product Assembly

5


(C) (G) (H)

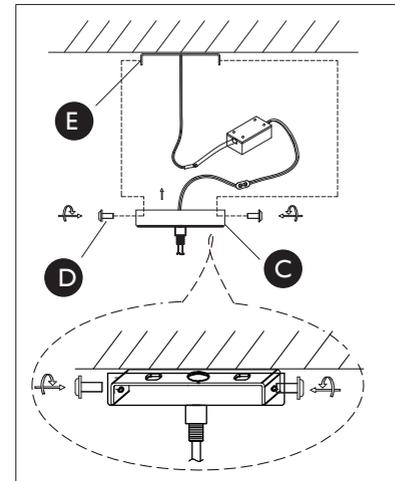

Place canopy (C) over bracket (H) with screws (G). Tighten screws (H) to make sure fixture is secured.

6

(A) (B) (F)

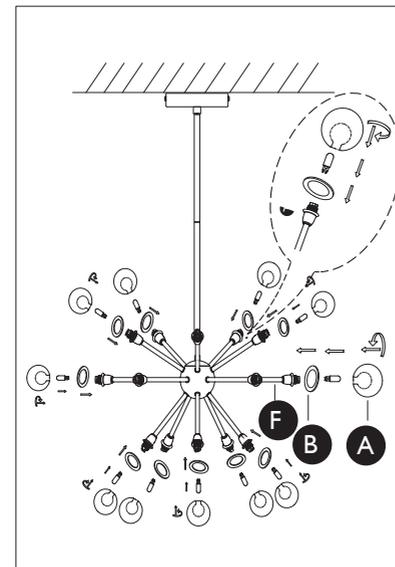

Place the silicone rings (B) on the socket of lamp body (F). Install G9 LED bulbs into the socket of lamp body (F). Then screw glass shades (A) onto the socket of lamp body (F). Repeat steps to complete assembly.

Note: Do not over tighten the glass shade (A), if it is screwed down too tight the glass could be break. When complete, switch on the house electricity supply at the fuse board.