
**Caring for
your product**

We recommend cleaning with a soft dry cloth. Do not use abrasive materials as these will damage the finish.

**Aftercare and
Troubleshooting**

If you experience any unresolvable technical issues with the product, contact your nearest John Lewis & Partners shop or John Lewis & Partner Technical Support on 03301 230106.


Specification

Max. wattage: 5 x 40W
Voltage: 220–240V, 50Hz
IP rating: 20
Weight: 2kg

**5 year guarantee**

At John Lewis & Partners we test every light to high quality standards so we are able to offer you a 5 year guarantee.

Recycling

This symbol  indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis & Partners do not operate instore take back, but as members of the Distributor Take Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.



John Lewis Partnership
171 Victoria Street
London SW1E 5NN
johnlewis.com

Made in China

Please retain these instructions for future reference.

26/11/2020



CLEMONT 5 LIGHT PENDANT USER GUIDE







Thank you for purchasing this Clemont Pendant.
Please read the instructions carefully before
use to ensure safe and satisfactory operation
of this product.

Warnings



This is a Class 1 product and must be earthed.
It is recommended that this fitting is installed by a qualified electrician.
Install in accordance with the IEE Wiring regulations and the Building Regulations.
To prevent electrocution switch off at mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply without your knowledge.
If you are in any doubt, please consult a qualified electrician.
This light fitting should be connected to a 5 amp fused circuit.
If replacing an existing fitting, make a note of the connections.
Always use the correct type and wattage bulb. Never exceed the wattage stated.
When changing a bulb or adjusting the heads, always switch off at the mains and allow to cool down. Dispose of used bulbs carefully.
This product is suitable for indoor use only.
This product is suitable for installation on surfaces with normal flammability e.g. wood, plasterboard, masonry. It is not suitable for use on highly flammable surfaces (e.g. polystyrene, textiles).
For your safety, always switch off the supply before changing lightbulbs, cleaning or removing shades. This product is heavy. Therefore take extreme care when installing and cleaning this product, or changing the bulb, to avoid damage or injury.

Parts list

		Qty
Light fitting		1
Shade		1
Wall plugs		2
Screws		2

Recommended Bulb

Recommended bulb (not included)

 
5 x 40W E14 Candle

When changing a bulb, always switch off at the mains and allow the bulb to cool before handling. Dispose of used bulbs carefully. Do not exceed the rated power stated or use a different shape bulb from that indicated on the fitting.

1


Refer to assembly diagrams below. Carefully unpack the carton, making sure all the parts are present before assembly.
Before removing the existing fitting, carefully note the position of each set of wires.

2

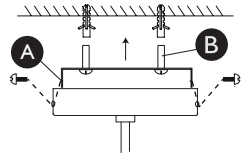


Remove the fixing bracket (A) from the ceiling cover and attach to the ceiling using the screws (B) provided. Ensure there is a joist at the point of fixing to support the weight of the product. Take care to avoid damaging any concealed wiring and pipes.

 3

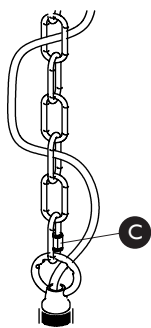


Height Adjustment
The drop of this product can be reduced. This is easier to do before attaching the product to the ceiling.
The bottom chain link is a carabiner type link. Unscrew the collar (C) on the link and detach the link from the ceiling cover and chain. Work out the chain link that the carabiner will attach to and refit the carabiner link to this chain link and the hanging loop on the ceiling cover. Tighten the screw collar on the carabiner. Remove the excess chain links with a pair of pliers. Always ensure the weight of the fitting is supported by the chain and not the cable.

 4

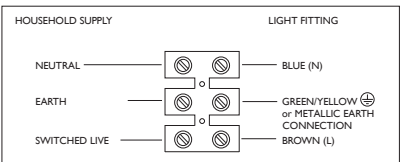

Check that: You have correctly identified the house wires. The connections are tight. No loose strands have been left out of the connection block.
When completed, ensure that there are no bare or loose strands of wire exposed.

 5

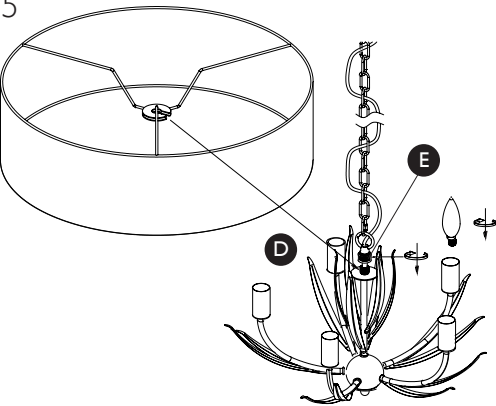

Re-attach the product to the fixing bracket and tighten the side screws.
Take care not to trap any wiring.
Fit the shade by slotting onto the stem washer (D). Secure in place by tightening the collar (E).
Fit a recommended bulb into the product.
Replace fuse or circuit breaker and switch on.
Your light is now ready for use.