

---

**Caring for  
your product**

We recommend cleaning with a soft dry cloth. Do not use abrasive materials as these will damage the finish.

---

**Aftercare and  
Troubleshooting**

If you experience any unresolvable technical issues with the product, contact your nearest John Lewis & Partners shop or John Lewis & Partner Technical Support on 03301 230106.

---

**Specification**


Max. wattage: 40W  
Voltage: 220–240V, 50Hz  
IP rating: 20  
Weight: 1.85kg

**5 year guarantee**

At John Lewis & Partners we test every light to high quality standards so we are able to offer you a 5 year guarantee.

---

**Recycling**

This symbol  indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis & Partners do not operate instore take back, but as members of the Distributor Take Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk).



---

John Lewis Partnership  
171 Victoria Street  
London SW1E 5NN  
[johnlewis.com](http://johnlewis.com)


Made in China

Please retain these instructions for future reference.

20/01/2021



## TIMELESS LANTERN USER GUIDE

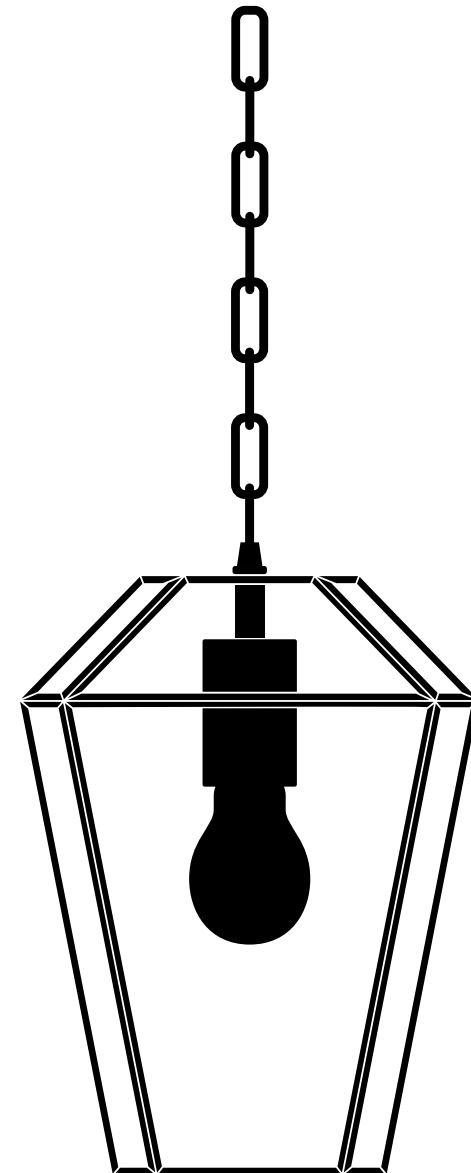

Introduction

Thank you for purchasing this Timeless Lantern.  
Please read the instructions carefully before  
use to ensure safe and satisfactory operation  
of this product.

Warnings

This is a Class 1 product and must be earthed.  
It is recommended that this fitting is installed by a qualified electrician.  
Install in accordance with the IEE Wiring regulations and the Building Regulations.  
To prevent electrocution switch off at mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply without your knowledge.  
If you are in any doubt, please consult a qualified electrician.  
This light fitting should be connected to a 5 amp fused circuit.  
If replacing an existing fitting, make a note of the connections.  
Always use the correct type and wattage bulb. Never exceed the wattage stated.  
When changing a bulb or adjusting the heads, always switch off at the mains and allow to cool down. Dispose of used bulbs carefully.  
This product is suitable for indoor use only.  
This product is suitable for installation on surfaces with normal flammability e.g. wood, plasterboard, masonry. It is not suitable for use on highly flammable surfaces (e.g. polystyrene, textiles).  
For your safety, always switch off the supply before changing lightbulbs, cleaning or removing shades. This product is made from glass and is heavy. Therefore take extreme care when installing and cleaning this product, or changing the bulb, to avoid damage or injury.

Parts list		1	Screws		2
			Wall Plugs		2

Recommended Bulb

Recommended bulb (not included)

1 x 40W (Max.) ES GLS  
or  
1 x 28W ES ECO Halogen Classic  
or  
1 x 7W ES LED Energy Efficient Classic Clear

When changing a bulb, always switch off at the mains and allow the bulb to cool before handling. Dispose of used bulbs carefully. Do not exceed the rated power stated or use a different shape bulb from that indicated on the fitting.

Product assembly

1

Refer to assembly diagrams below. Carefully unpack the carton, making sure all the parts are present before assembly.  
Before removing the existing fitting, carefully note the position of each set of wires.

2

Remove the fixing bracket (A) from the ceiling cover and attach to the ceiling using the screws (B) provided. Ensure there is a joist at the point of fixing to support the weight of the product. Take care to avoid damaging any concealed wiring and pipes.

3

Height Adjustment  
The drop of this product can be reduced and will be easier to complete before attaching the product to the ceiling. Pull the cable through the cord grip (C) until the desired height is achieved. Please note that the drop of this product can also be reduced by removing chain links. Always ensure that the weight of the fitting is supported by the chain and not the cable.

4

HOUSEHOLD SUPPLY

NEUTRAL

EARTH

SWITCHED LIVE

LIGHT FITTING

BLUE (N)

GREEN/YELLOW or METALLIC EARTH CONNECTION

BROWN (L)

Check that:  
You have correctly identified the house wires.  
The connections are tight.  
No loose strands have been left out of the connection block.  
When completed, ensure that there are no bare or loose strands of wire exposed.

5

Re-attach the product to the fixing bracket and tighten the side screws.  
Take care not to trap any wiring.  
Fit a recommended bulb into the product.  
Replace fuse or circuit breaker and switch on. Your light is now ready for use.