


Wooden modern kitchen


Thank you for purchasing this toy. Please read the instructions and warnings carefully before use.


Assembly instructions


Adult assembly of this product is required. Cross head screwdriver required for assembly.

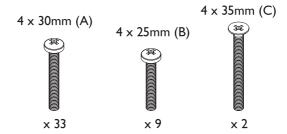



Parts list

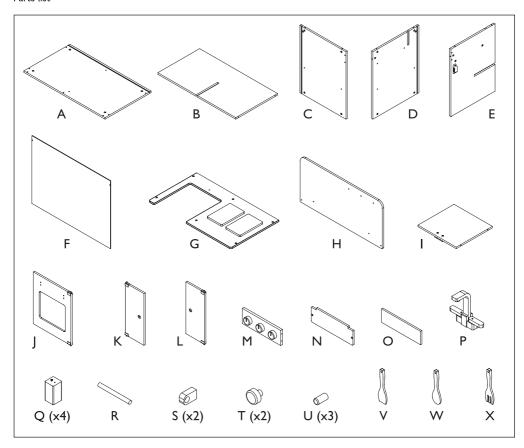


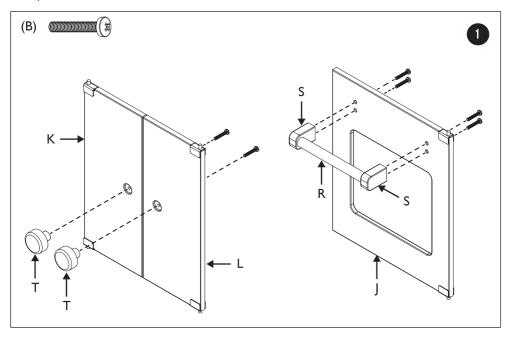


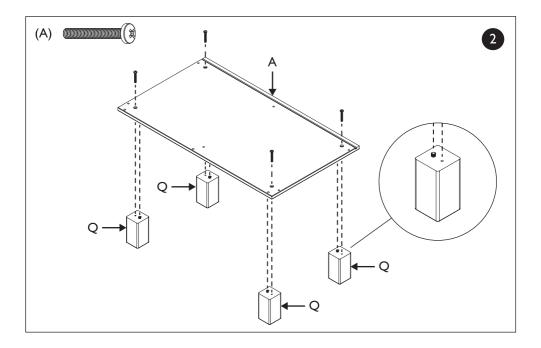


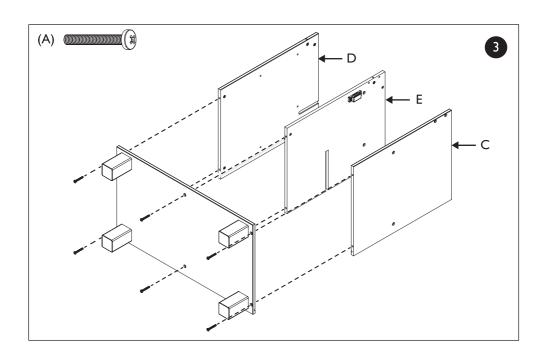


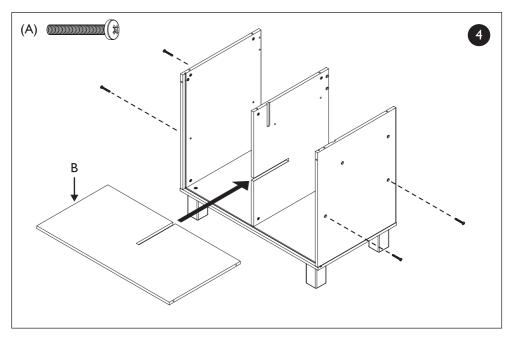


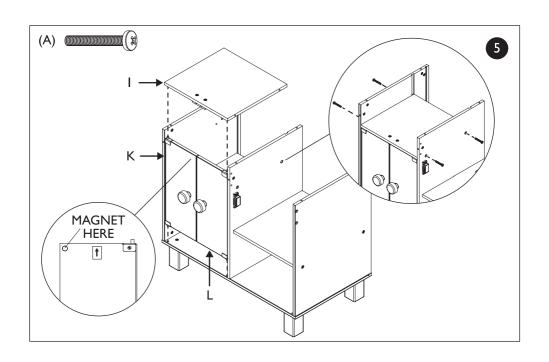


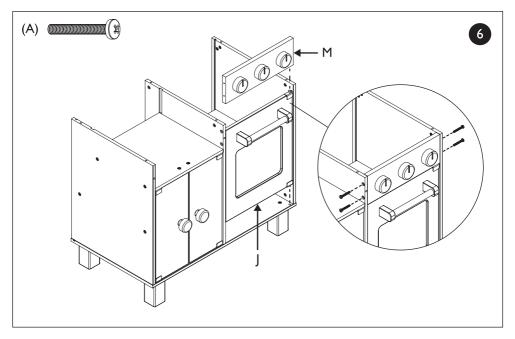

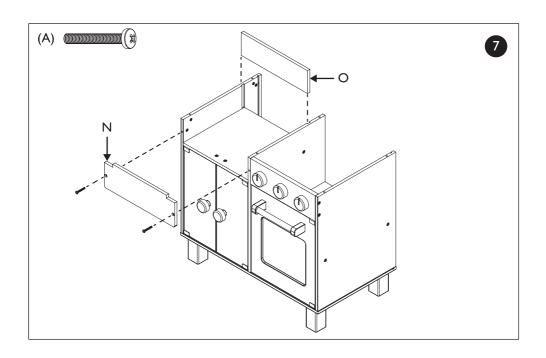

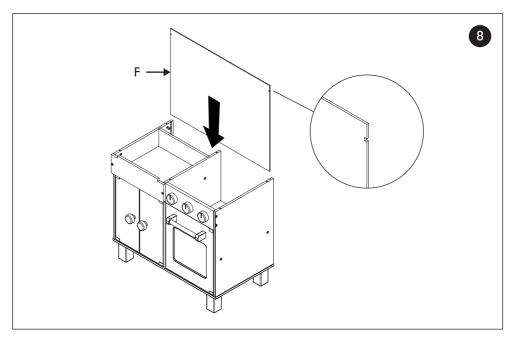

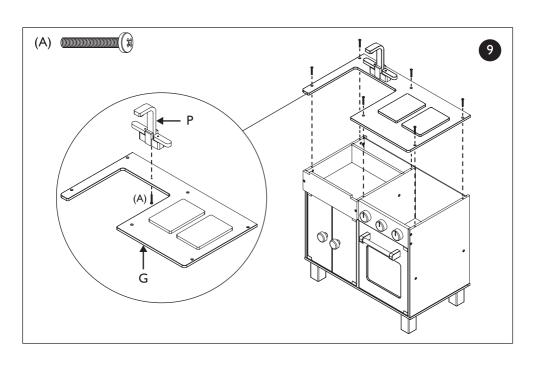

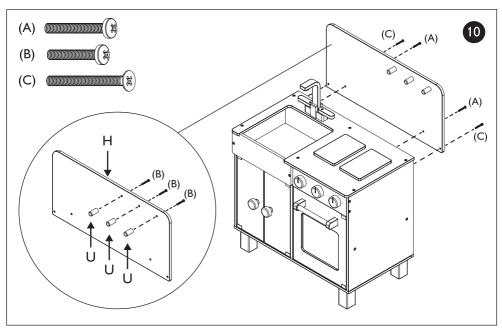

Warnings!

Not suitable for children under 3 years. Small parts - Choking hazard.

Adult supervision is required at all times.

The unassembled product contains small parts and sharp edges that are not suitable for children to access.

Care should be taken in unpacking and assembly.

Fittings may loosen with use over time. Regularly check and tighten loose fittings to prevent children from removing them and to preserve the strength of the product. Do not over-tighten them.

Remove all packaging / tags before giving to a child.

Please retain this information leaflet for future reference.

John Lewis Plc 171 Victoria Street London SW1E 5NN johnlewis.com

