


# Mixit dressing table

Stock Code: 80319114 - 80319214 - 80319014

---

Thank you for purchasing this Mixit dressing table. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

---

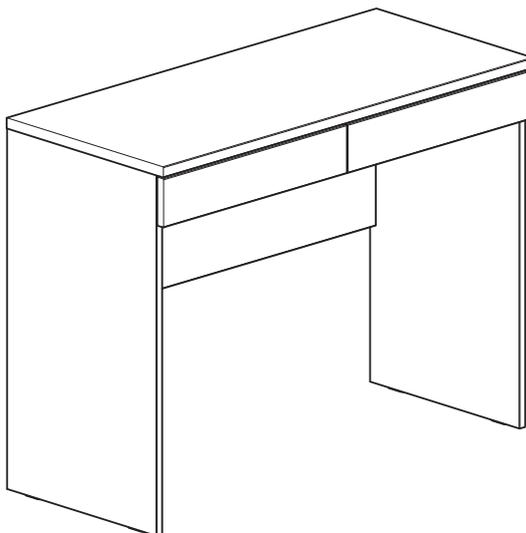


---

## PRE-ASSEMBLY PREPARATION

Please ensure instructions are read in full before attempting to assemble this product.

---

### Necessary Tools



Screwdriver



Spirit level



Drill



Eye protection



Ruler/tape  
measure



Small hammer

---

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the John Lewis Helpline.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.





This product takes approximately **50 MINUTES** to assemble with **2 PEOPLE**.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.



Read this leaflet in full before commencing assembly.

If you are missing some fittings please contact our spare parts helpline on 0330 005 9435. Opening hours are 9am - 5pm Monday to Friday.

# Fittings checklist
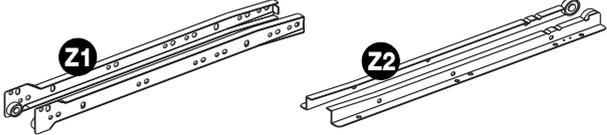
<p><b>A</b></p>  <p>Metal dowel x 13</p>	<p><b>B</b></p>  <p>Cam lock x 13</p>	<p><b>C</b></p>  <p>Wooden dowel x 12</p>
<p><b>D</b></p>  <p>Conformat x 8</p>	<p><b>E</b></p>  <p>25mm Screw x 4</p>	<p><b>F</b></p>  <p>Support foot x 4</p>
<p><b>G</b></p>  <p>Fixing block x 4</p>	<p><b>H</b></p>  <p>11mm Euroscrew x 4</p>	<p><b>I</b></p>  <p>15mm Screw x 6</p>
<p><b>L</b></p>  <p>Bumper x 2</p>	<p><b>M</b></p>  <p>Levelling Wedge x 2</p>	
 <p>Pair of rollers 1</p>		

# Parts checklist

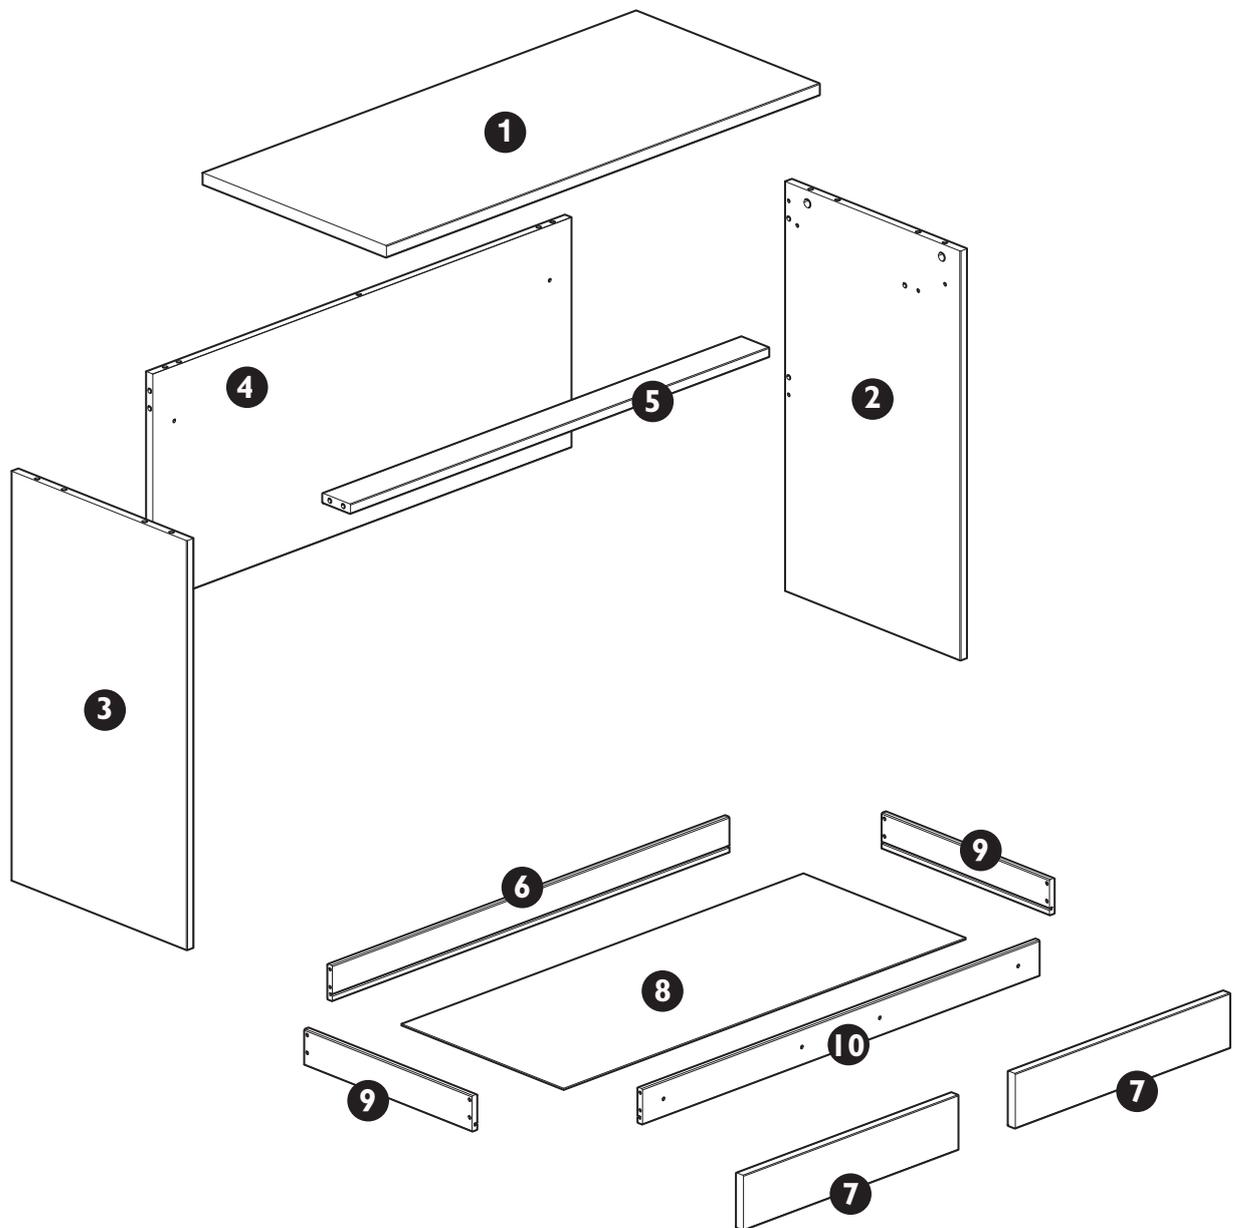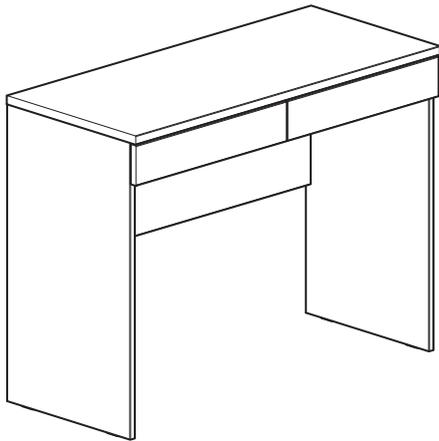


---

# Step by step assembly instructions

---

## Step One


1. Place 7x cam lock (B) into the holes on back panel (4) as shown, arrow pointing towards the bolt.
2. Attach 4x wooden dowels (C) into the pre-drilled holes on rails (5) (6) as shown.

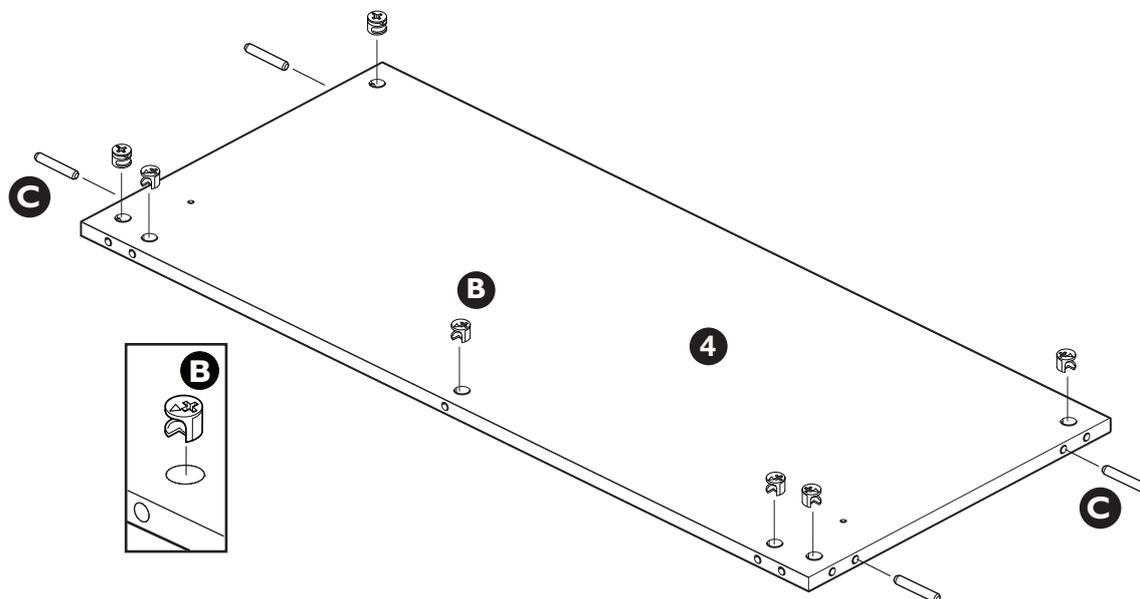

---

## Step Two


1. Attach 7x metal dowels (A) into the pre-drilled holes on top panel (1) as shown. Use a screwdriver to turn fitting (A) clockwise to fix.

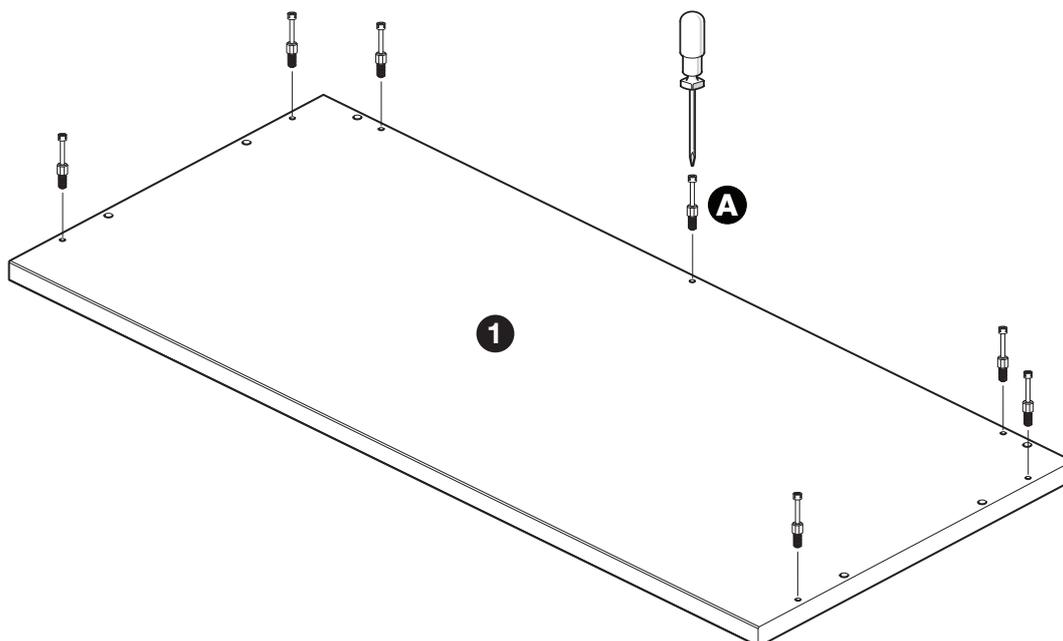

# Step by step assembly instructions

## Step Three


1. Attach 6x metal dowels (A) into the pre-drilled holes on side panels (2) (3) as shown. Use a screwdriver to turn fitting (A) clockwise to fix.
2. Attach 4x support foot (F) into pre-drilled holes on side panels (2) (3) as shown.
3. Fix 2x runner parts (Z1) to the side panels (2) (3) through holes shown in the detail view using 4x euroscrews (H) and 2x screws (I).
4. Place 4x cam lock (B) into the holes on side panels (2) (3) as shown, arrow pointing towards the bolt.

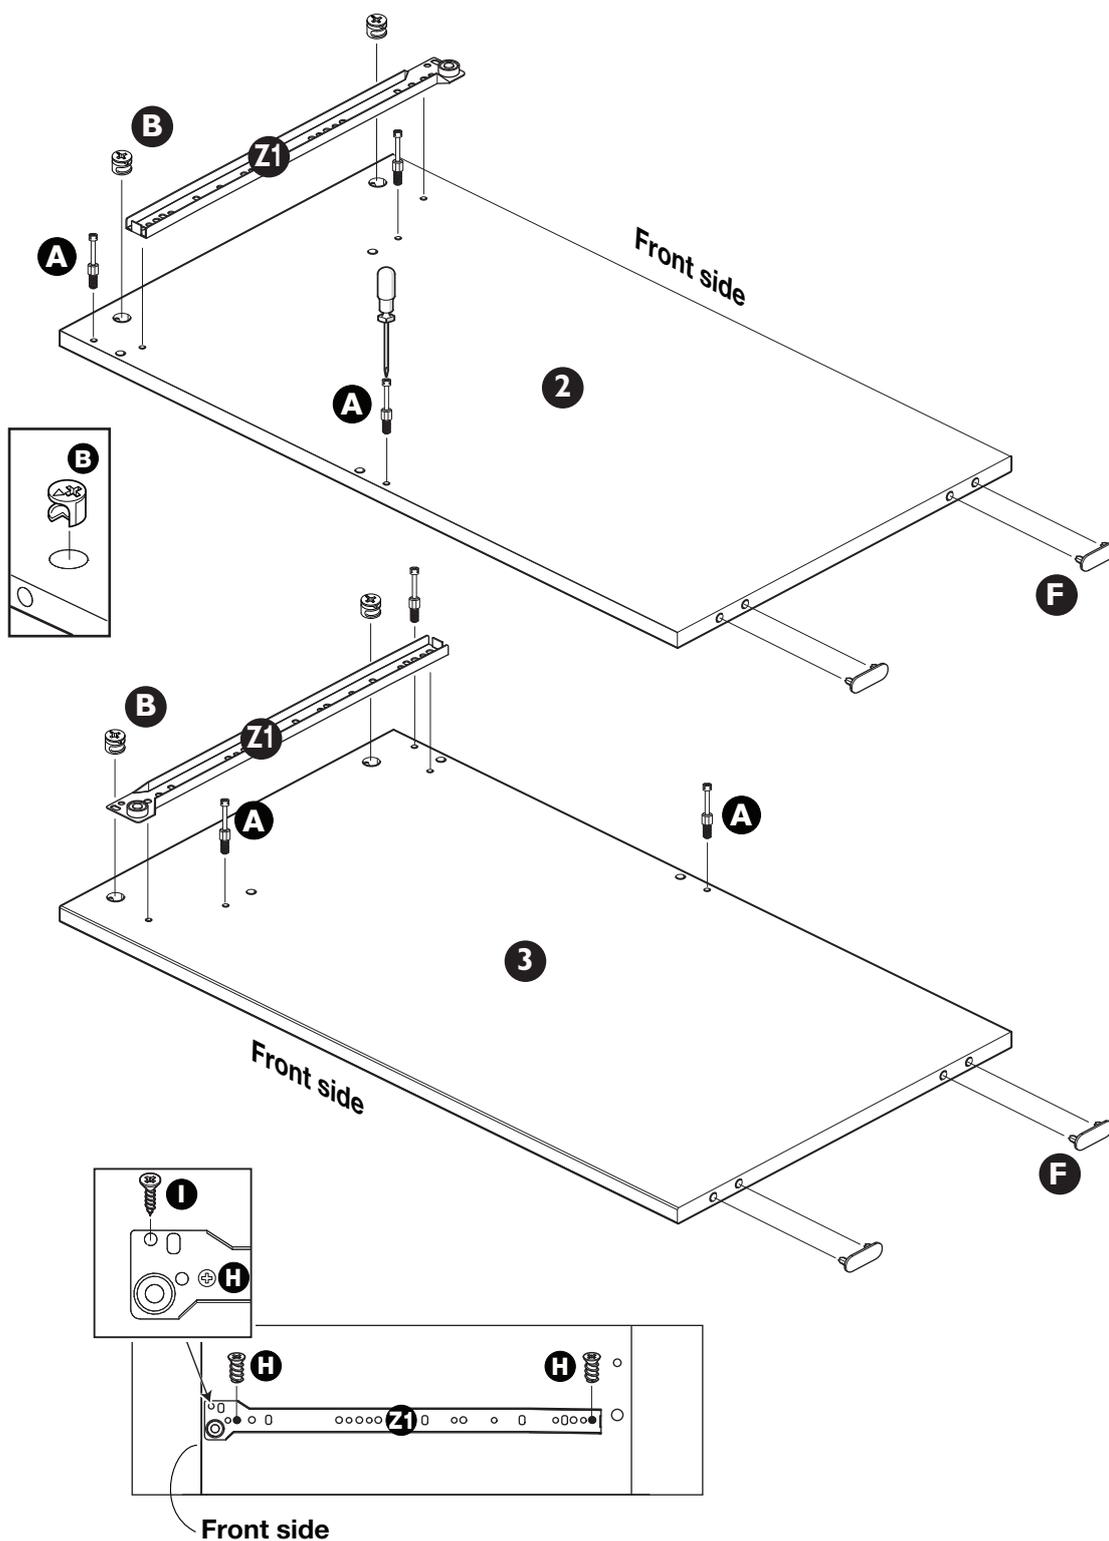

# Step by step assembly instructions


## Step Four

1. Place 2x cam lock (B) into the holes on rail (5) as shown, arrow pointing towards the bolt.
2. Attach 2x wooden dowels (C) into the pre-drilled holes on rail (5) as shown.

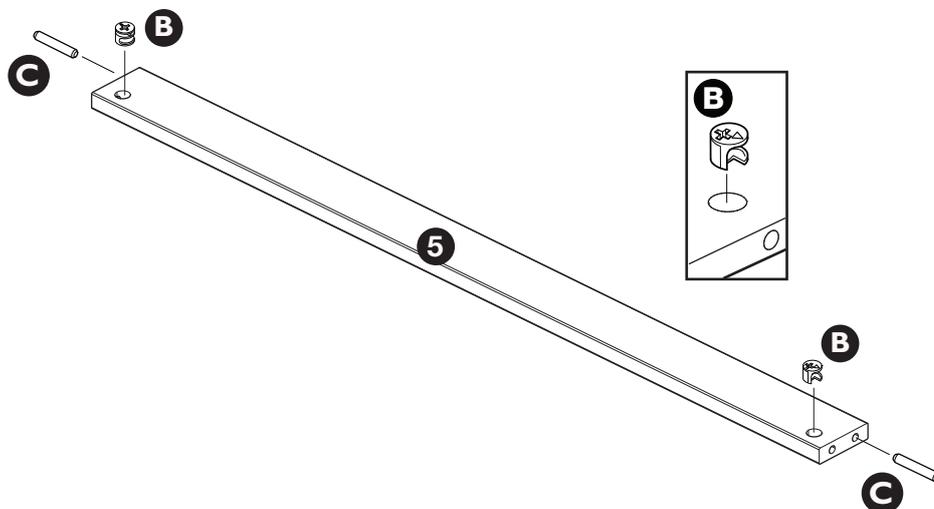

## Step Five


1. Attach back panel (4) and rail (5) onto sides (2) (3) as shown. Ensure metal dowels (A) and wooden dowels (C) are aligned correctly with the holes of matching parts before attaching.
2. Secure back panel (4) and rail (5) onto sides (2) (3) using a screwdriver to turn fitting (B) clockwise to fix.

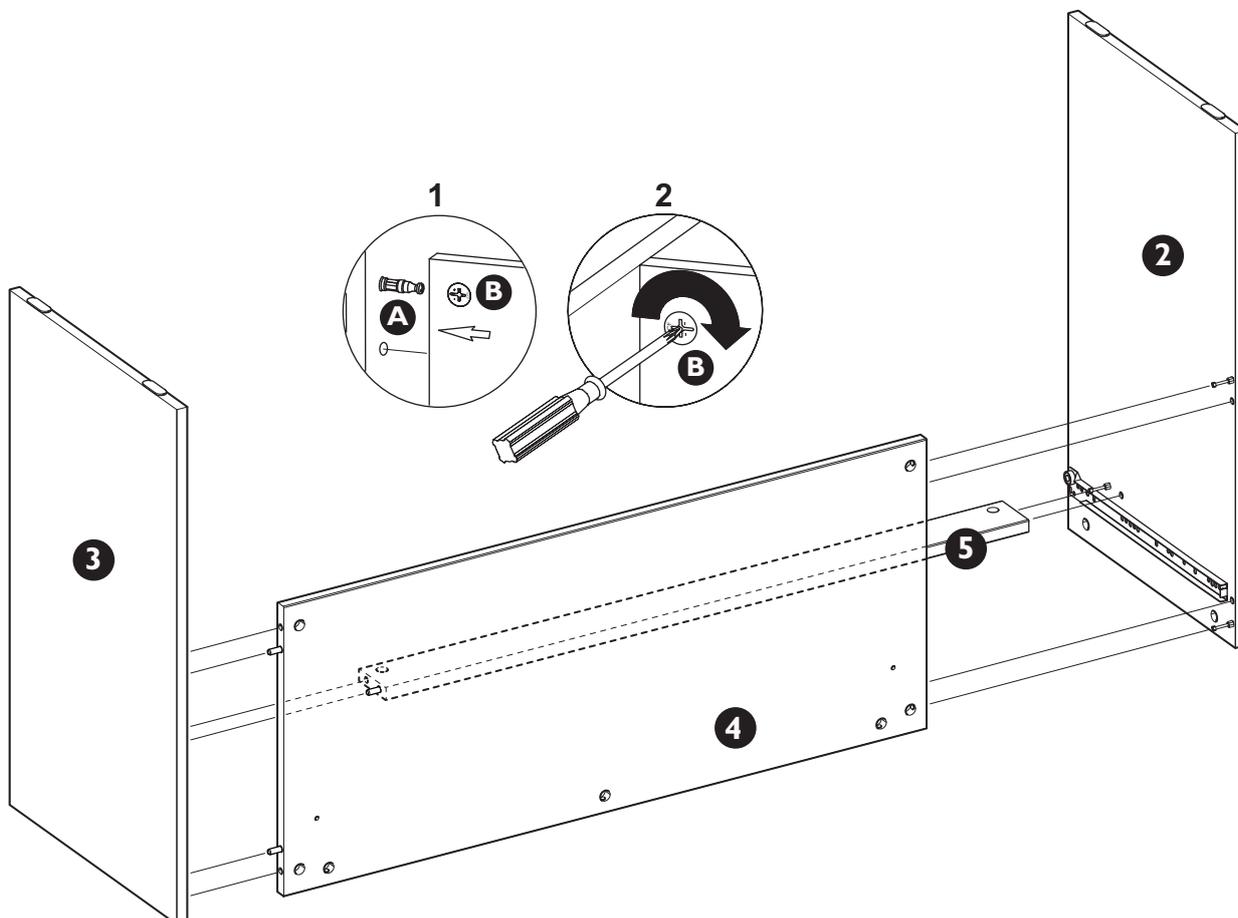

# Step by step assembly instructions


## Step Six

1. With help of an assistant, carefully stand up the unit.

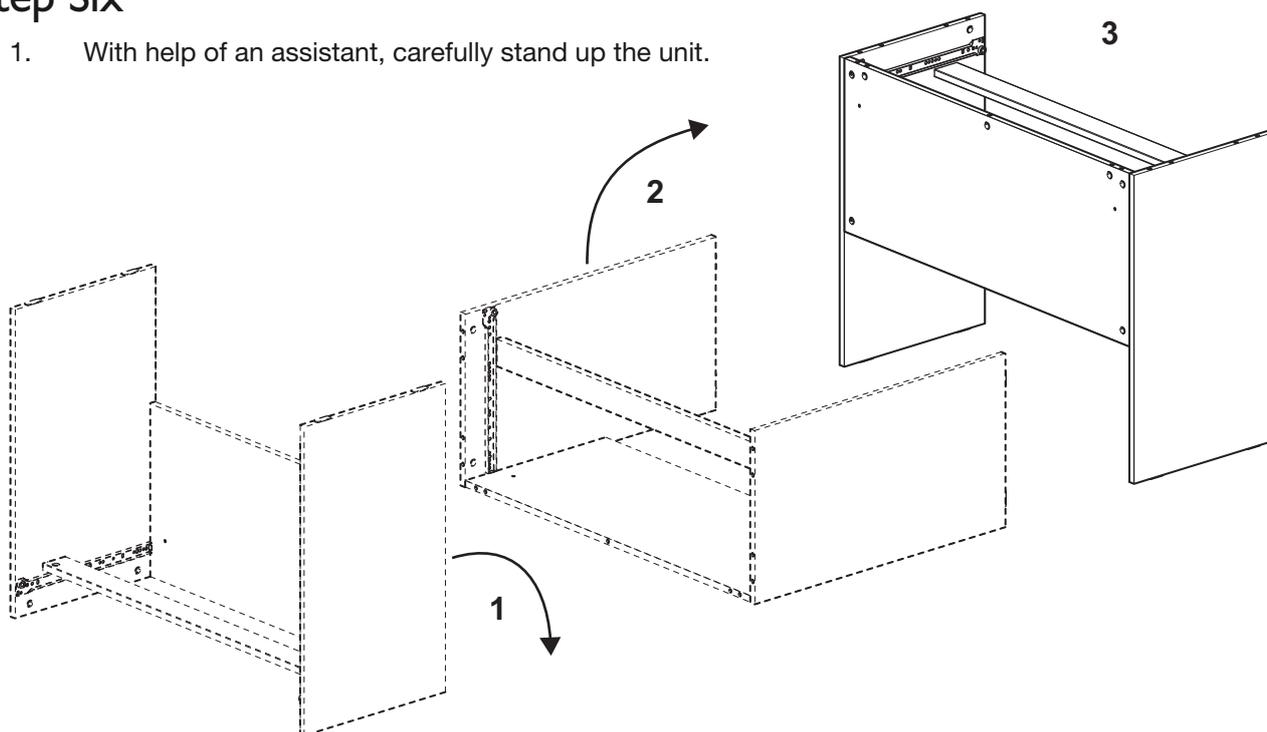

## Step Seven

1. Attach 4x wooden dowels (C) into the pre-drilled holes on sides (2) (3) as shown. Attach top panel (1) onto sides (2) (3) as shown. Ensure metal dowels (A) and wooden dowels (C) are aligned correctly with the holes of matching parts before attaching.
2. Secure top panel (1) to sides (2) (3) using a screwdriver to turn fitting (B) clockwise to fix.

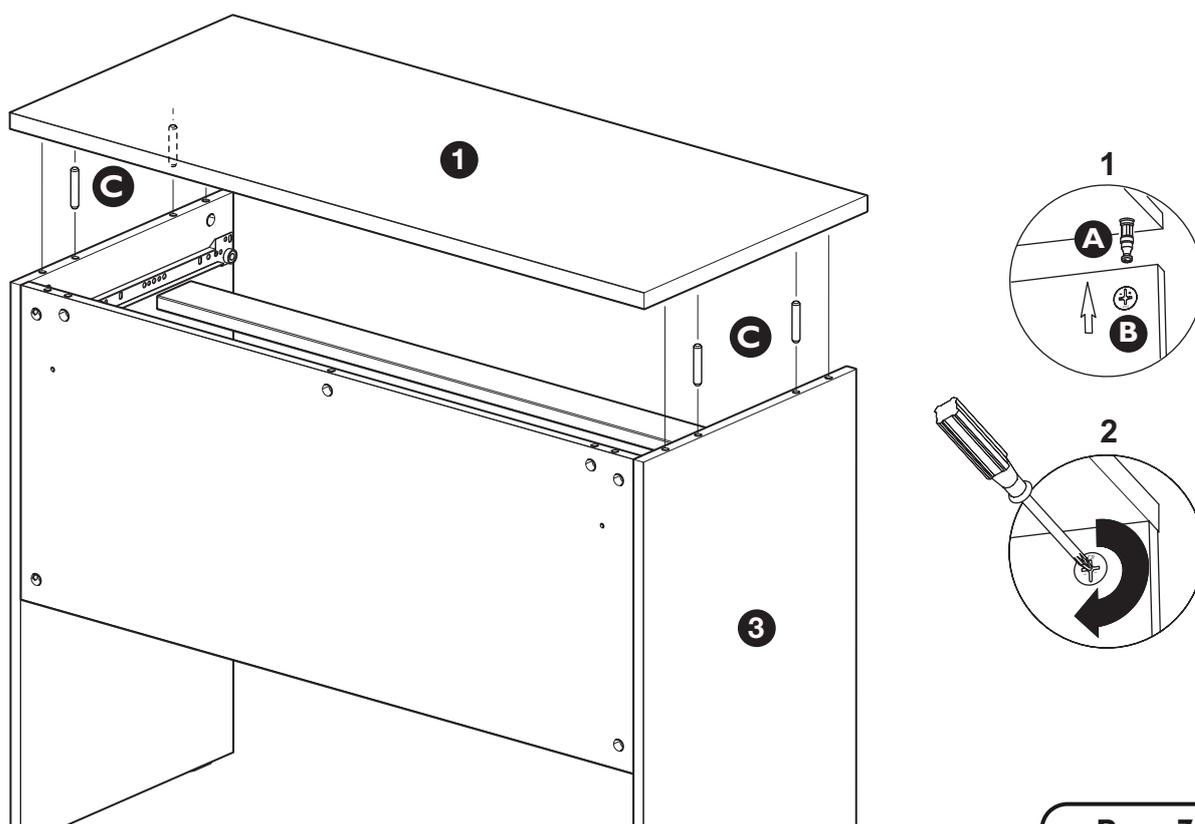


---

# Step by step assembly instructions

---

## Step Eight


1. Use 2x levelling wedge (M) to level the unit.

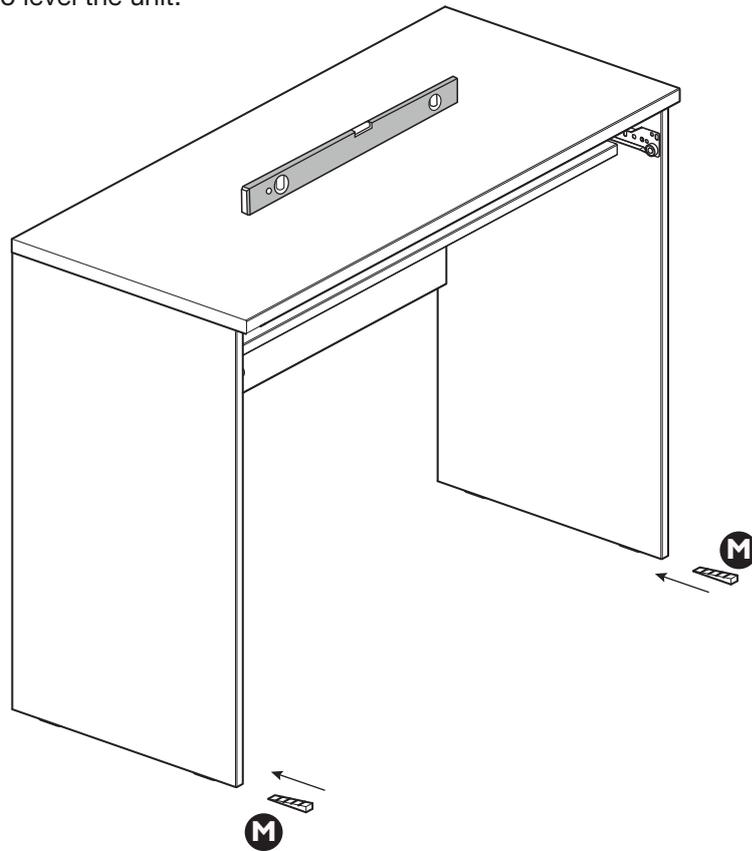

---

## Step Nine

1. Fit the drawer side (9) to the drawer back (6) and drawer front (10) using 4x conformat screw (D).

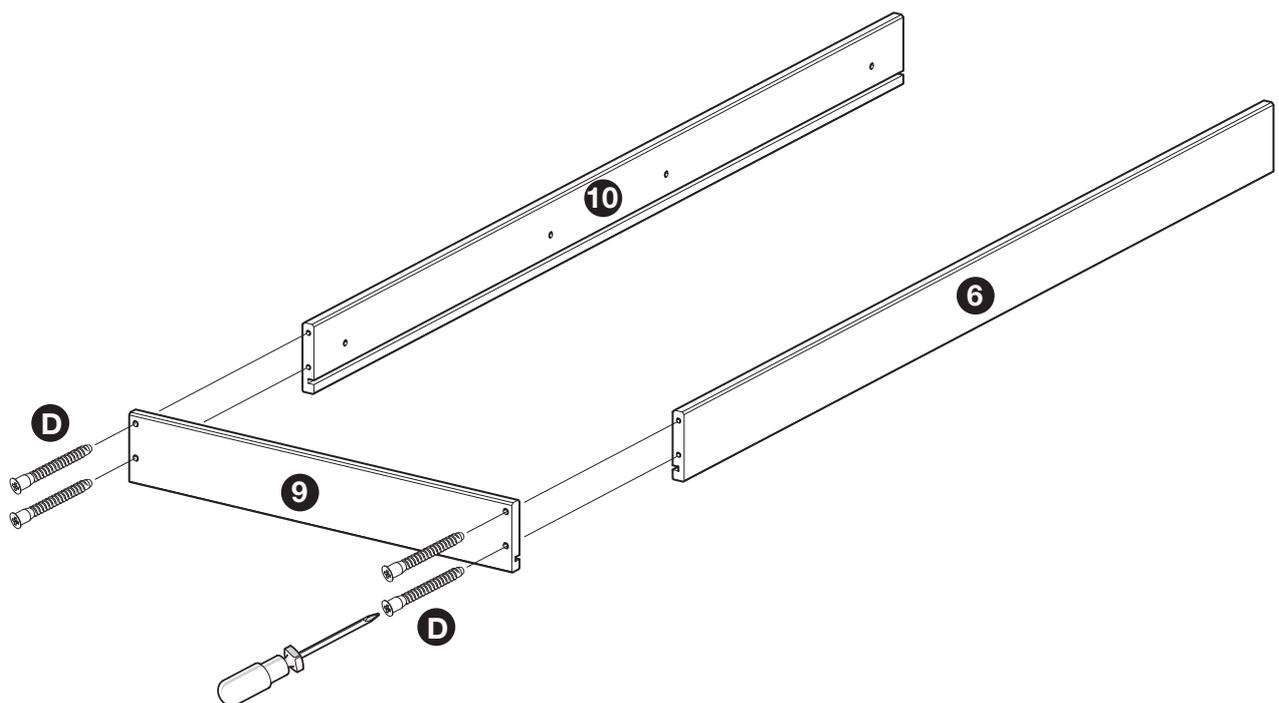


---

## Step by step assembly instructions

---

### Step Ten


1. Slide drawer bottom panel (8) into the drawer box grooves.
2. Fit the drawer side (9) to the drawer back (6) and drawer front (10) using 4x conformat screw (D).

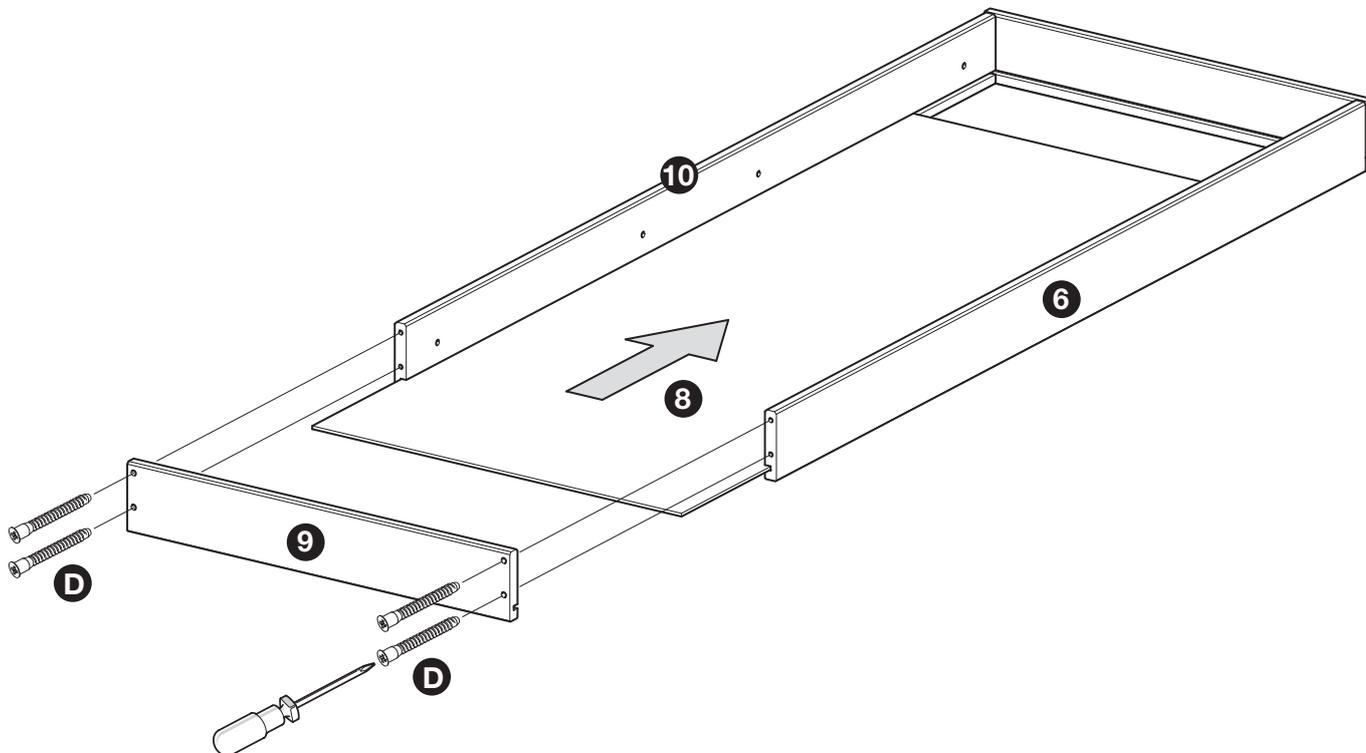

---

### Step Eleven


1. Fit the drawer fronts (7) to the drawer front (10) using 4x screw (E).

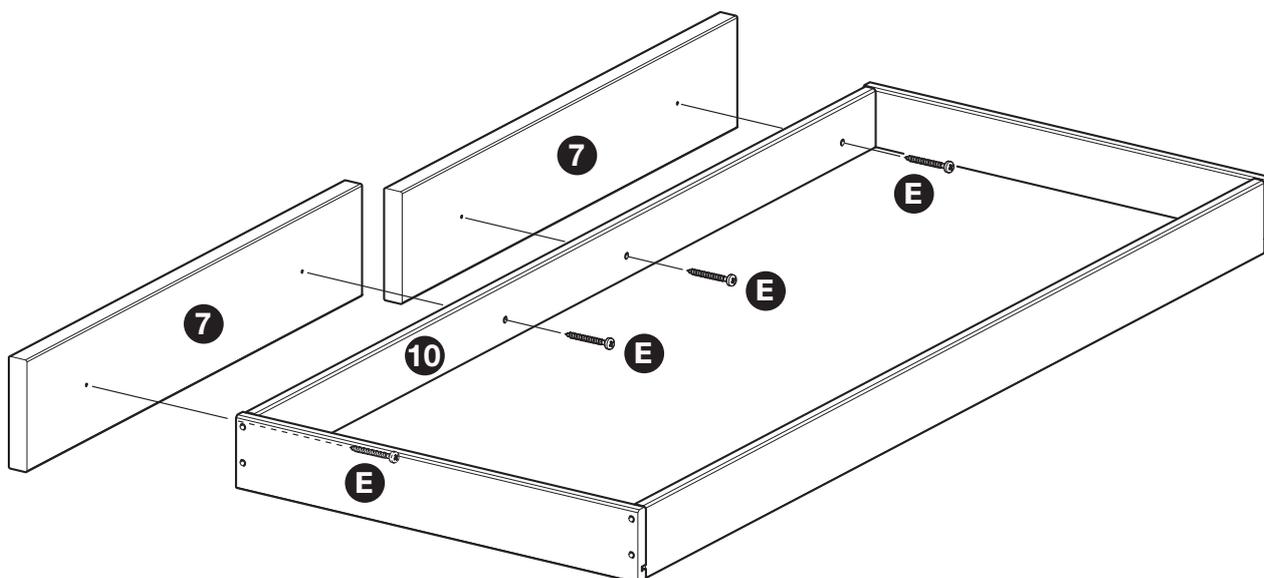

## Step by step assembly instructions

### Step Twelve


1. Fix runner part (Z2) onto the drawer using 4x screws (I)
2. Fix 2x bumper (L) as shown.
3. Position 4x fixing blocks (G) into the groove of the drawer back, drawer front and screw to fix.

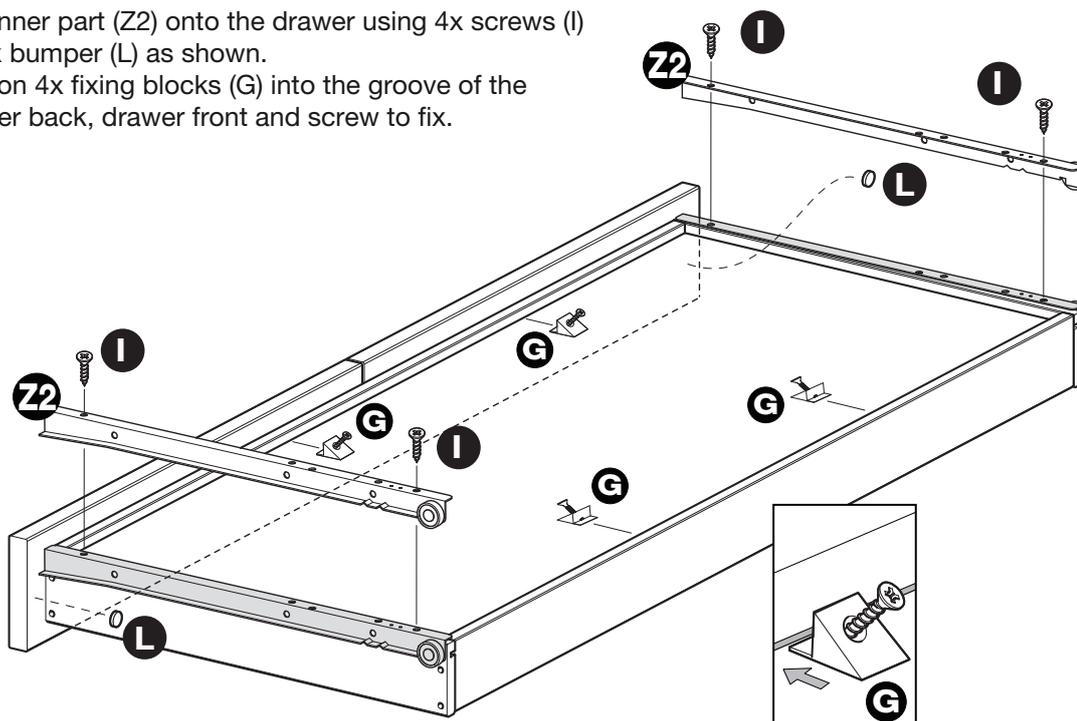

### Step Thirteen

1. To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by using appropriate wall plug and screw (not included) and the two holes into back panel (4).

See wall fixings guide at the end of booklet.

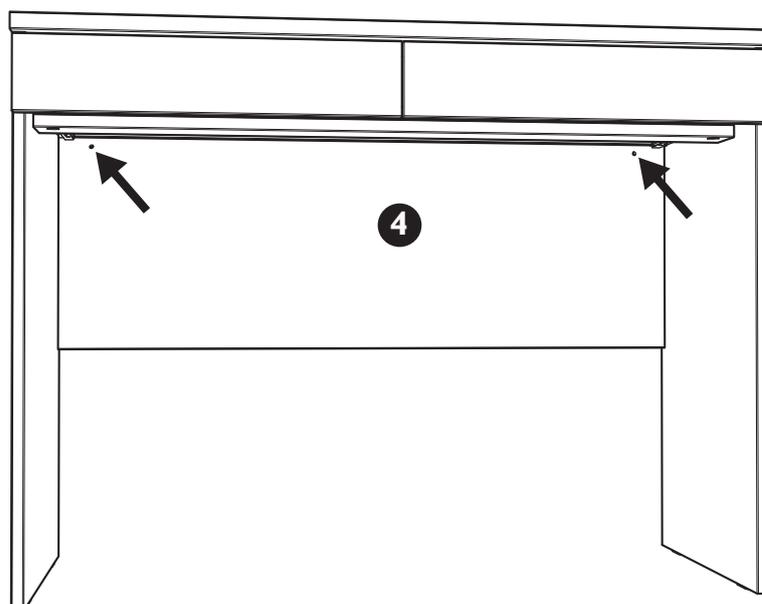


---

## Step by step assembly instructions

---

### Step Fourteen


1. Tilt the drawer as shown.
2. Slide the drawer box along the runner parts until the stop.  
Wheels and runner parts have to be correctly matched as shown.

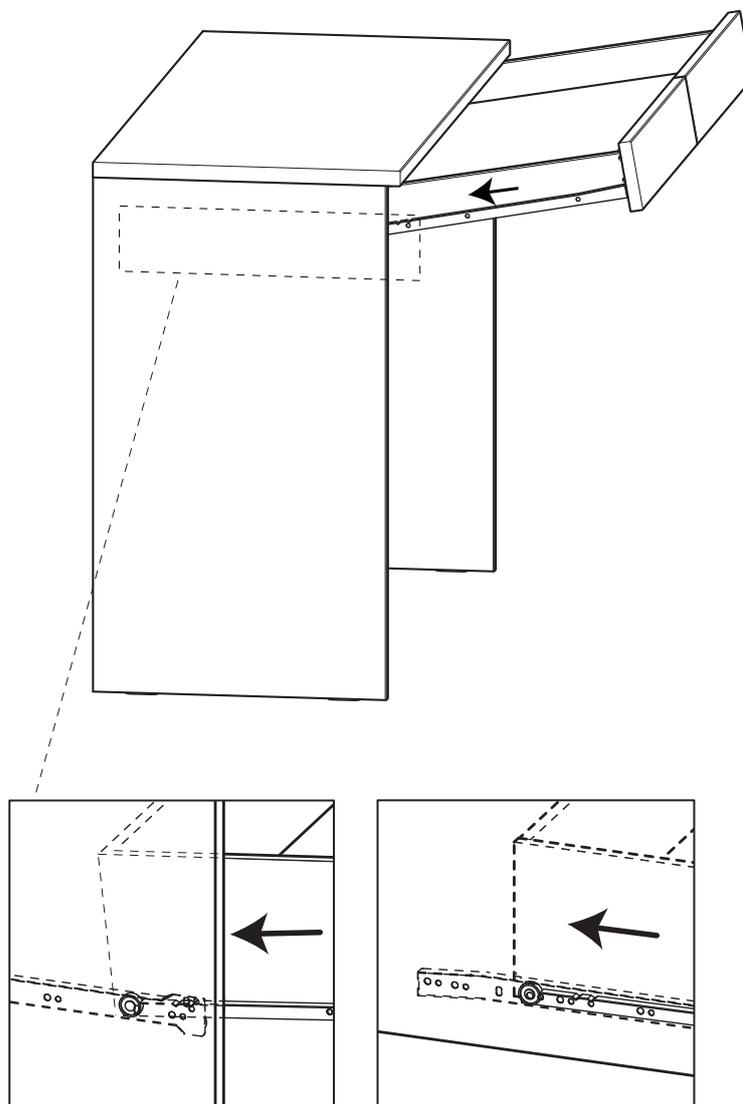


---

## Wall fixing - if in doubt seek professional advice


---

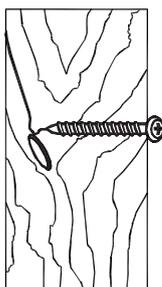

**Wood**  
If fixing to wood make sure that it isn't chipboard as screws can easily pull away from the core structure

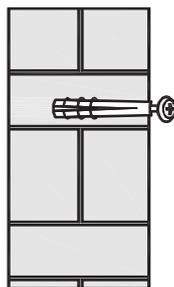

**Brick or Masonry**  
Use an appropriate wall plug provided you are sure your wall is sound.

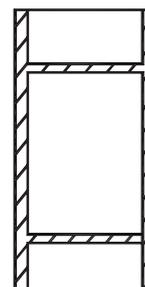

**Cavity wall**  
Special toggle wall plugs are needed. Seek expert advice.

---

## Care and Maintenance

---

This product has been manufactured using modern manufacturing methods and materials.

To keep your product, looking at its best, we strongly recommend either dusting with a soft cloth, or the use of a damp (not wet) cloth and water containing no more than a 5% soap solution. Dry with a soft clean cloth.

Aggressive chemicals, such as wax furniture polish, abrasive cleaners, bleach or hypochlorate (chlorine) based cleaners, multi purpose cleaners, dilutes, acetone, alcohol and solvent based liquid product should NOT be used, as may result in damage.

---

## Safety Instructions

---

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten when necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

It is recommended that before moving a heavy object to a new location it is completely dis-assembled to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

It is recommend by John Lewis that this product is fixed securely to a wall. However this is not compulsory. No liability will be accepted for damage or injury caused by inadequate fixing or use without fixing.

**PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE**

John Lewis Partnership 171 Victoria Street London SW1E 5NN  
[www.johnlewis.com](http://www.johnlewis.com)