Care instructions


Wipe clean with a dry soft cloth.

Warnings!

The fittings pack contains small items which should be kept away from young children.



BEECH WOOD VALET STAND USER GUIDE

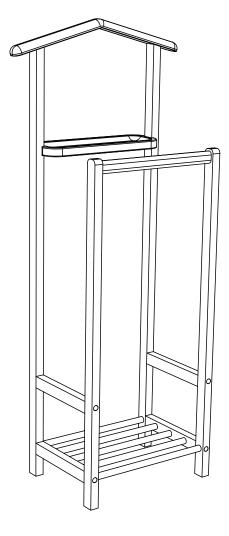

Product Code: 80161302

Pre-assembly preparation

Thank you for purchasing this product. Please read the instructions and check pack contents carefully before starting assembly of this product. A full checklist of components is given in this leaflet. If any components are missing please contact John Lewis and partners customer services.

This product will take 1 person approximately 45 minutes to assemble.

The fitting pack contains small items which could present a choking hazard and should be KEPT AWAY FROM YOUNG CHILDREN.

Read this leaflet in full before commencing assembly.

Fittings and parts checklist

No.	Picture	Name	Qty	No.	Picture	Name	Qty
A		Back Frame	1	В		Front Frame	1
9		Strip	2	Ð		Bottom Shelf	1
3	Ø	Wooden Dowel	4	•	Ø	Wooden Plug	8
G		Allen Key	1	•		Screw	8
0	00	Eva Roundel Sticker	4				


Helpful advice before you begin

- 1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
- Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
- 3. Assemble this product on a soft surface.
- 4. To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.
- 5. We recommend a periodic check on all fixing points to make sure they remain fully tightened.
- Keep out of reach of small children. It contains small parts which might present a choking hazard.
- 7. Do not use any other tools other than those recommended to build this product.


Assembly instructions

Step 1 Place the back frame (A) on the floor, insert two wooden dowels (E) into two holes on the back frame (A) before assembling the wooden stripe (C) and the bottom shelf (D).

Screw 4 screws (H) in place using allen key (G).

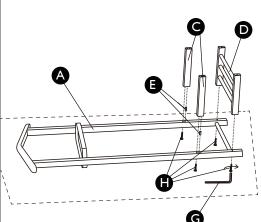

Step 2 Repeat Step 1 and finish installing the front frame (B).

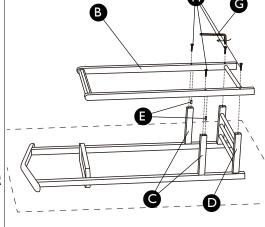

Step 3 Insert the wood plugs (F).

Step 4 Stick Eva roundel stickers (I) on each foot.

