











User manual








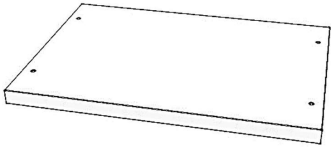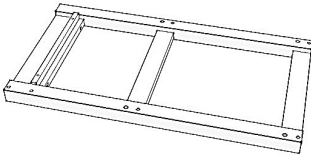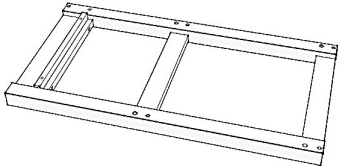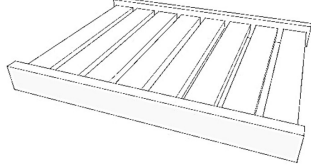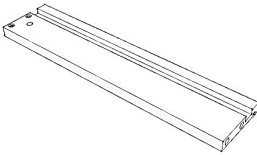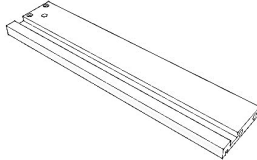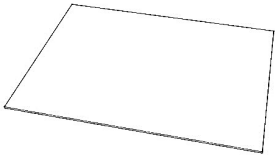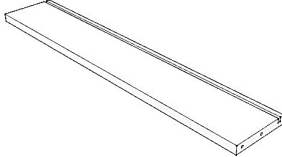



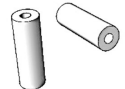



Butcher Trolley with drawer

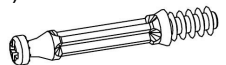

Thank you for purchasing this Butcher Trolley. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.
Before beginning assembly, please ensure you have all parts outlined in the pack contents below.

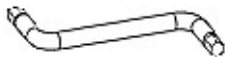Pack contents


<p>Ax1 (top panel)</p> 	<p>Bx1 (RH side)</p> 
<p>Cx1 (LH side)</p> 	<p>Dx2 (shelf)</p> 
<p>Ex1 (back rail)</p> 	<p>Fx1 (drawer front)</p> 
<p>Gx1 (LH drawer side)</p> 	<p>Hx1 (RH drawer side)</p> 
<p>Ix1 (drawer bottom)</p> 	<p>Jx1 (drawer back)</p> 

A1x14 (bolt) 	B1x10 (metal cross dowel) 
C1x10 (wooden dowel) 	D1x16 (screw 4x20mm) 
E1x4 (bolt) 	F1x4 (cam lock) 
G1x4 (screw 4x35mm) 	H1x1 (allen key) 
I1x2 (wheel with brake) 	J1x2 (wheel) 
K1x1 (wooden handle bar) 	L1x2 (wooden handle spacers) 
M1x2 (screw 4x60mm) 	N1x2 (wooden drawer stopper) 
O1x2 (wooden cover cap) 	

Assembly


Step 1

Lay shelf (D) x2 on smooth surface or on the carton. Insert (C1) x4 into predrilled holes. See the detail below.

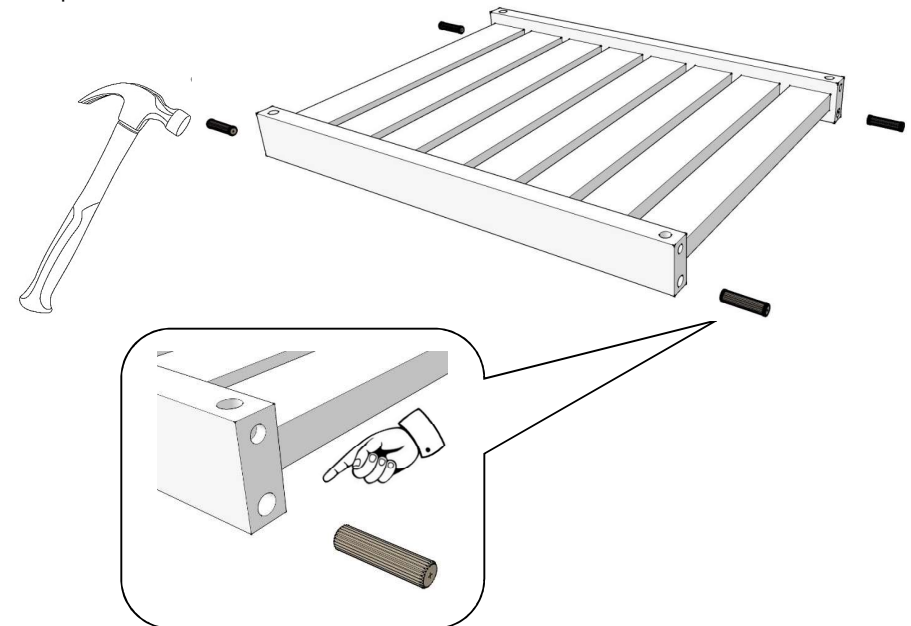


Step 2

Take part (E) and insert (C1) x2 into predrilled holes. See the detail below.

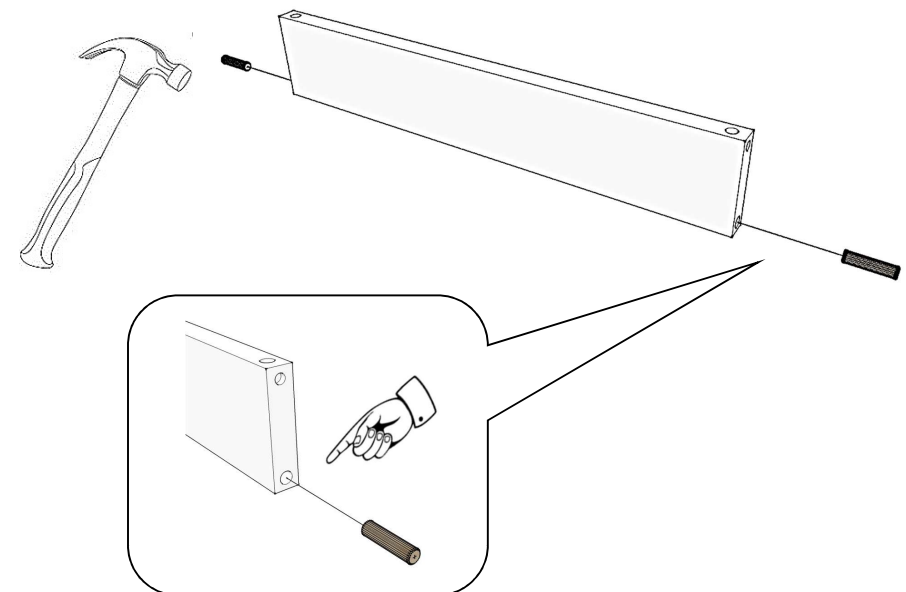



Step 3

Attach sides (B and C), shelves (D) x2 and rail (E) as shown in the diagram. Note the positions of parts C, D and E. See the detail below.

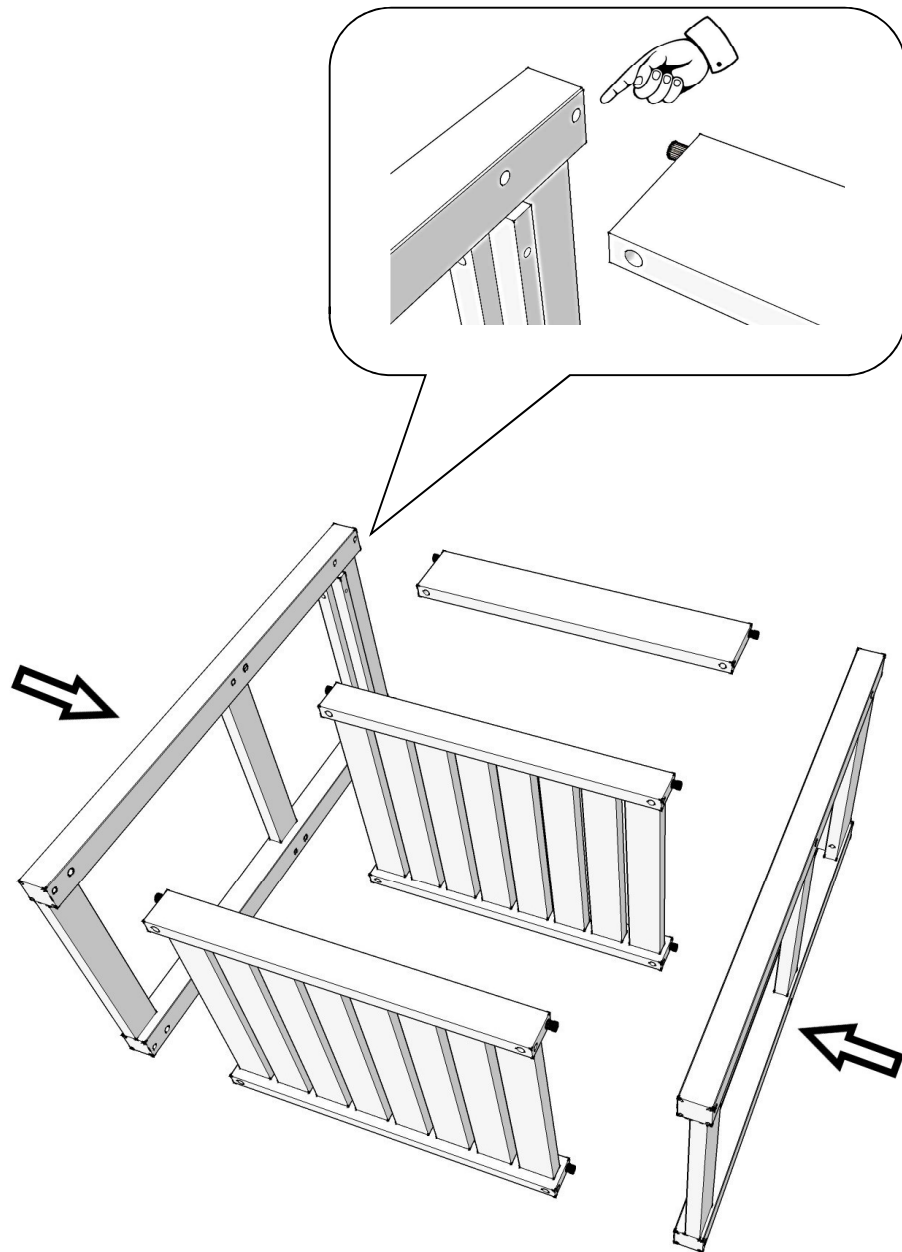


Step 4

Fix the parts together using Allen Key (H1), screws (A1) x10 and bolts (B1) x10 as shown in the diagram. Note the position of the bolts.

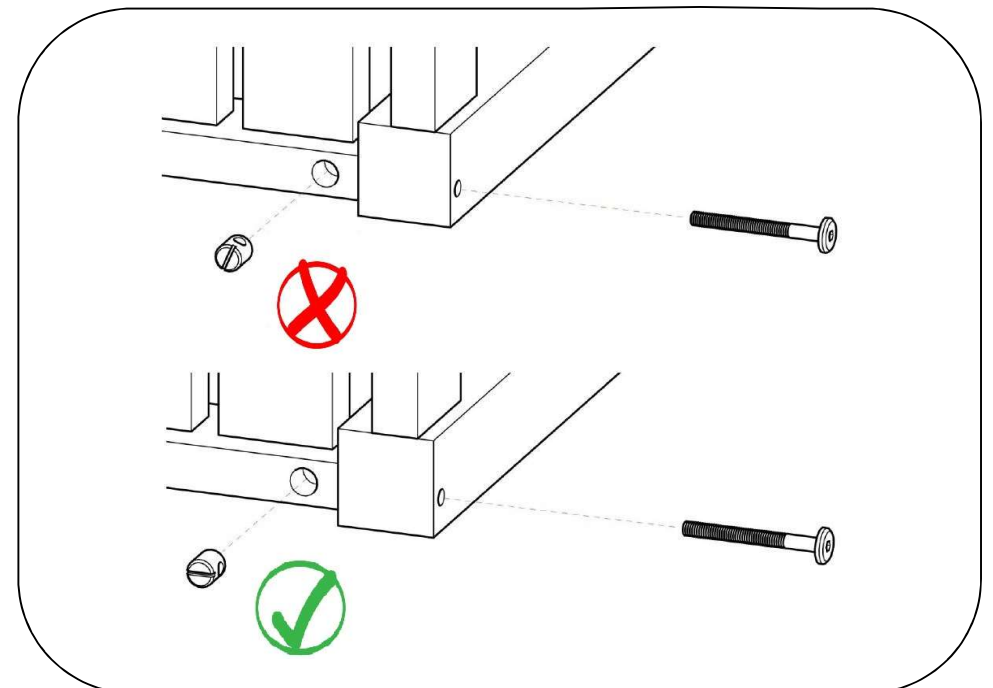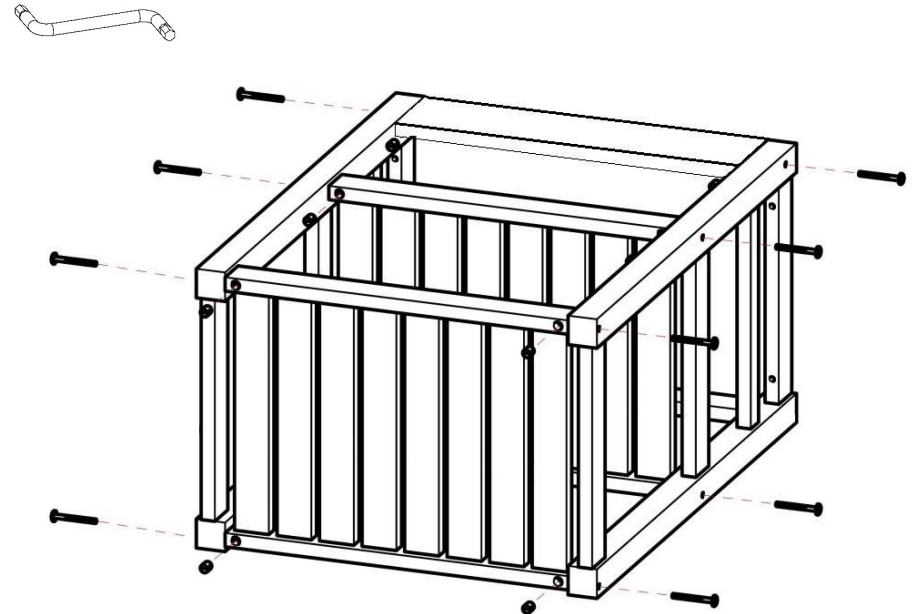


Step 5

Lay top panel (A) with predrilled holes upright on a smooth surface or on the carton. Attach the newly constructed frame to the top panel with screws (A1) x4 and tighten with Allen Key (H1).

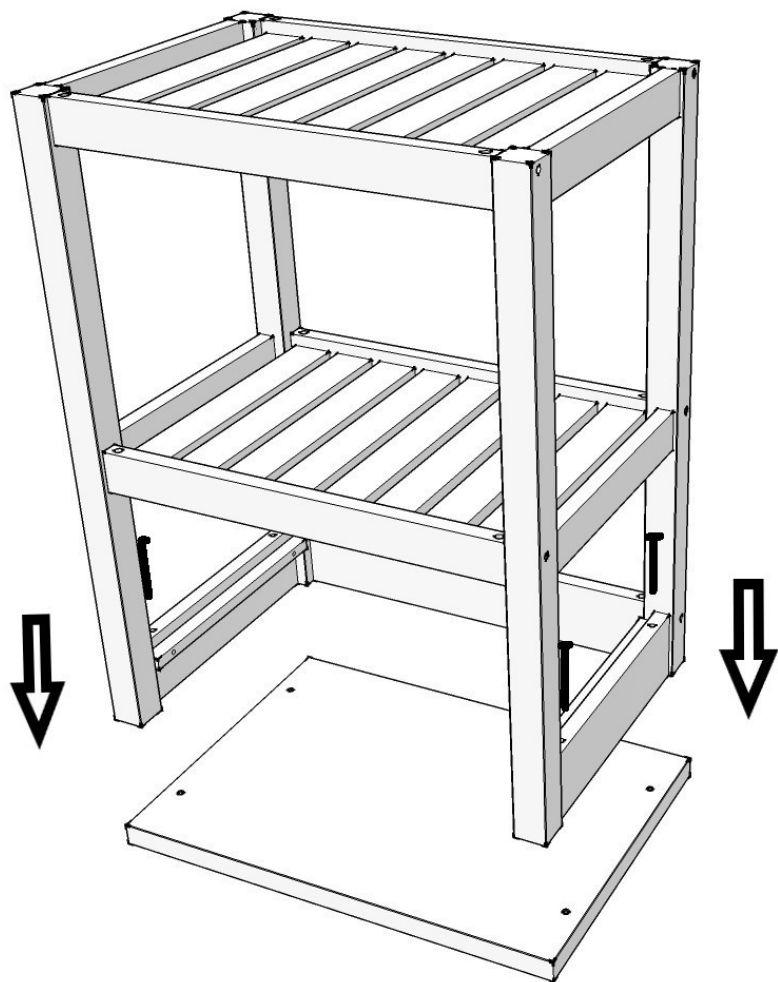


Step 6

Fix castors (J1) x2 on left side and castors with brake (I1) x2 on right side. To fix use screws (D1) x16 and cross head screwdriver. With help turn the trolley upright onto the castors.

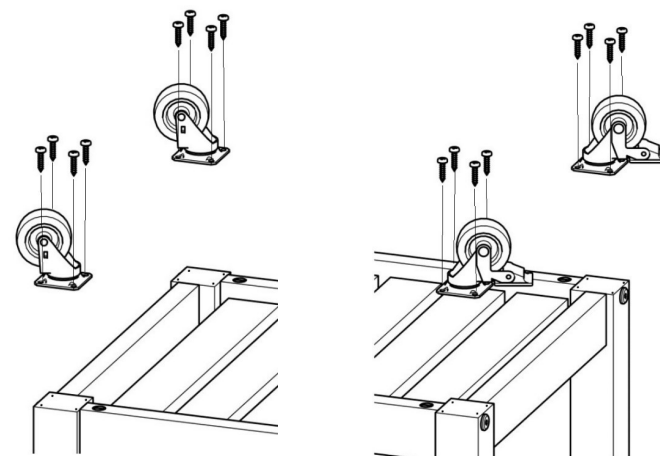


Step 7

With help turn the trolley upright onto the castors. Place handle bar (K1) on right or left side of the trolley. For fixing use screws (M1)x2 and handle spacers (L1)x2 as shown in the diagram. Tighten with care.

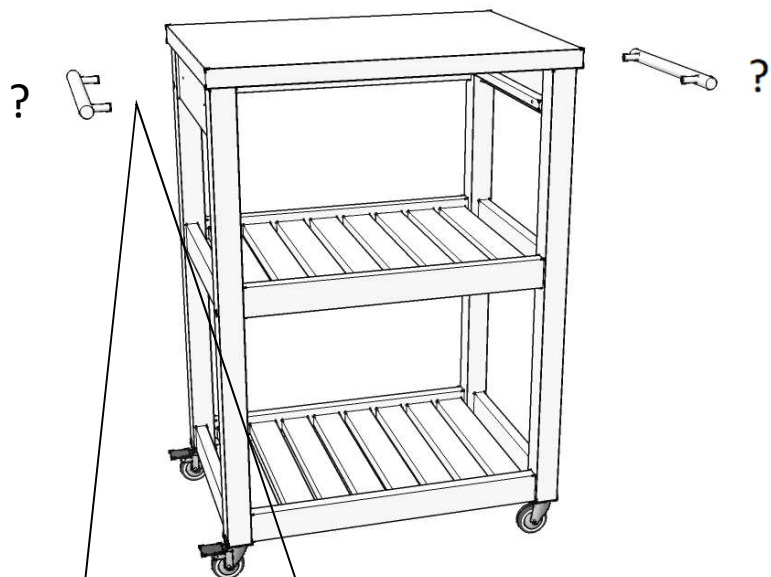



Step 8

Lay drawer front (F) with predrilled holes upright on a smooth surface or on the carton. Using screwdriver screw bolts (E1) x4 into predrilled holes

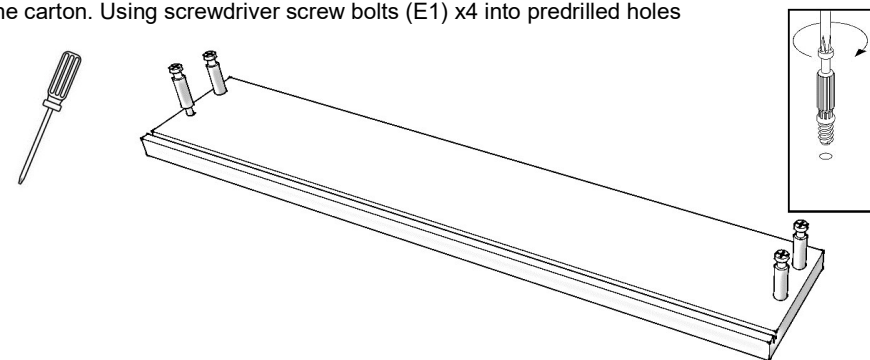


Step 9

Locate the LH drawer side (G) and RH drawer side as shown in the diagram. Note the position of the holes for the cam locks. Insert camlocks (F1) x4 into predrilled holes as shown in the diagram below. Tighten camlocks clockwise using screwdriver.

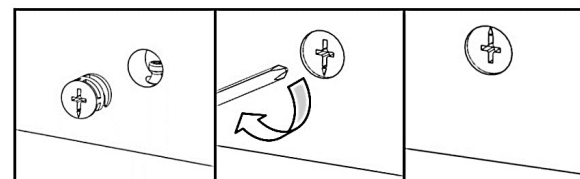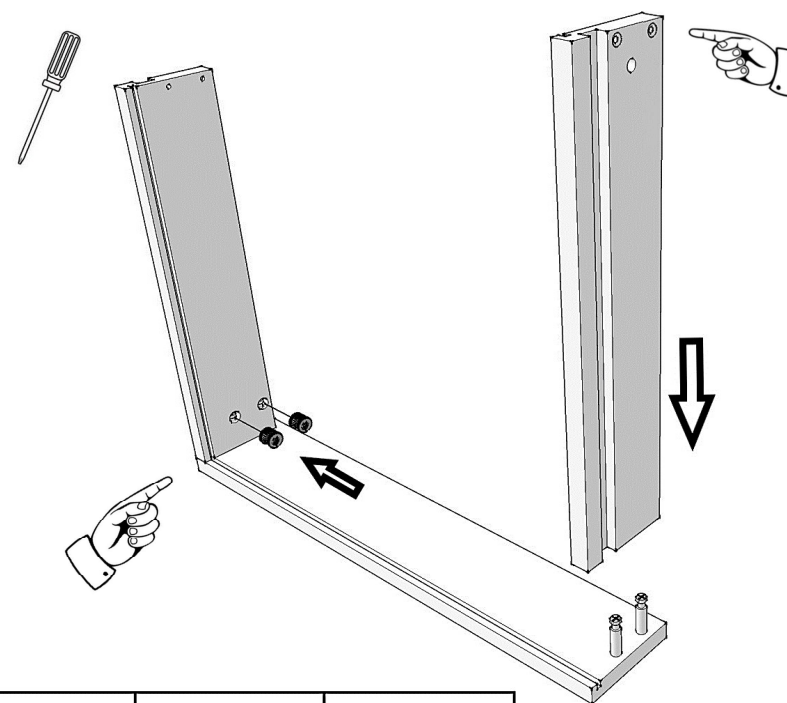


Step 10

Carefully slide the drawer bottom (I) into the small grooves on drawer sides and drawer front. Make sure that the bottom is correctly oriented.

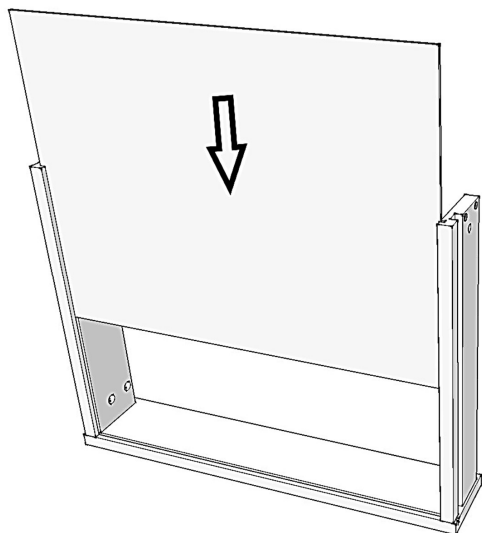


Step 11

Locate the drawer back (J) onto the drawer sides.

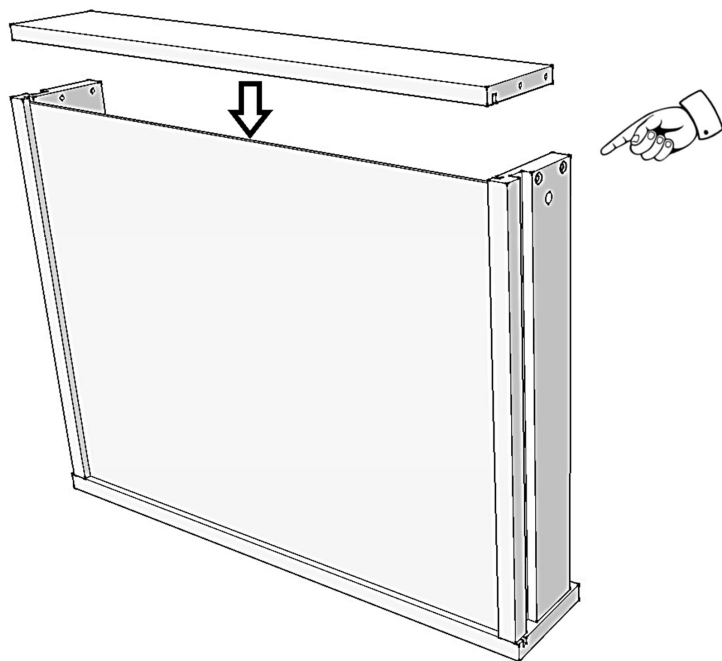

Step 12

Using screwdriver fix the drawer back (J) with screws (G1) x4

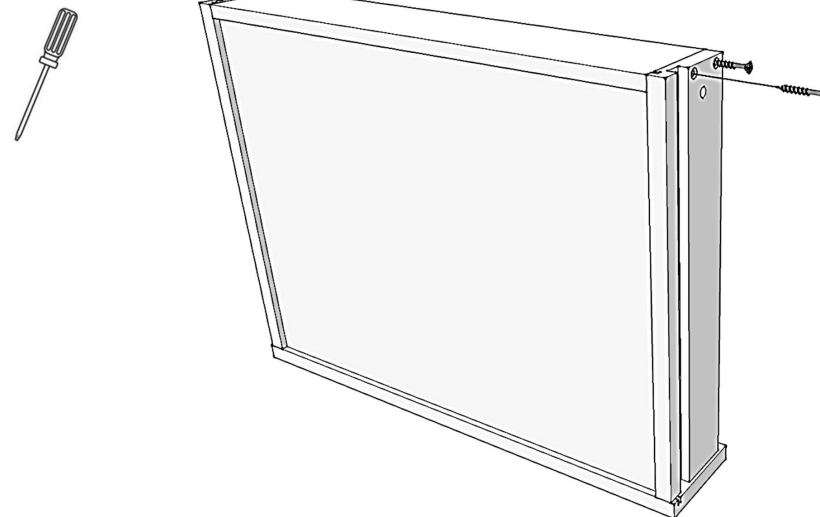


Step 13

Insert drawer compartment to assembled trolley construction. Opposite of handle bar fill two holes with (O1)x2 small wooden caps.



Step 14

Open the drawer to 2/3. Secure the drawer from falling out with wooden dowels (N1)x2. Assembly is now complete.

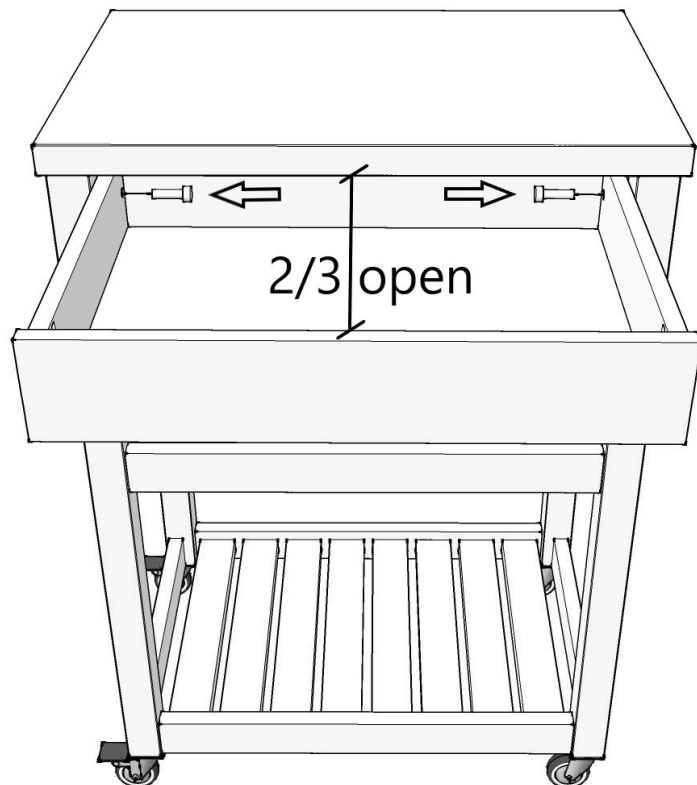

Care instructions

Wood furniture

Wood displays different grain patterns depending on which way they cut, these are just characteristics of the natural beauty of the wood. Some furniture is also deliberately aged and rustic.

Over time surfaces will change colour and mellow over. New furniture will initially vary in shade from

items that have been previously purchased.

This trolley should be cleaned using a soft damp cloth and dried immediately.

Do not use a very wet cloth or allow any liquid to contact with the trolley for a long period of time as

this can permanently damage the surface especially any hot water.

Do not use any abrasive cleaner or harsh detergent as this can damage the surface of the trolley.

Do not drag any object across the trolley as this can cause permanent damage.

Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next

to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of

humidity caused by central heating can cause damage such as warping.

Warnings!

The fittings pack contains small items which should be kept away from young children.

Never drag furniture when moving it, always lift it.

Periodically check all fittings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed.

Assembly should be carried out by a competent person.

No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

Please retain this information leaflet for future reference **Warnings!**

John Lewis Partnership
171 Victoria Street
London SW1E 5NN
Johnlewis.com