

SLIM SOFT CLOSE TOILET SEAT USER GUIDE

Care instructions After a few days check that the fixings are still tight. Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Never over rotate the seat open when it is removed from the WC as this can cause damage to the hinges.

Do not force down the seat ring or lid as this may compromise the performance of the soft close hinges.

Cleaning instruction Clean surfaces with a soft damp cloth and mild soap solution. Do not scrub or scour. Do not use abrasive cleaning agents.

When using corrosive or chlorine-based cleaners for the toilet bowl, ensure that these do not come into contact with the seat. Keep the seat and cover in an upright position until all cleaner has been flushed away. Failure to do so can lead to discolouration of surfaces or rusting of metal parts which will not be covered by the guarantee.

Anti-microbial finish

- a) An active substance has been incorporated in this product which helps prevent the growth of bacteria, reduce odour and promote hygiene. The active substance is Silver Zinc Zeolite.
- b) This product incorporates biocidal products
- c) This product demonstrates antimicrobial efficacy


Guarantee This seat is guaranteed for 5 years; this is in addition to your statutory rights.

When claiming:

- Proof of purchase is required.
- We will either replace the faulty part or the complete unit as appropriate.
- We reserve the right to use alternative, similar materials, where the original is no longer available.
- We will replace it with the same model or, if this is no longer available, substitute an equivalent specification or value.

This guarantee does not cover:


- If there is evidence or product abuse, misuse or use in a non-domestic environment.
- If the product has not been properly maintained in accordance with care and cleaning instructions.
- If the product has been exported outside of Great Britain and Northern Ireland.

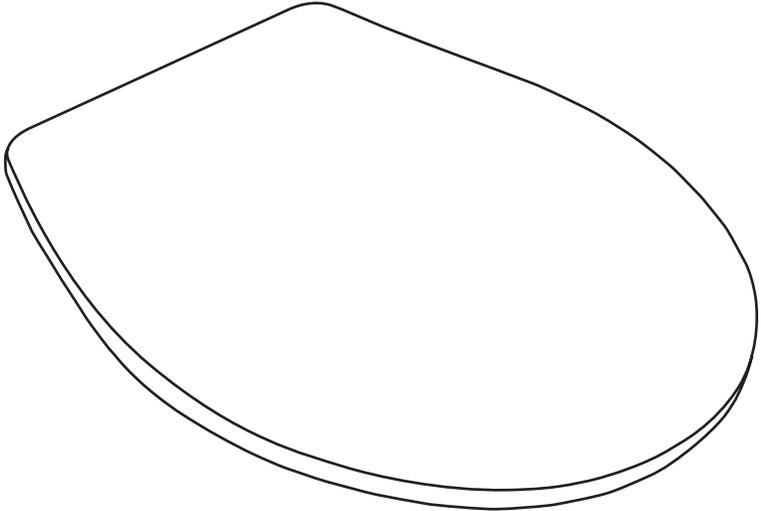

Getting started

Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product. It is recommended that this product should only be installed by persons competent in DIY.

If you are not the end user, please pass these instructions on to the owner of the product. Before removing the seat from the protective film, please check that it is suitable using the measurements on the diagram to below.

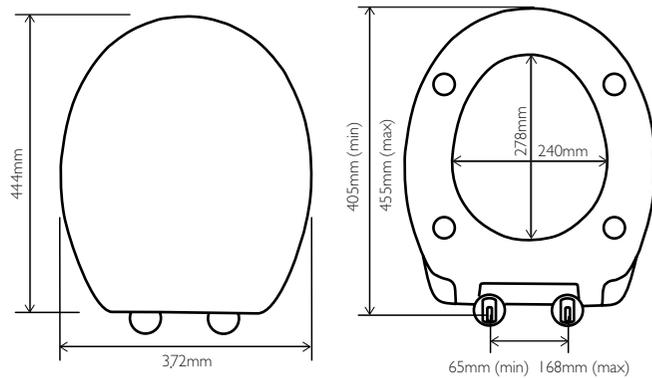

To install this toilet seat you will need the fixing pack (provided) and a phillips head screw driver. Do not use a battery driver or drill to assemble the toilet seat to the WC.

Warnings!

Keep fittings away from children - small parts are a choking hazard

Do not stand on the lid or ring of your toilet seat.

Parts list


Please check the pack contents before installing this product. A full checklist of components is given in this leaflet. If any components are missing, please contact us on 03456 050 144.

| Ref. | Parts | Name | Qty |
|----------|-------|---------------|-----|
| A | | Toilet seat | 1 |
| B | | Hinge anchor | 2 |
| C | | Anchor washer | 1 |
| D | | Metal washer | 2 |

| Ref. | Parts | Name | Qty |
|----------|-------|-----------------|-----|
| E | | Fixing bolt | 2 |
| F | | Cover plate | 2 |
| G | | Pan hole insert | 2 |


Adjustment

Maximum adjustment of the pin position is achieved by rotating the hinge anchor around the screw (adjustment A). Further fine adjustment of the pin position can be achieved by sliding the screw in slot of the hinge anchor (adjustment B).

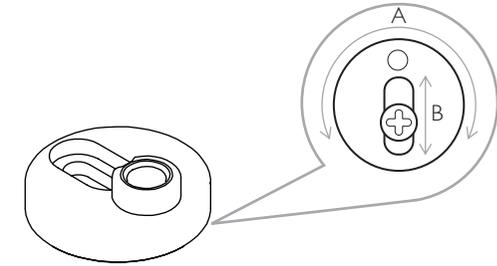

Assembly

Assemble the components as shown. Place the top-fix inserts into the fixing holes in the toilet pan. Insert the screws within the hinge anchors and rubber seals and begin to tighten the screws until they are loosely secured, to allow for adjustment of the seat on the pan (as shown above).

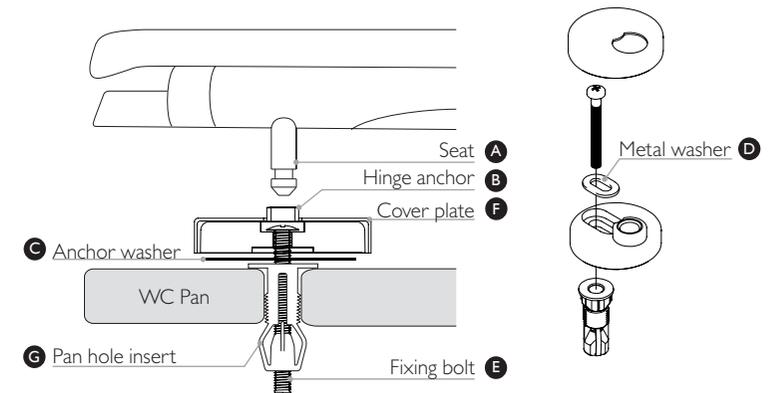

Align and insert the pins into the seat hinge sockets and firmly press down until you hear them 'click' into position. Adjust the hinge anchors to make sure that the seat lines up with the edges of the toilet pan. When you are satisfied the seat is in the correct position, remove the seat from the hinge anchors and fully tighten the screw in the top fix insert. Place the cover plates over the hinge anchors. Replace the seat and click into position.

